

6100, 6500, 6600 Self-Propelled Sprayers

For complete service information also see:

**3029, 4039, 4045,
6059 and 6068 Engines CTM8**

Alternators and Starting Motors CTM77

**John Deere Des Moines Works
TM1511 (05DEC97)**

LITHO IN U.S.A.
ENGLISH

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Contents

SECTION 10—GENERAL INFORMATION

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Fuels and Lubricants

SECTION 20—ENGINE REPAIR

- Group 05—Remove and Install Engine
- Group 10—Cooling System

SECTION 30—FUEL AND AIR SYSTEMS

- Group 05—Air Intake and Exhaust
- Group 10—Diesel Fuel System

SECTION 40—ELECTRICAL REPAIR

- Group 05—Battery
- Group 10—Starting System
- Group 15—Charging System
- Group 20—Engine Electrical Components
- Group 25—Lights, Instruments, and Accessory Circuit Repair
- Group 30—Connector Repair
- Group 35—Machine Monitor System
- Group 40—Solution Control/Monitor System
- Group 45—Solution Pump Electric Clutch
- Group 50—Retractable Ladder

SECTION 50—POWER TRAIN REPAIR

- Group 05—Remove and Install Hydrostatic Components
- Group 10—Hydrostatic Drive Repair
- Group 15—Power Wheel Repair

SECTION 60—STEERING AND BRAKES

- Group 05—Remove and Install Steering Components
- Group 10—Steering Column Repair
- Group 15—Steering Valve Repair
- Group 20—Steering Motor—Single Wheel
- Group 25—Steering Cylinder—Wide Axle
- Group 30—Brake System Repair
- Group 35—Front Wheel and Axle

SECTION 70—HYDRAULIC SYSTEM

- Group 05—Hydraulic Pump
- Group 10—Hydraulic Valves
- Group 15—Hydraulic Cylinders
- Group 20—Hydraulic Filter/Manifold
- Group 25—Oil Cooler
- Group 30—Hydraulic Reservoir

SECTION 80—SOLUTION SPRAY SYSTEM

- Group 05—Nozzle Repair
- Group 10—Solution Tank
- Group 15—Solution Pump
- Group 20—Solution Control Valves

SECTION 90—OPERATOR'S STATION REPAIR

- Group 05—R-12 Air Conditioning System Service
- Group 06—R134a Air Conditioning System Service
- Group 10—R-12 Air Conditioning System Repair
- Group 11—R134a Air Conditioning System Repair
- Group 15—Air Intake (Pressurizer) System Repair
- Group 20—Seat Repair
- Group 25—Operator's Cab
- Group 30—Controls
- Group 35—Cab Heater (If Equipped)

SECTION 220—ENGINE OPERATION AND TESTS

- Group 10—Diagnostic Information

SECTION 230—FUEL/AIR OPERATION AND TESTS

- Group 10—Diagnostic Information

SECTION 240—ELECTRICAL SYSTEM OPERATION, TESTS AND ADJUSTMENTS

- Group 01—Theory of Operation
- Group 02—Electrical Diagrams
- Group 03—Diagnostic Information
- Group 05—Charging System
- Group 10—Starting System
- Group 15—Lights and Accessories
- Group 16—Fuses and Relays

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1511-19-05DEC97

COPYRIGHT© 1997
DEERE & COMPANY
Moline, Illinois

All rights reserved

A John Deere ILLUSTRATION® Manual
Previous Editions

Copyright 1996, 1994, 1993, 1992 Deere & Company

- Group 20—Machine Monitor System
- Group 24—Agitation Solenoid Valve System—6600
- Group 25—Solution Control System without (ERC)
- Group 26—Electronic Rate Control (ERC) Solution System
- Group 30—Air Conditioning System
- Group 31—Pressurizer/Blower System
- Group 35—Fuel Control System
- Group 40—Tread Adjust System (If Equipped)
- Group 45—Rear Fold Boom Control System
- Group 46—Front Fold Boom Control System
- Group 50—Ground Speed Control System
- Group 55—Auxiliary Hydraulics System (If Equipped)
- Group 60—Windshield Wiper System
- Group 65—Retractable Ladder System—6500, 6600
- Group 70—Air Seat System (If Equipped)

SECTION 250—POWER TRAIN OPERATION AND TESTS

- Group 05—System Operational Checks
- Group 10—Diagnostic Information
- Group 15—System Tests
- Group 20—System Adjustments
- Group 25—Theory of Operation

SECTION 260—STEERING/BRAKES OPERATION, TESTS AND ADJUSTMENTS

- Group 05—System Operational Checks
- Group 10—Diagnostic Information
- Group 15—System Tests
- Group 20—Adjustments
- Group 25—Theory of Operation

SECTION 270—HYDRAULIC SYSTEM OPERATION, TESTS AND ADJUSTMENTS

- Group 05—System Operational Checks
- Group 10—Diagnostic Information
- Group 15—System Tests
- Group 20—System Adjustments
- Group 25—Theory of Operation

SECTION 280—SOLUTION SYSTEM OPERATION, TESTS AND ADJUSTMENTS

- Group 05—System Operational Checks
- Group 10—Diagnostic Information
- Group 15—Tests
- Group 20—Adjustments
- Group 25—Theory of Operation

SECTION 281—FOAM MARKER SYSTEM OPERATION, TESTS AND ADJUSTMENTS

- Group 05—System Operational Checks
- Group 10—Diagnostic Information
- Group 15—Tests
- Group 25—Theory of Operation

SECTION 290—OPERATOR'S STATION OPERATION, TESTS AND ADJUSTMENTS

- Group 05—Operator's Station Operational Checks
- Group 10—Operator's Station Diagnostic Information
- Group 15—Operator's Station Tests
- Group 20—Adjustments
- Group 25—Operator Station Theory of Operation
- Group 30—Heater Theory of Operation

SECTION 299—DEALER FABRICATED TOOLS

- Group 00—Dealer Fabricated Tools

Index

Section 10 GENERAL INFORMATION

Contents

Page

Group 05—Safety 10-05-1

Group 10—General Specifications

Machine Specifications

6100 10-10-1

6500 10-10-6

6600 10-10-11

Dimensions

6100 10-10-16

6500 Single Wheel 10-10-18

6500 Wide Axle 10-10-20

6600 10-10-21

Metric Cap Screw Torque Values 10-10-24

Unified Inch Cap Screw Torque Values . . 10-10-25

Flat Face O-Ring Seal Fitting Torque

Chart 10-10-26

Identification Numbers 10-10-27

Group 15—Fuels and Lubricants

Diesel Fuel 10-15-1

Diesel Engine Oil 10-15-2

Hydrostatic and Hydraulic Oils 10-15-3

Final Drives 10-15-4

Extreme Pressure Grease 10-15-4

Hydraulic Brake Fluid 10-15-5

Lubricant Storage 10-15-5

 
Alternative and Synthetic Lubricants 10-15-5

Engine Coolant 10-15-6

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

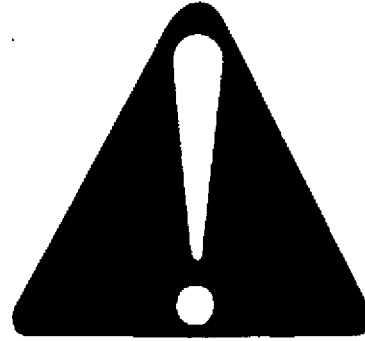

DX,ALERT -19-03MAR93

10
05
1
-UN-07DEC88
T81389

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

-19-30SEP88
TS187

 
FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

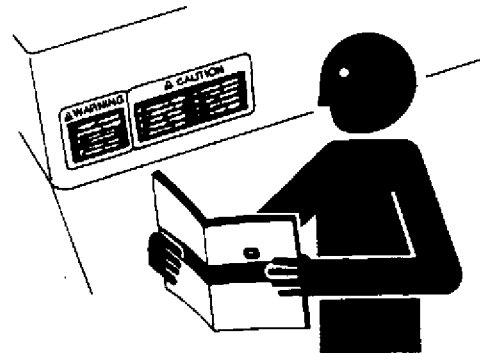

DX,READ -19-03MAR93

-UN-23AUG88
TS201

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

-UN-23AUG88

TS227

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



DX,SPARKS -19-03MAR93

-UN-23AUG88


TS204

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

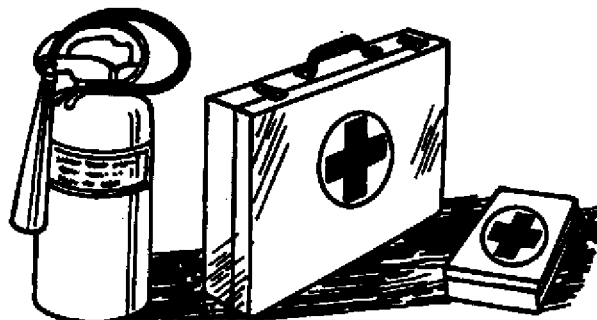

DX,FIRE2 -19-03MAR93

-UN-23AUG88

TS291

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

 
1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

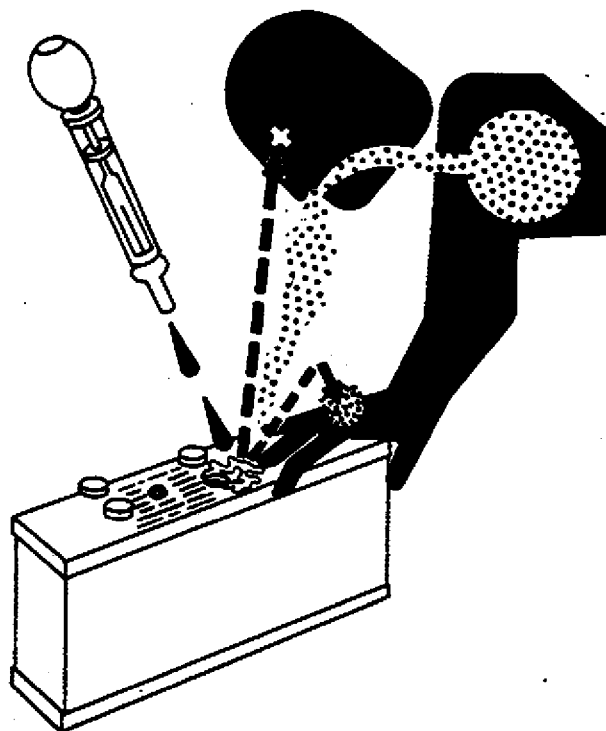

DX,POISON -19-21APR93

TS203 -UN-23AUG88

10
05
3

HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)



TS1132 -JUN-26NOV90

DX,MSDS,NA -19-03MAR93

SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



TS281 -JUN-23AUG88

DX,RCAP -19-04JUN90

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

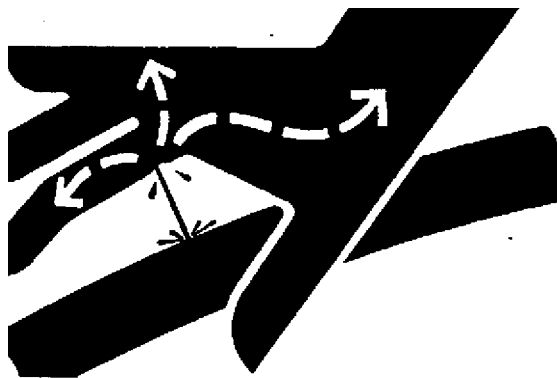

-UN-23AUG88

 
X9811

DX,FLUID -19-03MAR93

PARK MACHINE SAFELY

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

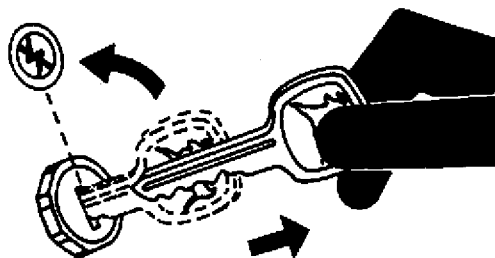

-UN-24MAY89


TS230

DX,PARK -19-04JUN90

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

 Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

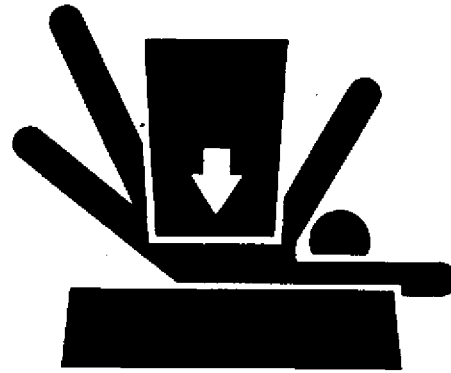

DX,LOWER -19-04JUN90

TS229 -JUN-23AUG88

 
WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

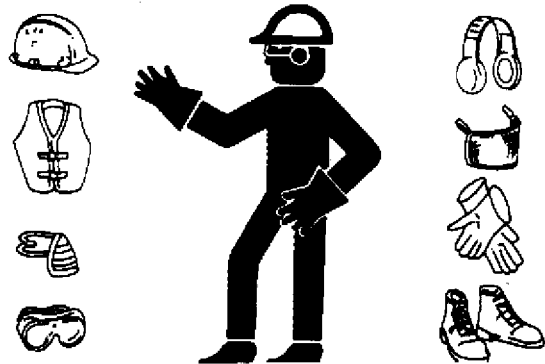


DX,WEAR -19-10SEP90

TS206 -JUN-23AUG88

SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

 Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

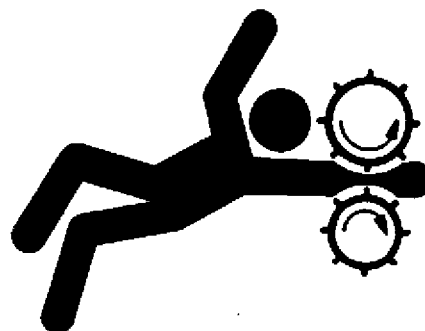


DX,LOOSE -19-04JUN90

TS228 -JUN-23AUG88

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

 If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

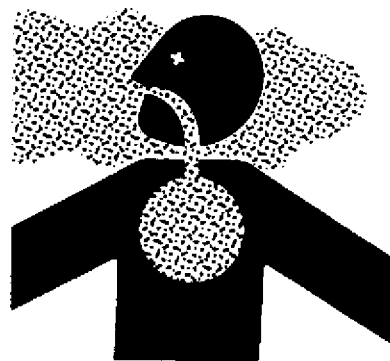


DX,AIR -19-04JUN90

TS220 -JUN-23AUG88

WORK IN CLEAN AREA

Before starting a job:

 - Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

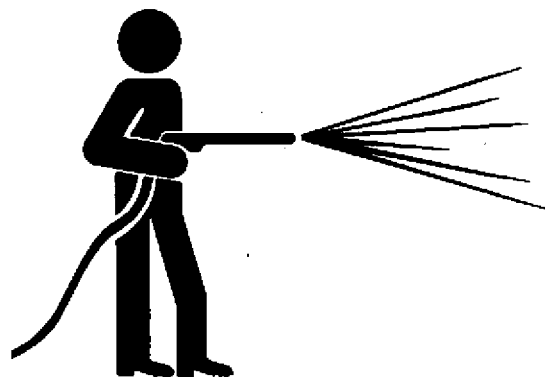

DX,CLEAN -19-04JUN90

T6642EJ -JUN-18OCT88

REMOVE PAINT BEFORE WELDING OR HEATING

 
Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

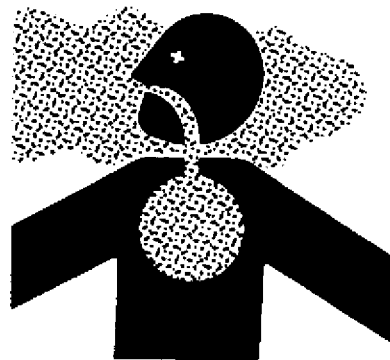

DX,PAINT -19-03MAR93

TS220 -JUN-23AUG88

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS963 -JUN-15MAY90

ILLUMINATE WORK AREA SAFELY

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.




DX,LIGHT -19-04JUN90

TS223 -JUN-23AUG88

REPLACE SAFETY SIGNS

 Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

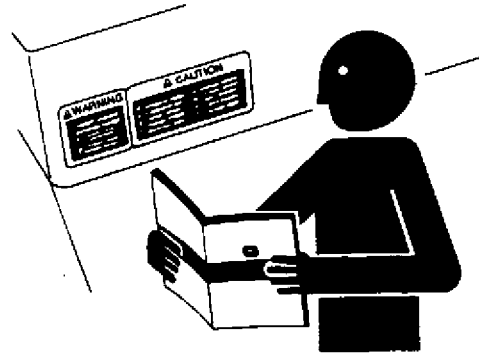


DX,SIGNS1 -19-04JUN90

TS201 -JUN-23AUG88

USE PROPER LIFTING EQUIPMENT

Lifting heavy components incorrectly can cause severe injury or machine damage.

 Follow recommended procedure for removal and installation of components in the manual.

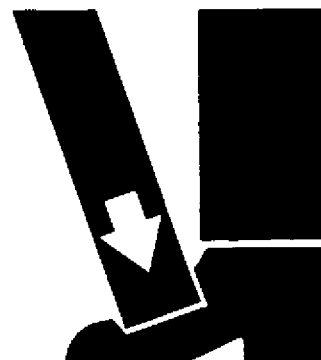

DX,LIFT -19-04JUN90

TS226 -JUN-23AUG88

SERVICE TIRES SAFELY

 
Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

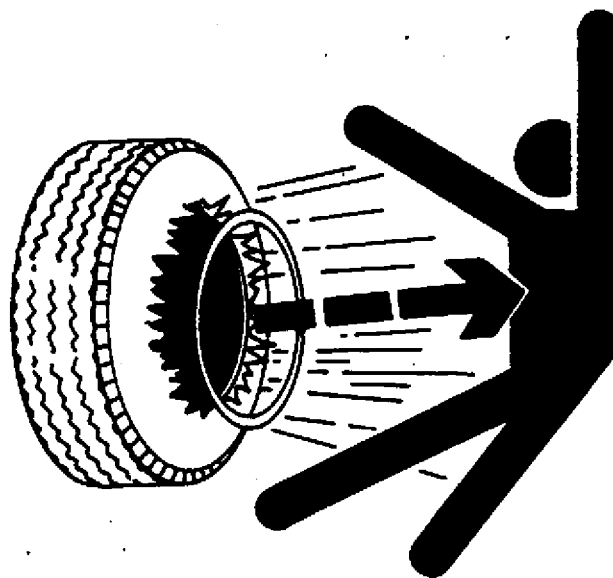

-UN-23AUG88

TS211

DX,RIM

-19-24AUG90

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



-UN-23AUG88

TS218

DX,SERV

-19-03MAR93

USE PROPER TOOLS

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



TS779 -JUN-08NOV89

DX,REPAIR -19-04JUN90

DISPOSE OF WASTE PROPERLY

 
Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

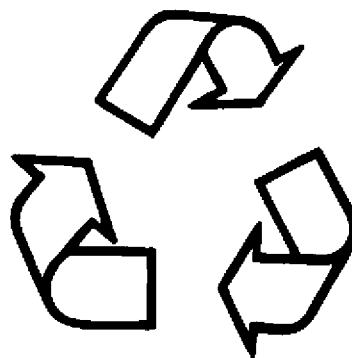

TS1133 -JUN-26NOV90

DX,DRAIN -19-03MAR93