

3210, 3310, 3410, 3210X, 3310X and 3410X Tractors

TECHNICAL MANUAL Tractors 3210, 3310, 3410, 3210X, 3310X and 3410X Repair and Operation and Tests

TM4663 02FEB02 (ENGLISCH)

John Deere Werke Mannheim

Printed in Germany

Introduction

IMPORTANT NOTE

IMPORTANT: Before using this manual, read **Groups 10, 20, 30, 35 and 40 in Section 10. These Groups include very important information on the John Deere versions of these tractors.**

IMPORTANT: Where corresponding statements are made elsewhere in this manual, **Groups 10, 20, 30, 35 and 40 in Section 10 take precedence.**

Model Number Comparison Chart

See below for the correct John Deere model numbers.

- CERES 325 corresponds to 3210
- CERES 335 corresponds to 3310
- CERES 345 corresponds to 3410
- CERES 325X corresponds to 3210X
- CERES 335X corresponds to 3310X

- CERES 345X corresponds to 3410X

If any mention is made of the CERES 355(X) model, it has no relevance for any John Deere model.

Special Tool Numbers

When ordering a special tool mentioned in this Technical Manual, insert the capital letters **RT** in front of the number.

Example:

- number shown = 195068
- order number for this tool = RT195068

NOTE: Use European Microfiche Tool Catalogue (MTC4983, issue 10-01) to find information on the availability of these tools and to place orders.

OULXBER,000085A -19-22JAN02-1/1

Contents

10

SECTION 10—Annulation and Supplementation to this Publication

Group 05—Safety

Group 10—Safety Decals

Group 20—Fuel, Lubricants, Hydraulic Oil and
Coolant

Group 30—Specifications 3210X, 3310X and
3410X

Group 35—Specifications 3210, 3310, and 3410

Group 40—Serial Numbers

INDX

Annulation and Supplementation to this Publication

Contents

Page

Group 05—Safety10-05-1

Group 10—Safety Decals

Pictorial Safety Signs10-10-1
 Operator's Manual.....10-10-1
 Rockshaft Remote Control10-10-1
 Releasing the PTO Clutch.....10-10-2

Group 20—Fuel, Lubricants, Hydraulic Oil and Coolant

Fuel.....10-20-1
 Handling and Storing Diesel Fuel10-20-1
 Diesel Engine Break-In Oil10-20-2
 Diesel Engine Oil10-20-3
 Transmission and Hydraulic Oil.....10-20-4
 Front Wheel Drive Axle Oil10-20-5
 Brake Fluid10-20-5
 Grease10-20-6
 Oil Filters.....10-20-6
 Lubricant Storage10-20-7
 Alternative and Synthetic Lubricants10-20-7
 Mixing of Lubricants10-20-8
 Diesel Engine Coolant.....10-20-8

Group 30—Specifications 3210X, 3310X and 3410X

Engine.....10-30-1
 PTO Power Output10-30-2
 Transmission.....10-30-2
 Hydraulic System10-30-2
 Electrical System.....10-30-3
 Capacities10-30-3

Group 35—Specifications 3210, 3310, and 3410

Engine.....10-35-1
 PTO Power Output10-35-1
 Transmission.....10-35-2
 Hydraulic System10-35-2
 Electrical System.....10-35-2
 Capacities10-35-3

Group 40—Serial Numbers

Type Plates.....10-40-1
 Product Identification Number10-40-1
 Engine Serial Number.....10-40-1
 Cab Serial Number10-40-2
 Serial Number of Front-Wheel Drive Axle10-40-2

Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-29SEP98-1/1

TS1389 -UN-07DEC88

Understand Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93-1/1

TS187 -19-30SEP88

 
Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

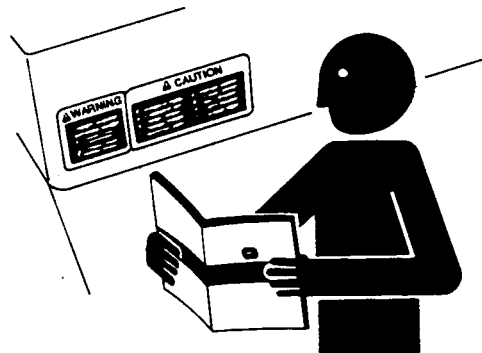

DX,READ -19-03MAR93-1/1

TS201 -UN-23AUG88

10
05
2

Mount and Dismount the Machine Safely

Always use the access steps and handrails when mounting and dismounting the tractor.

Ensure that the access steps and operator's station are kept clean at all times. This will help prevent accidents.



TS279 -UN-23AUG88

 
FD,HANDLE -19-01APR94-1/1

Prevent Machine Runaway

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

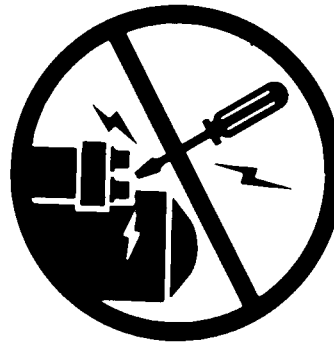

TS177 -UN-11JAN89

DX,BYPAS1 -19-29SEP98-1/1

 
Use Seat Belt Properly

Use a seat belt when you operate with a roll-over protective structure (ROPS) or cab to minimize chance of injury from an accident such as an overturn.

Do not use a seat belt if operating without a ROPS or cab.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage, such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.

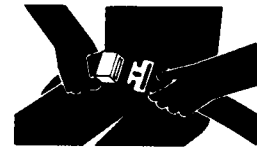

TS205 -UN-23AUG88

DX,ROPS1 -19-07JUL99-1/1

 
Work In Ventilated Area

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.


If you do not have an exhaust pipe extension, open the doors and get outside air into the area



Driving the Tractor Safely

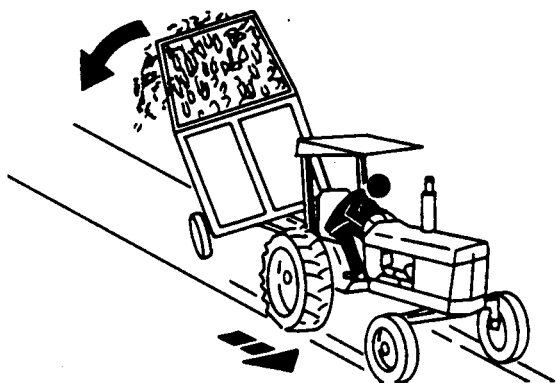

TS216 -JUN-23AUG88

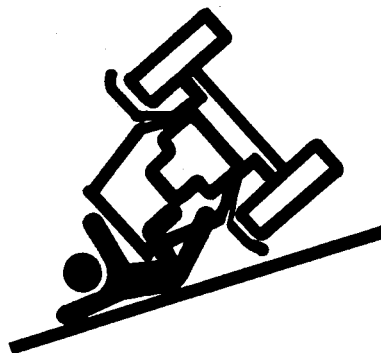 

RW13093 -JUN-07DEC88

Always check the road and general operating safety of the machine before using.

Operate tractor only when all guards are fitted and in their correct position.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility.

To limit the risks of overturning, set the tread width to the maximum suitable for the task. Comply with regulations restricting maximum width.

Make sure the tractor is ballasted properly for its intended task.

Always adapt your ground speed to meet the ground conditions. Avoid making sharp turns when driving up or down slopes or when driving across the slope. Do not attempt to turn the machine with the differential lock engaged. Reduce your ground speed when driving the tractor on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear. When driving down slopes, never depress the clutch and change gear; use the same gear you would use to drive up the slope. Never coast downhill.

When making turns with towed or mounted implements, always take into consideration the width and inertia of the implement.

Avoid holes, ditches and obstructions which may cause the tractor to tip, particularly on hillsides. Never drive near the edge of a gully or steep embankment — it might cave in!

Front-wheel drive greatly increases traction. This means that the tractor can be driven on steeper slopes, increasing the possibility of a tip over. Driving forward out of a ditch or up a steep slope could cause tractor to tip over to the rear. Therefore reverse out of these situations whenever possible.

Driving on Public Roads

It is vital to comply with road traffic regulations.

Before driving the tractor on a public road, make sure that the lights, turn signals and brake lights are functioning correctly. Never switch on the work lights while driving on public roads. The brake pedals must be coupled together. Never apply the differential lock when driving on a road.

When transporting mounted implement(s), raise the rockshaft. If the implement is equipped with road wheels, use them.

Towing Implements or Trailers

Attach implements and trailers to the tractor only using the prescribed drawbars or hitches. Attach trailers and implements correctly. Always ensure that trailers and implements cannot roll away. If trailer brakes are equipped, use them!

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

FD_DRIVE -19-02JUN94-2/2

Operating the Tractor Safely



TS213 -UN-23AUG88



TS276 -UN-23AUG88

Careless use of the tractor can result in unnecessary accidents. Be alert to hazards of tractor operation. Understand causes of accidents and take every precaution to avoid them. Most common accidents are caused from:

- Tractor roll-over
- Improper starting procedures
- Crushing and pinching during hitching
- Collisions with other motor vehicles
- Entanglement in PTO shafts
- Falling from tractor

Avoid accidents by taking the following precautions:

Put transmission in PARK before dismounting. Leaving transmission in gear with engine stopped will NOT prevent the tractor from moving.

Be sure everyone is clear of tractor and attached equipment before starting engine.

Never try to get on or off a moving tractor.

When tractor is left unattended, place in PARK, lower implements to the ground, stop the engine, and remove the key.

Never go near an operating PTO or an operating implement.

Always fasten your seat belt in a ROPS equipped tractor.

RX_HAZARD.S -19-20DEC95-1/1

 
10
05
6

Keep Riders Off Machine

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

On machines equipped with a passenger seat, one rider is permitted.

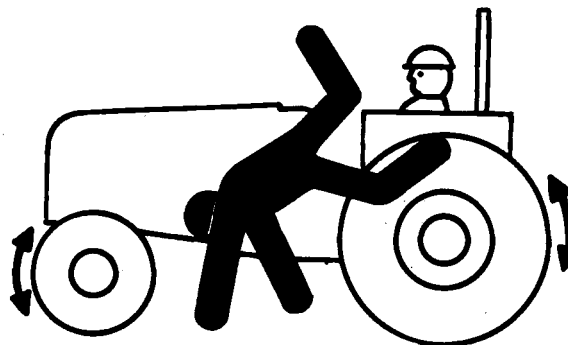

TS290 -UN-23AUG88

LX,OMITF 002146 -19-01FEB92-1/1

Parking and Leaving the Tractor

Lower mounted implement(s) or equipment to the ground before leaving the tractor.

When leaving the tractor and/or implements, shut off engine, engage range and gear shift levers as well as handbrake and parking lock, remove main switch key and lock the operator's cab (if equipped). Put chock blocks in position.

Never leave tractor unattended while the engine is still running.

Never leave the operator's platform/cab when driving.



LX002510 -UN-17JAN95

LX,PARK -19-07DEC96-1/1

Handle Fuel Safely—Avoid Fires

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



TS202 -UN-23AUG88

 
DX,FIRE1 -19-03MAR93-1/1

Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

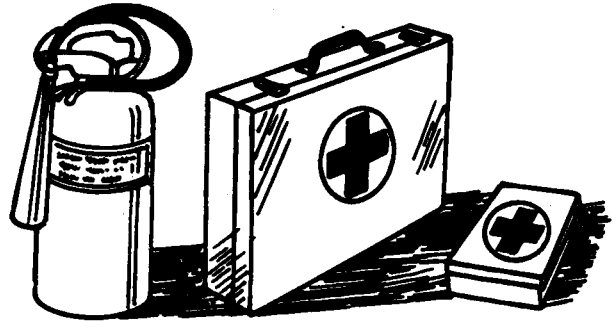

TS291 -UN-23AUG88

DX,FIRE2 -19-03MAR93-1/1

 
Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

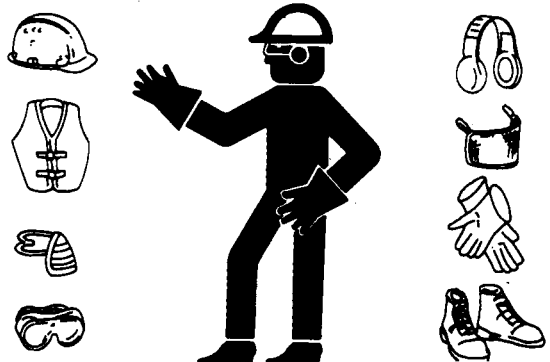

TS206 -UN-23AUG88

 
DX,WEAR -19-10SEP90-1/1

Avoid Contact with Pesticides

This enclosed cab does not protect against inhaling harmful pesticides. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

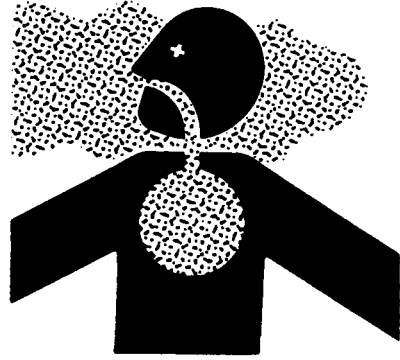

TS220 -JUN-23AUG88



TS272 -JUN-23AUG88

DX,CABS -19-03MAR93-1/1

Stay Clear of Rotating Drivelines

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




TS1644 -JUN-22AUG95

DX,PTO -19-12SEP95-1/1

Use Safety Lights and Devices

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

 Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

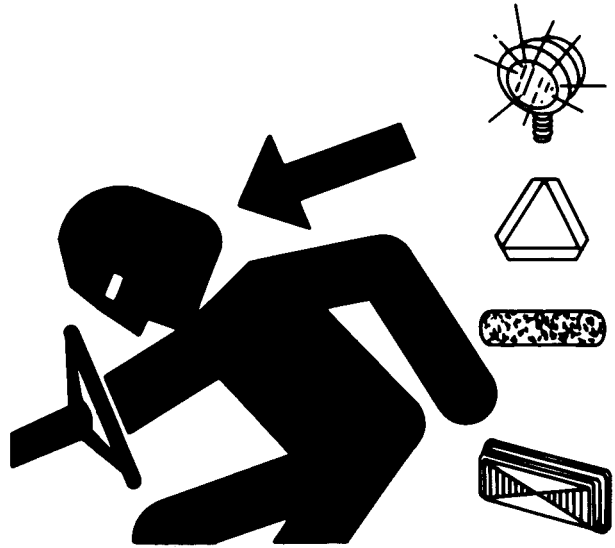


TSS951 -UN-12APR90

DX,FLASH -19-07JUL99-1/1

Safely Transporting the Tractor

A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier.

 Never tow the tractor at a speed greater than 10 km/h (6 mph). An operator must steer and brake the tractor under tow.

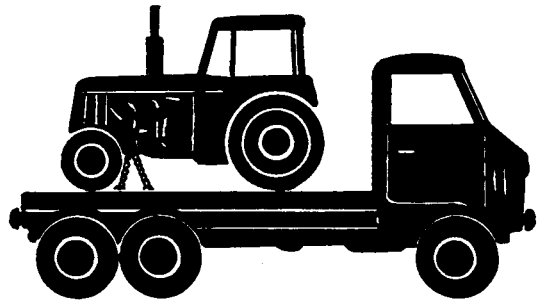

RW13090 -UN-07DEC88

OU12401,0000543 -19-01DEC00-1/1

10
05
10

 
Freeing a Mired Machine

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Do not hitch to the front pushbar attachment point. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

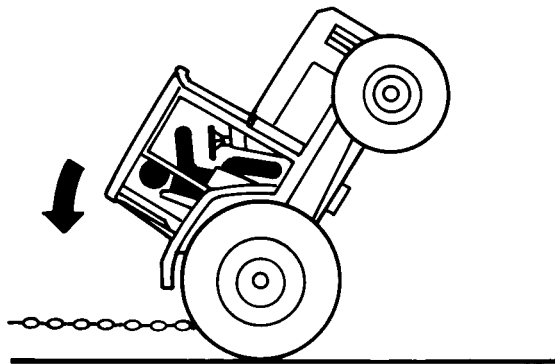

TS1645 -UN-15SEP95



TS263 -UN-23AUG88

DX,MIRED -19-07JUL99-1/1

Practice Safe Maintenance

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.



TS218 -UN-23AUG88

DX,SERV -19-17FEB99-1/1

10
05
12

Remove Paint Before Welding or Heating

Avoid potentially toxic fumes and dust.

 
Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 76 mm (3 in.) from area to be affected by heating.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do all work in an area that is ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

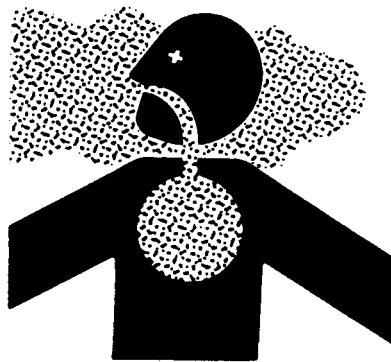

TS220 -UN-23AUG88

DX,PAINT -19-22OCT99-1/1

Avoid Heating Near Pressurized Fluid Lines

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



TS953 -UN-15MAY90

DX,TORCH -19-03MAR93-1/1

 
Avoid High-Pressure Fluids

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

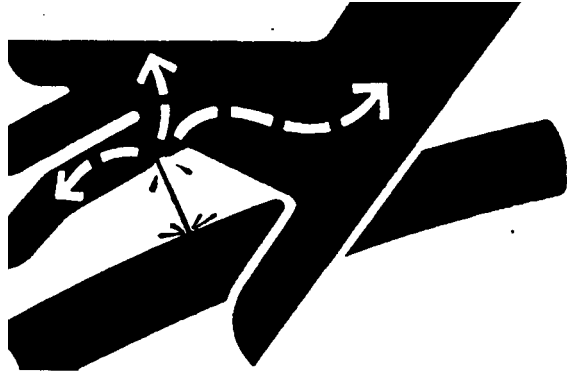

X9811 -UN-23AUG88

DX,FLUID -19-03MAR93-1/1

Store Attachments Safely

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



TS219 -UN-23AUG88

DX,STORE -19-03MAR93-1/1

Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to relieve pressure before removing completely.

Add coolant only when the engine is shut off.




TS281 -UN-23AUG88

LX,RCAP -19-01SEP95-1/1

Retighten Wheel Nuts

 Retighten machine wheel nuts at the intervals specified in section "Break-In Period" and "Service".

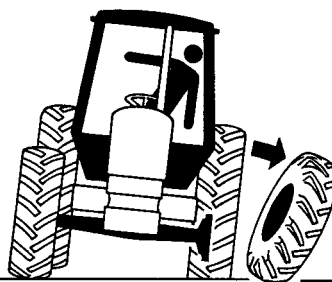

L 124 516

L124516 -UN-03JAN95

LX,WHEEL1 -19-01MAY91-1/1

Prevent Acid Burns

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

 
1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

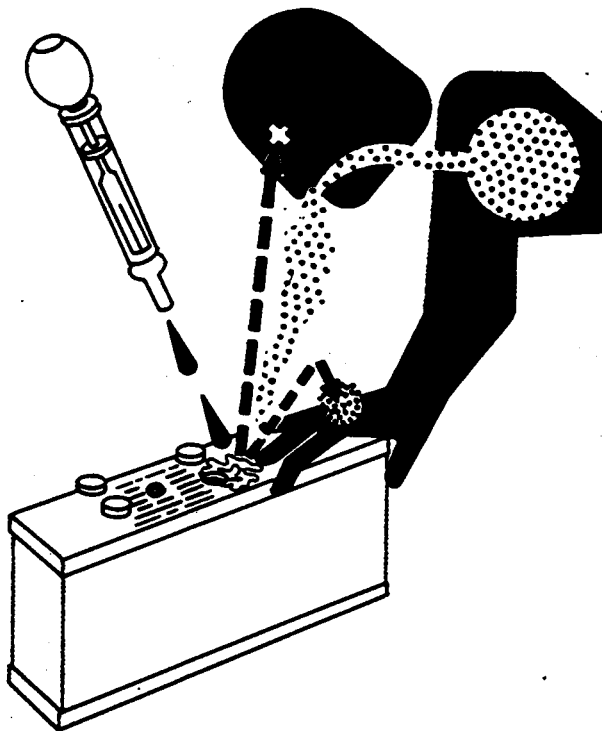

TS203 -UN-23AUG88

 
DX,POISON -19-21APR93-1/1

Support Machine Properly

Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.

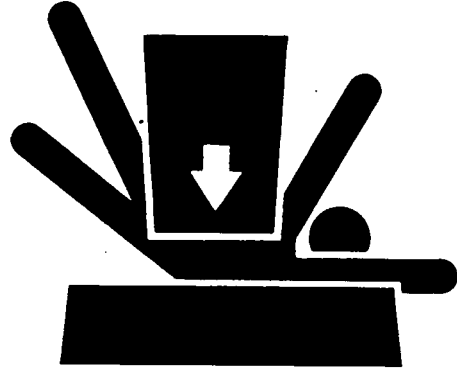


TS229 -UN-23AUG88

DX,LOWER -19-24FEB00-1/1

Service Front-Wheel Drive Tractor Safely

 When servicing front-wheel drive tractor with the rear wheels supported off the ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission/hydraulic system pressure will engage the front driving wheels, pulling the rear wheels off the support if front wheels are not raised. Under these conditions, front drive wheels can engage even with switch in disengaged position.

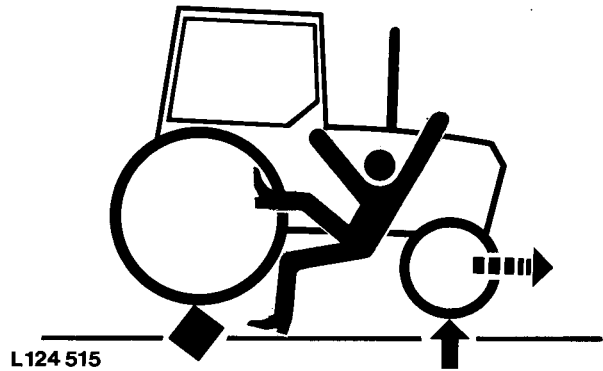

L124 515

L124515 -UN-06AUG94

LX,MFWD2 -19-01MAY91-1/1

10
05
16

Service Tires Safely

 
Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

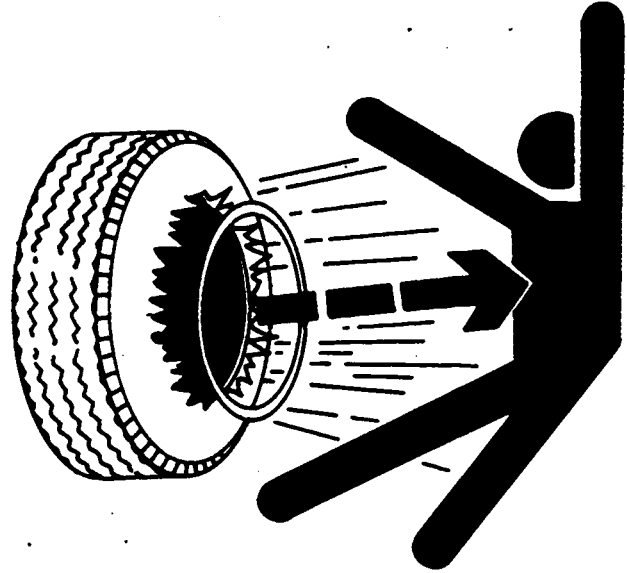

TS211 -UN-23AUG88

DX,RIM -19-24AUG90-1/1

Dispose of Waste Properly

 
Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

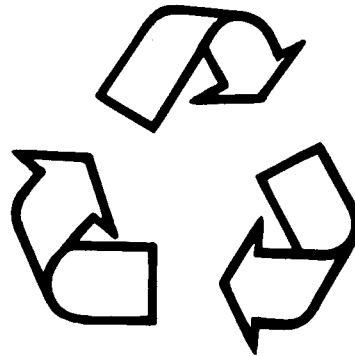


TS1133 -UN-26NOV90

DX,DRAIN -19-03MAR93-1/1

Avoid Eye Contact With Radar

 Radar ground speed sensor emits a very low intensity microwave signal. It will not cause any ill effects during normal use. Although intensity is low, DO NOT look directly into face of sensor while in operation, to avoid any possible eye damage.

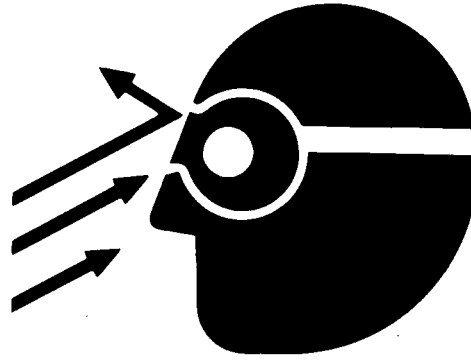

10
05
17

TS266 -JUN-23AUG88

RX,SAFTY,RADAR1 -19-21SEP92-1/1

Pictorial Safety Signs

At several important places of this machine safety signs are affixed intended to signify potential danger. The hazard is identified by a pictorial in a warning triangle. An adjacent pictorial provides information how to avoid personal injury. These safety signs, their placement on the machine and a brief explanatory text are shown below.




TS231 -19-07OCT88

FD_LABEL 001338 -19-01SEP98-1/1

Operator's Manual

 This operator's manual contains important information necessary for safe machine operation. Carefully observe all safety rules to avoid accidents.

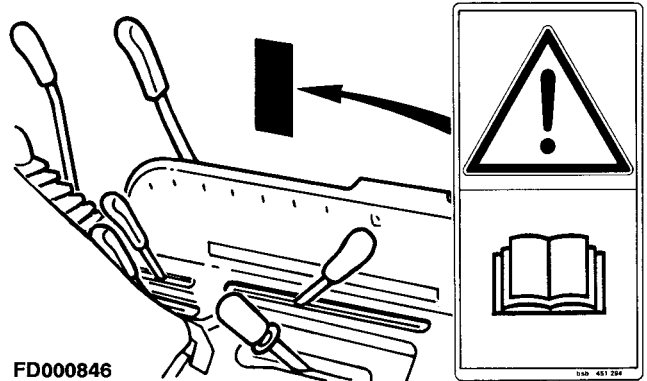


FD000846

FD000846 -UN-17FEB95

FDXLABEL 000369 -19-15FEB95-1/1

Rockshaft Remote Control

 Stay clear of three-point hitch lift range when operating the rockshaft by remote control.

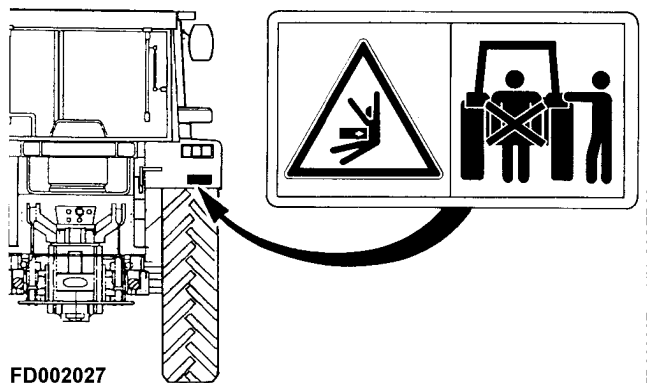

FD002027

FD002027 -UN-30SEP98

FD_LABEL 001290 -19-01SEP98-1/1

 
10
10
2

Releasing the PTO Clutch

When the PTO is in operation, it can be disengaged for a short while (not longer than 30 seconds) simply by putting the speed selector to “neutral” and moving the control lever.

If you want to disengage the PTO for a longer time, put the speed selector switch to “neutral” and move the control lever to the “engaged” position.

See also “Operating the Rear PTO”.

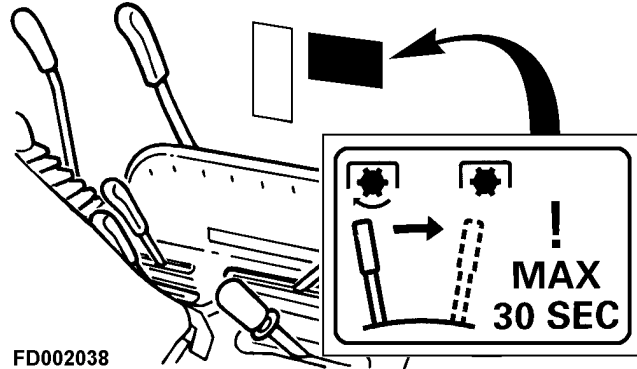

FDXLABEL 001200 -19-01SEP98-1/1

Fuel



CAUTION: Never fill tank when engine is running. During filling of tank, smoking is strictly prohibited!

The quality and cleanliness of the fuel is an important factor in obtaining dependable performance and satisfactory engine life. Use commercial diesel fuel which should be in accordance with Standard EN590.

Fill the fuel tank at the end of each day's operation to prevent condensation and freezing during cold weather.

At temperatures below 5°C (41°F) use diesel fuel with a Cold Filter Plugging Point (CFPP) below the expected lowest temperature.

IMPORTANT: The fuel tank is vented through filler cap. If new filler cap is required, always replace it with an original vented cap.

OULXBER,00007D7 -19-07MAR01-1/1

Handling and Storing Diesel Fuel



CAUTION: Handle fuel carefully. Do not fill the fuel tank when engine is running.

DO NOT smoke while you fill the fuel tank or service the fuel system.

Fill the fuel tank at the end of each day's operation to prevent condensation and freezing during cold weather.

IMPORTANT: The fuel tank is vented through the filler cap. If a new filler cap is required, always replace it with an original vented cap.

When fuel is stored for an extended period or if there is a slow turnover of fuel, add a fuel conditioner to stabilize the fuel and prevent water condensation. Contact your fuel supplier for recommendations.

DX,FUEL4 -19-18MAR96-1/1

Diesel Engine Break-In Oil

New engines are filled at the factory with John Deere ENGINE BREAK-IN OIL. During the break-in period, add John Deere ENGINE BREAK-IN OIL as needed to maintain the specified oil level.

Change the oil and filter after the first 100 hours of operation of a new or rebuilt engine.

After engine overhaul, fill the engine with John Deere ENGINE BREAK-IN OIL.

If John Deere ENGINE BREAK-IN OIL is not available, use a diesel engine oil meeting one of the following during the first 100 hours of operation:

- API Service Classification CE

- ACEA Specification E1

After the break-in period, use John Deere PLUS-50® or other diesel engine oil as recommended in this manual.

IMPORTANT: Do not use PLUS-50 oil or engine oils meeting API CH-4, API CG4, API CF4, ACEA E3, or ACEA E2 performance levels during the first 100 hours of operation of a new or rebuilt engine. These oils will not allow the engine to break-in properly.

PLUS-50 is a registered trademark of Deere & Company.

DX,ENOIL4 -19-24JAN00-1/1

Diesel Engine Oil

Use oil viscosity based on the expected air temperature range during the period between oil changes.

The following oil is preferred:

- John Deere PLUS-50®

The following oil is also recommended:

- John Deere TORQ-GARD SUPREME®

 
Other oils may be used if they meet one or more of the following:

- API Service Classification CH-4
- API Service Classification CG-4
- API Service Classification CF-4
- ACEA Specification E3
- ACEA Specification E2

Multi-viscosity diesel engine oils are preferred.

If diesel fuel with sulfur content greater than 0.5% is used, reduce the service interval by 50%.

Extended service intervals may apply when John Deere preferred engine oils are used. Consult your John Deere dealer for more information.

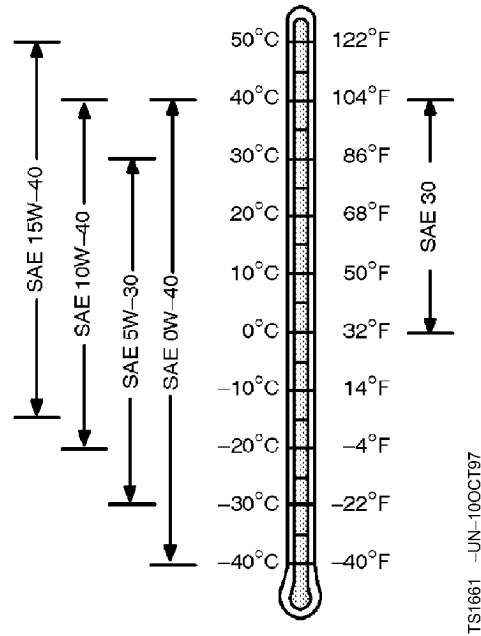

PLUS-50 is a registered trademark of Deere & Company.
TORQ-GARD SUPREME is a registered trademark of Deere & Company

DX,ENOIL -19-24JAN00-1/1

Transmission and Hydraulic Oil

Use the following oil for the transmission and hydraulic system:

- John Deere 3000TH

 
Other oils may be used if they meet the following:

- ELF TRACTORRENAULT GA 12¹
— or any other oil, corresponding to
API GL4-MIL-L-2105
— or GIMA M-1143 ALLISON C4

To improve steering capacity in cold conditions, the following oil may be used:

- VC3000LV

This oil does not need to be replaced during the summer, providing ambient temperature is not higher than 40°C (104°F).

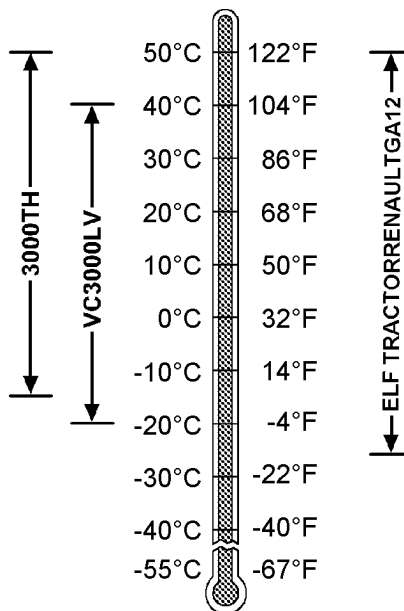

FD1026351

FD1026351 -JUN-26FEB01

¹Recommended for REVERSHIFT transmission

Front Wheel Drive Axle Oil

Use oil viscosity based on the expected air temperature range during the period between oil changes.

 
The following oils are preferred:

- John Deere EXTREME-GARD™
- John Deere GL-5 GEAR LUBRICANT

Other oils may be used if they meet the following:

- API Service Classification GL-5

Arctic oils (such as Military Specification MIL-L-10324A) may be used at temperatures below -30°C (-22°F).

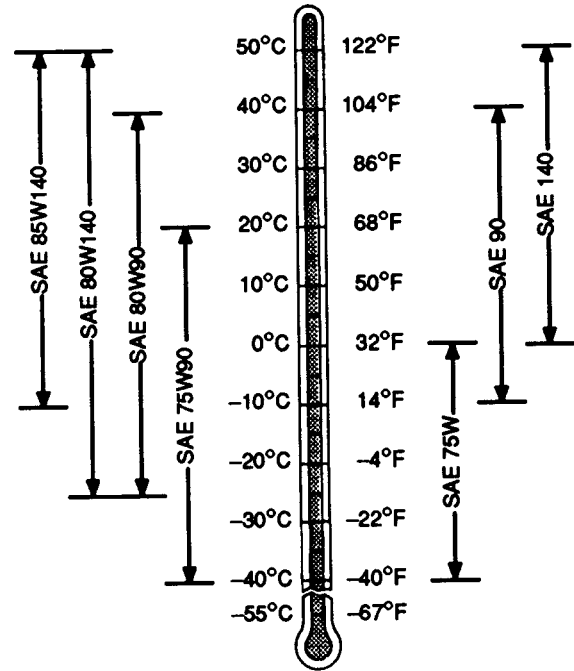

EXTREME-GARD is a trademark of Deere & Company.

LX,DX,GEOIL -19-01FEB94-1/1

TS1416 -JUN-31JAN94

Brake Fluid

The following is preferred:

- John Deere BRAKE- AND CLUTCH FLUID

Other brake fluids may be used if they meet one of the following:

- DOT 4
- SAE J1703
- ISO 4925
- FMVSS No 116

FD,BRAKE -19-29SEP94-1/1

Grease

Use grease based on the expected air temperature range during the service interval.

 
The following greases are preferred:

- John Deere MOLY HIGH TEMPERATURE EP GREASE
- John Deere HIGH TEMPERATURE EP GREASE
- John Deere GREASE-GARD™
- John Deere BIO-GREASE-GARD¹

Other greases may be used if they meet one of the following:

- SAE Multipurpose EP Grease with a maximum of 5% molybdenum disulfide
- SAE Multipurpose EP Grease

Greases meeting Military Specification MIL-G-10924F may be used at temperatures below -30°C (-22°F).

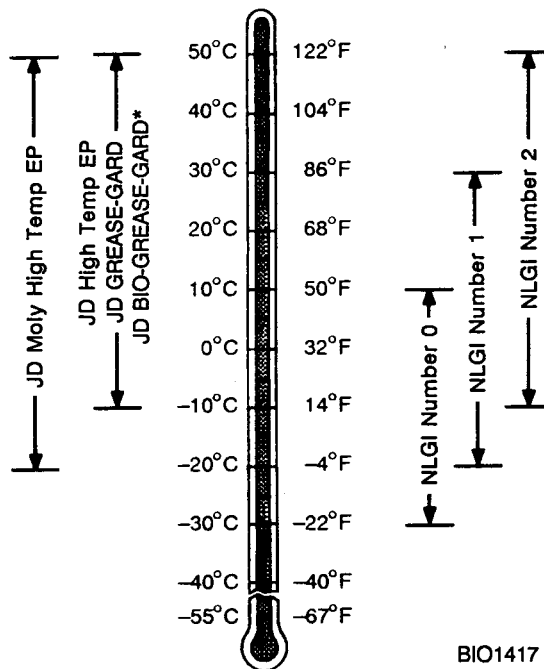

BIO1417

BIO1417 -UN-16AUG94

GREASE-GARD is a trademark of Deere & Company.

¹*This grease meets or exceeds the minimum biodegradability of 80% within 21 days according to CEC L-33-T-82 test method.*

FX,GREA1 -19-28SEP93-1/1

Oil Filters

Filtration of oils is critical to proper operation and lubrication.

Always change filters regularly as specified in this manual.

Use filters meeting John Deere performance specifications.

DX,FILT -19-18MAR96-1/1

Lubricant Storage

Your equipment can operate at top efficiency only when clean lubricants are used.

Make certain that all containers are properly marked to identify their contents.

Use clean containers to handle all lubricants.

Properly dispose of all old containers and any residual lubricant they may contain.

Whenever possible, store lubricants and containers in an area protected from dust, moisture, and other contamination. Store containers on their side to avoid water and dirt accumulation.

DX,LUBST -19-18MAR96-1/1

Alternative and Synthetic Lubricants

Conditions in certain geographical areas may require lubricant recommendations different from those printed in this manual.

Some John Deere brand coolants and lubricants may not be available in your location.

Consult your John Deere dealer to obtain information and recommendations.

Synthetic lubricants may be used if they meet the performance requirements as shown in this manual.

The temperature limits and service intervals shown in this manual apply to both conventional and synthetic oils.

Re-refined base stock products may be used if the finished lubricant meets the performance requirements.

DX,ALTER -19-15JUN00-1/1