

# TM

## Technical Manual

### John Deere JD670 Motor Grader

TM-1134



**TO JOHN DEERE DEALERS**

**IMPORTANT: PLEASE REMOVE THIS PAGE AND ROUTE THROUGH YOUR SERVICE DEPARTMENT.**

This is a partial revision for TM-1134, JD670 Motor Grader. The new pages are dated (Jun-87). Listed below is a brief explanation of "WHAT" was changed and "WHY" it was changed.

This manual was revised to clarify installation of plates in C1 and C2 clutches. The flat plate must be installed against the piston. The wavy plates must be installed in pack so the punch marked side is installed alternately.

# JD670 MOTOR GRADER

Technical Manual  
TM-1134 (Jun-87)

## SECTIONAL CONTENTS OF THIS MANUAL

Section I—General Information	1
Section 1—Wheels and Tires and Tracks	1
Section 2—Axles and Suspension System	2
Section 3—Transmission	3
Section 4—Engine	4
Section 5—Engine Auxiliary Systems	5
Section 6—Torque Converter	NOT USED
Section 7—Traction or Disconnect Clutch	NOT USED
Section 8—Transfer Drive	8
Section 9—Steering Systems	9
Section 10—Service Brakes	
Section 11—Parking-Emergency Brakes	
Section 13—Miscellaneous Vehicle	NOT USED
Section 15—Equipment Attaching	

**Previous Editions**

Copyright ©1980 Deere & Company  
Copyright ©1979 Deere & Company  
Copyright ©1977 Deere & Company  
Copyright ©1976 Deere & Company  
Copyright ©1975 Deere & Company

Continued on page 3

Copyright ©1987  
DEERE & COMPANY  
Moline, Illinois  
All Rights Reserved



**SECTIONAL CONTENTS—Continued**

Section 16—Electrical Systems _____	16
Section 17—Frame, Chassis or Supporting Structure _____	17
Section 18—Operator's Station _____	18
Section 19—Sheet Metal and Styling _____	19
Section 21—Main Hydraulic System _____	21
Section 22—Pneumatic Systems _____	NOT USED
Section 30—Winch _____	NOT USED
Section 31—Loader _____	NOT USED
Section 32—Bulldozer _____	NOT USED
Section 33—Backhoe and Excavator _____	NOT USED
Section 34—Grading Device _____	34
Section 35—Scraper and Haulage Device _____	NOT USED
Section 36—Conveyor and Elevating Device _____	NOT USED
Section 37—Arch or Boom _____	NOT USED
Section 38—Grapple or Clamp _____	NOT USED
Section 39—Shear _____	NOT USED
Section 40—PTO or Winch Drive _____	NOT USED

Continued on page 5



**SECTIONAL CONTENTS—CONTINUED**

Section 41—Misc. Function Mechanical Drive	NOT USED
Section 42—Ground Conditioning Tool	42
Section 43—Swing, Rotation or Pivoting System	NOT USED
Section 44—Cutting Mechanism	NOT USED
Section 46—Automatic Controls	NOT USED
Section 90—System Testing	90

*The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice.*





## SECTION AND GROUP CONTENTS OF THIS MANUAL

### SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Lubrication

### SECTION 1 - WHEELS AND TIRES

- Group 0110 - Powered Wheels, Tires and Fastenings
- Group 0120 - Non-Powered Wheels, Tires and Fastenings
- Group 0199 - Specifications and Special Tools

### SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housings
- Group 0210 - Differential
- Group 0230 - Non-Powered Wheel Axles
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

### SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0341 - Housings and Covers
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Transmission Hydraulics
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

### SECTION 4 - ENGINES

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshafts and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Engine Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Piping
- Group 0419 - Engine Oil Cooler
- Group 0420 - Fuel Filter and Primer Pump
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting System
- Group 0433 - Flywheel, Housing and Fasteners
- Group 0499 - Specifications and Special Tools

### SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Engine Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

### SECTION 8 - TRANSFER DRIVE

- Group 0841 - Housings and Covers
- Group 0851 - Gears, Shafts and Bearings
- Group 0899 - Specifications and Special Tools

### SECTION 9 - STEERING SYSTEM

- Group 0960 - Power Steering
- Group 0999 - Specifications and Special Tools

### SECTION 10 - SERVICE BRAKES

- Group 1011 - Service Brakes Active Elements
- Group 1015 - Controls Linkage
- Group 1066 - Brakes Hydraulics
- Group 1099 - Specifications and Special Tools

### SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Parking Brake Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

### SECTION 15 - EQUIPMENT ATTACHING

- Group 1511 - Drawbar

### SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Vehicle Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - Automatic Control Systems and Controls
- Group 1676 - Instrument and Indicators
- Group 1699 - Specifications and Special Tools

### SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Bottom Guards
- Group 1799 - Specifications and Special Tools

**SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued**

**SECTION 18 - OPERATOR'S STATION**

- Group 1806 - Safety Equipment
- Group 1808 - Comfort and Convenience Items
- Group 1810 - Operator Enclosure
- Group 1821 - Seat
- Group 1830 - Heating
- Group 1899 - Specifications and Special Tools

**SECTION 19 - SHEET METAL**

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing

**SECTION 21 - MAIN HYDRAULIC SYSTEM**

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

**SECTION 34 - GRADING DEVICE**

- Group 3401 - Blade
- Group 3415 - Controls Linkage
- Group 3440 - Grading Device Frames
- Group 3450 - Circle Gear Box
- Group 3460 - Hydraulic System
- Group 3499 - Specifications and Special Tools

**SECTION 42 - GROUND CONDITIONING TOOLS**

- Group 4201 - Teeth and Shanks
- Group 4215 - Controls Linkage
- Group 4240 - Frames
- Group 4260 - Hydraulic System
- Group 4299 - Specifications and Special Tools

**SECTION 90 - SYSTEM TESTING**

- Group 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System
- Group 9030 - Miscellaneous Components
- Group 9032 - Automatic Blade Control
- Group 9035 - Specifications and Special Tools

## ALPHABETICAL INDEX

<b>A</b>		Connecting rods . . . . .	0403-3
Accessory relay . . . . .	1676-7	Console, control . . . . .	4670-2
Accumulator . . . . .	1060-7	Control console . . . . .	4670-2
Accumulator, bladder-type . . . . .	2160-21	Control mounting structure . . . . .	1810-7
Accumulator, noise suppression . . . . .	2160-12	Control valve assembly, transmission . . . . .	0360-4
After-sale inspection . . . . .	I-IV-15	Controls linkage . . . . .	3415-1
Alternator indicator light . . . . .	1676-5	Controls linkage, parking and emergency brakes . . . . .	1115-1
Alternator, regulator and charging system wiring . . . . .	1672-1	Controls linkage, service brakes . . . . .	1015-1
Automatic blade control testing . . . . .	9032-1	Controls, speed . . . . .	0515-1
Automatic control linkages . . . . .	4615-3	Cooler, oil . . . . .	2160-19
Automatic controls . . . . .	4615-1	Crankshaft . . . . .	0401-1
Axle shafts, bearings, and reduction gears . . . . .	0250-1	Crankshaft front oil seal . . . . .	0401-3, 0402-3
Axles, non-powered wheel . . . . .	0230-1	Crankshaft gear . . . . .	0401-2
<b>B</b>		Crankshaft rear wear sleeve . . . . .	0401-5
Bail assembly linkages . . . . .	4615-7	Crossover relief valve . . . . .	3460-8
Batteries, supports and cables . . . . .	1671-3	Cylinder block . . . . .	0404-1
Bench seat . . . . .	1821-3	Cylinder head and valves . . . . .	0409-1
Bevel drive . . . . .	0210-1	Cylinder liner . . . . .	0404-2
Bladder-type accumulator . . . . .	2160-12	Cylinder, rear steer . . . . .	0960-17
Blade . . . . .	3401-3	Cylinder, ripper . . . . .	4260-18
Blade lift control valve linkage . . . . .	3415-1	Cylinder, scarifier . . . . .	4260-17
Blade rotation and blade side-shift control valve linkage . . . . .	3415-4	Cylinder, wheel lean . . . . .	0960-20
Blade tilt control valve linkage . . . . .	3415-6	Cylinders, front steer and rear steer . . . . .	0960-20
Block, cylinder . . . . .	0404-1	Cylinders, hydraulic . . . . .	3460-20
Bottom guard . . . . .	1746-1	Cylinders, steering . . . . .	0960-16
Brake caliper assembly . . . . .	1111-7	<b>D</b>	
Brake pressure indicator light . . . . .	1676-4	Damper, vibration . . . . .	0401-3
Brake valve . . . . .	1060-1	Defroster fan . . . . .	1810-9
Bumper . . . . .	1910-6	Delco-Remy starting motor . . . . .	0422-1
Bypass valve . . . . .	2160-19	Delivery service . . . . .	I-IV-15
<b>C</b>		Diagnosis and testing . . . . .	9005-3
Camshaft . . . . .	0402-3	Differential . . . . .	0210-1
Case and covers, transmission . . . . .	0341-4	Differential lock valve . . . . .	0210-14
Cigar lighter . . . . .	1808-1	Differential pinion shaft . . . . .	0210-8
Circle and blade tilt assemblies . . . . .	3440-5	Direction selector lever and linkage, transmission . . . . .	0315-5
Circle drive motor . . . . .	3460-16	Disconnect and controls, transmission . . . . .	0370-1
Circle gear box . . . . .	3450-1	Draft frame . . . . .	3440-4
Circle linkages . . . . .	4615-3	Drawbar . . . . .	1511-3
Circle side-shift control valve linkage . . . . .	3415-5	Drive axle housing and support . . . . .	0201-3
Clutch elements, transmission . . . . .	0370-4	Drive chain . . . . .	0250-2
Clutch housing, transmission . . . . .	0341-1	<b>E</b>	
Clutch linkage, transmission . . . . .	0370-1	Electrical components automatic controls . . . . .	4670-1
Clutch pedal valve linkage, transmission . . . . .	0315-3	Electrical system . . . . .	1671-1
Clutch pedal valve, transmission . . . . .	0360-8	Electrical system automatic controls . . . . .	1675-1
Clutch shaft and carrier assembly, transmission . . . . .	0370-3	Electrical system testing . . . . .	9015-1
Clutch valve linkage, transmission . . . . .	0315-3	Engine . . . . .	0400-1
Cold weather starting aids . . . . .	0505-3	Engine auxiliary systems . . . . .	0505-1
Comfort and convenience items . . . . .	1808-1	Engine cooling system . . . . .	0510-1

Engine enclosure .....	1910-3
Engine frame .....	1740-3
Engine oil cooler .....	0419-1
Engine oil filters and housing .....	0407-3
Engine oil pressure gauge .....	1676-6
Engine oil pressure regulating valve .....	0407-3
Engine oil pump .....	0407-1
Engine oiling system .....	0407-1
Engine removal and installation .....	0400-3
Engine shields .....	1910-3
Engine testing .....	1910-1
Engine water temperature gauge .....	1676-5
Equipment attaching .....	1511-1
Exhaust manifold .....	0410-1
External fuel supply system .....	0560-1

**F**

Fan .....	0510-1
Fan, defroster .....	1810-9
Filter, fuel .....	0420-1
Filter, hydraulic return .....	2160-21
Final drive assembly .....	0250-7
Final drive housing .....	0201-6
Flywheel, housing and fastenings .....	0433-1
Forward and reverse modulator, transmission .....	0360-12
Frame, chassis or supporting structure .....	1740-1
Frame, draft .....	3440-4
Frame, engine .....	1740-3
Frame installation .....	1740-3
Frame, main .....	1740-6
Frames and housings, automatic controls .....	4640-1
Frames, grading device .....	3440-1
Frames, ripper .....	4240-3
Frames, scarifier .....	4240-1
Front oil seal and wear sleeve .....	0401-3
Front steer and rear steer cylinders .....	0960-20
Front windshield wiper .....	1810-10
Fuel filter .....	0420-1
Fuel gauge .....	1676-6
Fuel injection nozzles .....	0413-5
Fuel injection pump .....	0413-1
Fuel injection system .....	0413-1
Fuel lines .....	0560-3
Fuel supply system, external .....	0560-1
Fuel tank .....	0560-2
Fuel transfer pump .....	0421-1
Function control valves .....	3460-1

**G**

Gauge, engine oil pressure .....	1676-6
Gauge, engine water temperature .....	1676-5
Gauge, fuel .....	1676-6
Gauge, transmission oil pressure .....	1676-3

Gauge, transmission oil temperature .....	1676-6
Gear box, circle .....	3450-1
Gears, shafts, bearings and power shift clutch .....	0350-1
General specifications .....	III-1
Grade height jack .....	4615-6
Grade sensor .....	4670-3
Grading device .....	3401-1
Grading device frames .....	3440-1
Grille .....	1921-1
Ground conditioning tools .....	4201-1
Guard, bottom .....	1746-1

**H**

Head and valves, cylinder .....	0409-1
Heater .....	1830-1
High beam indicator light .....	1676-4
Hood .....	1910-3
Housing, final drive .....	0201-6
Housings and covers, transfer drive .....	0841-3
Housings and covers, transmission .....	0341-1
Hydraulic components automatic controls .....	4660-1
Hydraulic cylinders .....	3460-20
Hydraulic return filter .....	2160-21
Hydraulic system, main .....	2160-1
Hydraulic system testing .....	9025-1
Hydraulics, transmission .....	0360-1
Hydraulics, vehicle .....	2199-9

**I**

Idler gear assembly, upper and lower .....	0851-5
Input gear assembly .....	0851-4
Instrument and indicators .....	1676-1
Intake manifold .....	0414-1
Intake system .....	0520-1

**J**

John Deere starting motor .....	0422-11
---------------------------------	---------

**K**

Key switch .....	1676-7
------------------	--------

**L**

Lift arm assembly .....	3440-1
Lift arm locking valve and pin .....	3460-9
Light, alternator indicator .....	1676-5
Light, brake pressure indicator .....	1676-4
Light, high beam indicator .....	1676-4
Light, lock pin indicator .....	1676-4
Light, transmission filter restriction indicator light .....	1676-5
Lighting system .....	1673-1
Lights .....	1673-3
Lights, turn indicator .....	1676-4
Lines, fuel .....	0560-3

Linkage, blade lift control valve .....	3415-1
Linkage, blade rotation and blade side-shift control valve .....	3415-4
Linkage, blade tilt control valve .....	3415-6
Linkage, circle side-shift control valve .....	3415-5
Linkage, controls .....	3415-1
Linkage, rear steer .....	0960-12
Linkage, rear steering control valve .....	3415-2
Linkage, scarifier valve .....	4215-1
Linkages, automatic control .....	4615-3
Locking pin indicator light .....	1676-4

**M**

Main bearings .....	0401-1
Main frame .....	1740-6
Main hydraulic pump .....	2160-3
Main hydraulic system .....	2160-1
Malfunctions:	
Automatic blade control .....	9032-10
Electrical system .....	9015-11
Engine .....	9010-5
Hydraulic system .....	9025-31
Power train .....	9020-12
Manifold, exhaust .....	0410-1
Manifold, intake .....	0414-1
Manifold, rotary .....	3460-14
Manual steering .....	0960-7
Meter, service .....	1676-3
Miscellaneous components testing .....	9030-1
Motor, circle drive .....	3460-16

**N**

Neutral start switch .....	1674-4
Noise suppression accumulator .....	2160-12
Non-powered wheels .....	0120-1
Non-powered wheel axles .....	0230-1
Nozzles, fuel injection .....	0413-5

**O**

Oil cooler, engine .....	0419-1
Oil cooler, hydraulic .....	2160-19
Oil filter assembly, transmission .....	0360-14
Oil filter, engine .....	0407-1
Oil filter nipple, engine .....	0407-2
Oil pressure control valve .....	0407-2
Oil pressure regulating valve, transmission .....	0360-10
Oil pump, engine .....	0407-2
Oil pump, transmission .....	0360-1
Oiling system, engine .....	0407-1
Operator enclosure .....	1810-1
Operator's station .....	1806-1
Output gear assembly .....	0851-6

**P**

Panels, rear .....	1910-6
Parking brake active elements .....	1111-3
Parking emergency brakes .....	1111-1
Pistons .....	0403-2
Platform .....	1810-6
Power train testing .....	9020-1
Powered, wheels .....	0110-3
Pre-cleaner .....	0520-2
Pre-delivery .....	I-IV-1
Pressure control valve .....	2160-16
Pump drive assembly .....	2160-10
Pump, fuel injection .....	0413-1
Pump, fuel transfer .....	0421-1
Pump, main hydraulic .....	2160-3
Pump, water .....	0417-1

**R**

Radiator .....	0510-1
Rear crankshaft oil seal, housing, and wear sleeve .....	0401-3
Rear panels .....	1910-6
Rear steer cylinder .....	0960-17
Rear steer linkage .....	0960-12
Rear steer valve .....	0960-12
Rear steering control valve linkage .....	3415-2
Rear steering indicator .....	1676-3
Rear wiper .....	1810-9
Reverse warning switch .....	1674-4
Ripper cylinder .....	4260-18
Ripper frames .....	4240-3
Ripper valve .....	4260-5
Ripper teeth and shanks .....	4201-4
Rocker arms and push rods .....	0402-15
Rotary manifold .....	3460-14

**S**

Safety equipment .....	1806-3
Scarifier cylinder .....	4260-17
Scarifier frames .....	4240-1
Scarifier teeth and shanks .....	4201-3
Scarifier valve .....	4260-1
Scarifier valve linkage .....	4215-1
Seat .....	1821-1
Seat, bench .....	1821-3
Seat, suspension .....	1821-1
Service brakes .....	1011-1
Service brakes active elements .....	1011-3
Service meter .....	1676-3
Shaft and tube, steering .....	0960-11
Sheet metal .....	1910-1
Shields, engine .....	1910-3
Shift lever and linkage, transmission .....	0315-7
Solenoid, starting aid .....	0505-3

Special tools:

Alternator, regulator and charging system wiring .....	1699-7
Automatic blade control testing .....	9035-21
Batteries, supports and cables .....	1699-5
Camshaft and valve actuating means .....	0499-34
Connecting rods and pistons .....	0499-35
Crankshaft and main bearings .....	0499-32
Cylinder block .....	0499-37
Cylinder head and valves .....	0499-40
Electrical system testing .....	9035-12
Engine frame .....	1799-1
Engine removal and installation .....	0499-31
Engine testing .....	9035-3
Flywheel, housing and fastenings .....	0499-50
Fuel injection system .....	0499-42
Ground conditioning tools hydraulic system .....	4299-4
Hydraulic system .....	9035-18
Linkages .....	4699-1
Power steering .....	0999-4
Starting motor and fastenings .....	0499-46
Transmission clutch disconnect and controls .....	0399-14
Transmission gears, shafts, bearings and power shift clutch .....	0399-13
Transmission hydraulics .....	0399-13
Turbocharger .....	0499-43
Vehicle hydraulics .....	2199-9
Water pump .....	0499-45

Specifications:

Alternator, regulator and charging system wiring .....	1699-1
Axle shafts, bearings and reduction gears .....	0299-9
Batteries, supports and cables .....	1699-1
Brakes hydraulics .....	1099-1
Cab .....	1899-1
Camshaft and valve actuating means .....	0499-3
Connecting rods and pistons .....	0499-7
Crankshaft and main bearings .....	0499-2
Cylinder block .....	0499-12
Cylinder head and valves .....	0499-14
Differential or bevel drive .....	0299-3
Drive axle housing and support .....	0299-1
Electrical system testing .....	9035-6
Engine break-in .....	0499-1
Engine cooling system .....	0599-1
Engine oil cooler .....	0499-23
Engine oiling system .....	0499-13
Engine testing .....	9035-1
External fuel supply system .....	0599-2
Flywheel housing and fasteners .....	0499-30
Fuel injection system .....	0499-16
Grading device hydraulic system .....	3499-3

Specifications—Continued

Ground conditioning tools hydraulic system .....	4299-1
Hydraulic system testing .....	9035-14
Instruments and indicators .....	1699-4
Lift arm assembly .....	3499-1
Lighting system .....	1699-3
Linkages .....	4699-1
Miscellaneous components testing .....	9035-19
Non-powered wheel axles .....	0299-8
Parking brake active elements .....	1199-1
Parking brake controls linkage .....	1199-2
Power steering .....	0999-1
Power train testing .....	9035-13
Speed controls .....	0599-2
Starting motor and fastenings .....	0499-24
Suspension seat .....	1899-2
Thermostats, housing and piping .....	0499-22
Transfer drive gears, shafts, and bearings .....	0899-3
Transfer drive housings and covers .....	0899-1
Transmission clutch disconnect and controls .....	0399-12
Transmission, gears, shafts, bearings and power shift clutch .....	0399-2
Transmission housing and covers .....	0399-1
Transmission hydraulics .....	0399-8
Turbocharger .....	0499-21
Vehicle hydraulics .....	2199-1
Water pump .....	0499-21
Wiring harness and switches .....	1699-3
Speed controls .....	0515-1
Start circuit relay .....	1674-3
Start switch .....	1676-7
Starting aid adapter, line and nozzle .....	0505-4
Starting aid solenoid .....	0505-3
Starting aid switch .....	0505-3
Starting aids, cold weather .....	0505-3
Starting motor, Delco-Remy .....	0422-1
Starting system .....	0422-1
Steering cylinders .....	0960-16
Steering indicator, rear .....	1676-3
Steering, manual .....	0960-7
Steering shaft and tube .....	0960-11
Steering system .....	0960-1
Steering valve .....	0960-3
Storage .....	I-IV-1
Suspension seat .....	1821-1
Switch, key .....	1676-7
Switch, neutral start .....	1674-4
Switch, reverse warning .....	1674-4
Switch, start .....	1676-7
Switch, starting aid .....	0505-3
Switch, transmission filter restriction .....	0360-15
System testing .....	9005-1

**T**

Tandem housing .....	0201-5
Tandem pivot housing .....	0201-6
Tank, fuel .....	0560-2
Teeth and shanks, Ripper .....	4201-4
Teeth and shanks, scarifier .....	4201-3
Thermostats, housings and piping .....	0418-1
Timing gear cover .....	0402-2
Timing gear train .....	0402-8
Tools, ground conditioning .....	4201-1
Transfer drive .....	0841-1
Transfer drive housing and covers .....	0841-3
Transmission case and covers .....	0341-4
Transmission clutch elements .....	0370-4
Transmission clutch housing .....	0341-1
Transmission clutch linkage .....	0370-1
Transmission clutch pedal valve .....	0360-8
Transmission clutch pedal valve linkage .....	0315-3
Transmission clutch shaft and carrier assembly .....	0370-3
Transmission clutch valve linkage .....	0315-3
Transmission control valve assembly .....	0360-4
Transmission controls .....	0315-3
Transmission direction selector lever and linkage .....	0315-5
Transmission disconnect and controls .....	0370-1
Transmission filter restriction indicator light .....	1676-5
Transmission filter restriction switch .....	0360-15
Transmission forward and reverse modulator .....	0360-12
Transmission gears, shafts, bearings and power shift clutch .....	0350-1
Transmission housings and covers .....	0341-1
Transmission hydraulics .....	0360-1
Transmission oil filter assembly .....	0360-14
Transmission oil pressure gauge .....	1676-3
Transmission oil pressure regulating valve .....	0360-10
Transmission oil pump .....	0360-1

Transmission oil temperature gauge .....	1676-6
Transmission shift lever and linkage .....	0315-7
Turbocharger .....	0416-1
Turn indicator lights .....	1676-4

**U**

Upper and lower idler gear assembly .....	0851-5
---	--------

**V**

Valve and pin, lift arm locking .....	3460-9
Valve, brake .....	1060-1
Valve, bypass .....	2160-19
Valve, crossover relief .....	3460-8
Valve, differential lock .....	0210-14
Valve, engine oil pressure regulating .....	0407-3
Valve lift check .....	0402-1
Valve, pressure control .....	2160-16
Valve, rear steer .....	0960-12
Valve, ripper .....	4260-5
Valve, scarifier .....	4260-1
Valve, steering .....	0960-3
Valve, wheel lean .....	0960-13
Valves, function control .....	3460-1
Vehicle hydraulics .....	2199-9
Ventilating system .....	0408-1
Vibration damper .....	0401-3

**W**

Water pump .....	0417-1
Wheel axle assemblies .....	0250-4
Wheel axle housing .....	0201-4
Wheel lean cylinder .....	0960-20
Wheel lean valve .....	0960-13
Wheels, non-powered .....	0120-1
Wheels, powered .....	0110-3
Windshield wiper, front .....	1810-10
Wiper, rear .....	1810-9
Wiring harness .....	4670-4
Wiring harness and switches .....	1674-1





## PAGE LIST

The following list contains all page numbers with latest date lines for this technical manual. If a page does not have the date line indicated, the page is obsolete.

I-I-1, 2	(Nov-79)	2-0210-5, 6	(Nov-79)	3-0360-9, 10	(Nov-79)
I-I-3, 4	(Aug-76)	2-0210-7, 8	(Nov-79)	3-0360-11, 12	(Aug-75)
I-I-5, 6	(Aug-76)	2-0210-9, 10	(Nov-79)	3-0360-13, 14	(Nov-79)
I-I-7, 8	(Nov-79)	2-0210-11, 12	(Nov-79)	3-0360-15, 16	(Nov-79)
I-I-9, 10	(Mar-80)	2-0210-13, 14	(Nov-79)	3-0370-1, 2	(Nov-79)
I-I-11, 12	(Mar-80)	2-0210-15, 16	(Nov-79)	3-0370-3, 4	(Nov-79)
I-I-13, 14	(Mar-80)	2-0230-1, 2	(Nov-79)	3-0370-5, 6	(Nov-79)
I-I-15, 16	(Mar-80)	2-0230-3, 4	(Nov-79)	3-0399-1, 2	(Nov-79)
I-I-17, 18	(Mar-80)	2-0230-5, 6	(Nov-79)	3-0399-3, 4	(Nov-79)
I-II-1, 2	(Nov-79)	2-0230-7, 8	(Nov-79)	3-0399-5, 6	(Mar-80)
I-II-3, 4	(Nov-79)	2-0230-9, 10	(Nov-79)	3-0399-7, 8	(Nov-79)
I-III-1, 2	(Nov-79)	2-0250-1, 2	(Nov-79)	3-0399-9, 10	(Nov-79)
I-III-3, 4	(Nov-79)	2-0250-3, 4	(Nov-79)	3-0399-11, 12	(Nov-79)
I-IV-1, 2	(Nov-79)	2-0250-5, 6	(Nov-79)	3-0399-13, 14	(Mar-80)
I-IV-3, 4	(Nov-79)	2-0250-7, 8	(Nov-79)		
I-IV-5, 6	(Nov-79)	2-0250-9, 10	(Nov-79)	4-0400-1, 2	(Mar-80)
I-IV-7, 8	(Jan-77)	2-0299-1, 2	(Nov-79)	4-0400-3, 4	(Mar-80)
I-IV-9, 10	(Jan-77)	2-0299-3, 4	(Nov-79)	4-0400-5, 6	(Nov-79)
I-IV-11, 12	(Nov-79)	2-0299-5, 6	(Nov-79)	4-0401-1, 2	(Nov-79)
I-IV-13, 14	(Jan-77)	2-0299-7, 8	(Nov-79)	4-0401-3, 4	(Mar-80)
I-IV-15, 16	(Nov-79)	2-0299-9, 10	(Nov-79)	4-0401-5, 6	(Nov-79)
I-IV-17, 18	(Nov-79)			4-0402-1, 2	(Nov-79)
I-IV-19, 20	(Nov-79)	3-0315-1, 2	(Mar-80)	4-0402-3, 4	(Nov-79)
I-IV-21, 22	(Nov-79)	3-0315-3, 4	(Mar-80)	4-0402-5, 6	(Nov-79)
I-IV-23, 24	(Nov-79)	3-0315-5, 6	(Mar-80)	4-0402-7, 8	(Nov-79)
I-IV-25, 26	(Nov-79)	3-0315-7, 8	(Mar-80)	4-0402-9, 10	(Nov-79)
I-IV-27, 28	(Nov-79)	3-0341-1, 2	(Nov-79)	4-0402-11, 12	(Nov-79)
I-IV-29, 30	(Nov-79)	3-0341-3, 4	(Nov-79)	4-0402-13, 14	(Nov-79)
I-IV-31, 32	(Nov-79)	3-0341-5, 6	(Nov-79)	4-0402-15, 16	(Nov-79)
I-IV-33, 34	(Nov-79)	3-0341-7, 8	(Nov-79)	4-0402-17, 18	(Nov-79)
I-V-1, 2	(Nov-79)	3-0350-1, 2	(Nov-79)	4-0403-1, 2	(Mar-80)
		3-0350-3, 4	(Nov-79)	4-0403-3, 4	(Mar-80)
1-0110-1, 2	(Nov-79)	3-0350-5, 6	(Nov-79)	4-0403-5, 6	(Mar-80)
1-0110-3, 4	(Nov-79)	3-0350-7, 8	(Mar-80)	4-0404-1, 2	(Nov-79)
1-0120-1, 2	(Nov-79)	3-0350-9, 10	(Nov-79)	4-0404-3, 4	(Nov-79)
1-0199-1, 2	(Nov-79)	3-0350-11, 12	(Mar-80)	4-0407-1, 2	(Nov-79)
		3-0350-13, 14	(Mar-80)	4-0407-3, 4	(Mar-80)
2-0201-1, 2	(Nov-79)	3-0350-15, 16	(Mar-80)	4-0408-1, 2	(Aug-75)
2-0201-3, 4	(Nov-79)	3-0350-17, 18	(Nov-79)	4-0409-1, 2	(Aug-75)
2-0201-5, 6	(Nov-79)	3-0350-19, 20	(Nov-79)	4-0409-3, 4	(Mar-80)
2-0201-7, 8	(Nov-79)	3-0350-21, 22	(Nov-79)	4-0409-5, 6	(Nov-79)
2-0201-9, 10	(Nov-79)	3-0350-23, 24	(Nov-79)	4-0410-1, 2	(Mar-80)
2-0201-11, 12	(Nov-79)	3-0350-25, 26	(Nov-79)	4-0413-1, 2	(Nov-79)
2-0201-13, 14	(Nov-79)	3-0360-1, 2	(Nov-79)	4-0413-3, 4	(Mar-80)
2-0201-15, 16	(Nov-79)	3-0360-3, 4	(Nov-79)	4-0413-5, 6	(Nov-79)
		3-0360-5, 6	(Nov-79)	4-0413-7, 8	(Nov-79)
2-0210-1, 2	(Nov-79)	3-0360-7, 8	(Aug-75)	4-0414-1, 2	(Nov-79)
2-0210-3, 4	(Nov-79)				

Vertical lines indicate pages included in this revision.

Please click here and go  
back to our website.

**BUY NOW**

**Then Instant Download the  
Complete Manual.**

**Thank you very much!**