

7440 and 7445 Cotton Strippers



TECHNICAL MANUAL 7440 and 7445 Cotton Strippers

TM1282 (03AUG94) English

FOR COMPLETE SERVICE INFORMATION ALSO SEE:

6359 ENGINE..... CTM4
6059 ENGINE..... CTM8
RADIAL PISTON PUMP..... CTM7
STARTING MOTORS AND ALTERNATORS CTM77

John Deere Des Moines Works
TM1282 (03AUG94)

LITHO IN U.S.A.
ENGLISH



Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Contents

SECTION 10—GENERAL

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Fuels and Lubricants

SECTION 20—ENGINE REPAIR

- Group 05—Remove and Install Engine
- Group 10—Cooling System

SECTION 30—FUEL AND AIR REPAIR

- Group 05—Diesel Fuel System

SECTION 40—ELECTRICAL REPAIR

- Group 05—MOTOROLA Charging Circuit Repair
- Group 06—NIPPONDENSO Charging Circuit Repair
- Group 07—BOSCH Charging Circuit Repair
- Group 10—Starting Circuit Repair
- Group 15—Monitor System Repair
- Group 20—Tachometer and Gauges
- Group 25—Lights and Accessory Circuit Repair
- Group 30—Connector Repair

SECTION 50—POWER TRAIN REPAIR

- Group 05—EATON Hydrostatic Drive
- Group 06—SUNSTRAND Hydrostatic Drive
- Group 10—Transmission
- Group 15—Differential
- Group 20—Final Drive

SECTION 60—STEERING AND BRAKES REPAIR

- Group 05—Remove and Install Steering Components
- Group 06—Steering Column Repair
- Group 07—Steering Metering Pump Repair
- Group 08—Steering Cylinder Repair
- Group 10—Brake Repair

SECTION 70—HYDRAULIC REPAIR

- Group 05—Hydraulic Pump
- Group 10—Main Control Valve—7440 Stripper
- Group 11—Main Control Valve—7445 Stripper
- Group 15A—Basket Lift Cylinder

- Group 15B—Rockshaft Lift Cylinders
- Group 15C—Height Control Cylinder
- Group 15D—Boll Box Cylinder
- Group 15G—Axle Stabilizer Cylinder
- Group 15H—Vane Compactor Cylinder
- Group 20—Hydraulic Motors
- Group 25—Height Control
- Group 30—Basket Interlock Valve—7445
- Group 35—Stabilizer Valve

SECTION 80—AXLES AND WHEEL REPAIR

- Group 05—Guide Wheel Axle—7440 and 7445 (S.N. —4000)
- Group 10—Guide Wheel Axle—7445 (S.N. 4001—)

SECTION 90—OPERATOR STATION REPAIR

- Group 05—DELCO R-12 Air Conditioning System
- Group 06—NIPPONDENSO R-12 Air Conditioning System
- Group 07—R-12 Air Conditioning System
- Group 08—NIPPONDENSO R-134 Air Conditioning System
- Group 10—Heating System
- Group 15—Seat Repair
- Group 20—Cab Repair

SECTION 100—STRIPPING UNITS REPAIR

- Group 05—Unit Removal and Installation
- Group 10—Unit Repair
- Group 15—Cross Augers and Slip Clutch
- Group 20—Input Shafts and Slip Clutches—7440 Stripper
- Group 21—Input Shafts and Slip Clutches—7445 Stripper

SECTION 110—AIR SYSTEM REPAIR

- Group 05—Air System

SECTION 120—CLEANER REPAIR

- Group 05—Cleaner Repair

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM1282-19-03AUG94

COPYRIGHT® 1994
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright® 1992, 1986, 1985, 1983 Deere & Company

Contents

SECTION 210—OPERATIONAL CHECKOUT PROCEDURE

Group 05—Machine Operational Checkout

SECTION 220—ENGINE OPERATION AND TESTS

Group 05—Engine

SECTION 230—FUEL/AIR OPERATION AND TESTS

Group 05—Air Intake System

Group 10—Diesel Fuel System

SECTION 240—ELECTRICAL OPERATION AND TESTS

Group 05—System Information

Group 10—Electrical System Diagnosis

Group 10A—Starting Circuit

Group 10B—Charging Circuit (7440; 7445, P.I.N.
-12000)

Group 10C—Charging Circuit (7445, P.I.N.
12001-)

Group 10D—Gauge Cluster

Group 10E—Lighting Circuit

Group 10F—Accessory Circuit

Group 11—Monitor System Diagnosis

Group 15—Battery

Group 20—Charging Circuit

Group 25—Starting Circuit

Group 30—Tachometer

Group 35—Monitor System

Group 40—Lights, Instruments, and Accessory
Circuits

SECTION 250—POWER TRAIN OPERATION AND TESTS

Group 05—Eaton Hydrostatic Drive

Group 06—Sundstrand Hydrostatic Drive

Group 10—Transmission

Group 15—Final Drive

SECTION 260—STEERING/BRAKES OPERATION AND TESTS

Group 05—Steering

Group 10—Brakes

SECTION 270—HYDRAULIC SYSTEM OPERATION AND TEST

Group 05—Hydraulic System

Group 10—Hydraulic Pump

Group 15—7440 Main Control Valve

Group 16—7445 Main Control Valve

Group 20—Hydraulic Cylinders

Group 25—Hydraulic Motors

Group 30—Height Control

SECTION 290—OPERATORS STATION OPERATION AND TESTS

Group 05—Operator's Station Operational Checks

Group 10—Operator's Station Diagnostics

Group 15A—Air Conditioning Tests - R12

Group 15B—Air Conditioning Testing - R134a

Group 15C—Operator's Station Tests

Group 20—Operator's Station Adjustments

Group 25—Operator's Station Theory of
Operation

SECTION 300—STRIPPING UNIT OPERATION AND TESTS

Group 05—Stripping Unit System

SECTION 310—AIR SYSTEM OPERATION AND TESTS

Group 05—Air System

SECTION 320—CLEANER OPERATION AND TESTS

Group 05—Cleaner

SECTION 399—SPECIAL TOOLS

Group 05—Fabricated Tools

Index

Contents

110

120

210

220

230

240

250

260

270

290

Contents

110

120

210

220

230

240

250

260

270

290

Contents

300

310

320

399

INDX

Contents

300

310

320

399

INDEX

Section 10 GENERAL

10

Contents

Page

Group 05—Safety

Group 10—General Specifications

Specifications	10-10-1
Dimensions	
7440	10-10-7
7445	10-10-8
Serial Numbers	10-10-9

Group 15—Fuels and Lubricants

Lubricate Machine Properly	10-15-1
Diesel Fuel	10-15-1
Engine Oil	10-15-2
Hydraulic and Hydrostatic Oils	10-15-3
Transmission and Final Drives	10-15-4
Engine Coolant	10-15-5
Lubrication Storage	10-15-9
Lubrication Chart	10-15-10

Contents

FOLLOW SAFE PROCEDURES

Unsafe work practices are dangerous. Understand service procedure before doing work; do not attempt shortcuts.



TX,05,FF1611 -19-14JUN90

TS231 -19-07OCT88

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

TS227 -JUN-23AUG88

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



DX,SPARKS -19-03MAR93


TS204 -JUN-23AUG88

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

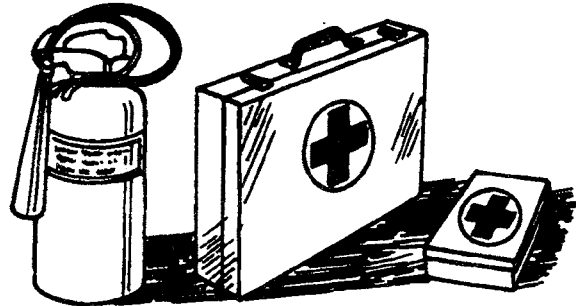

JUN-23AUG88
TS281

DX,FIRE2 -19-03MAR93

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

 
1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

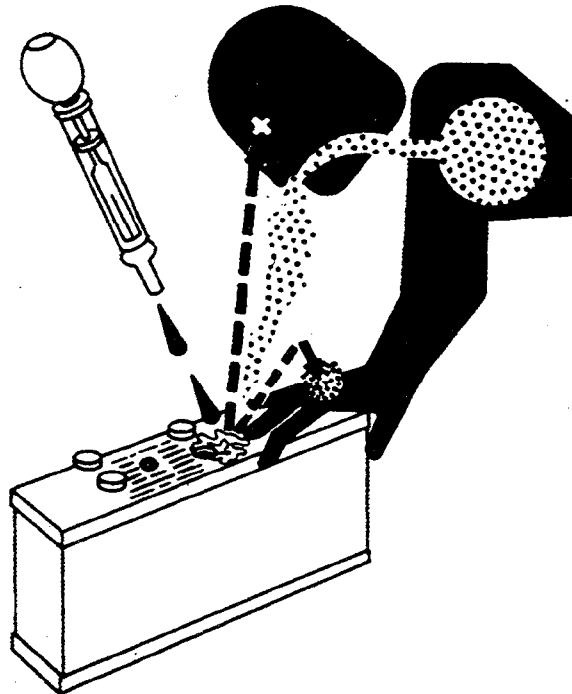

JUN-23AUG88
TS203

DX,POISON -19-21APR83

 
HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

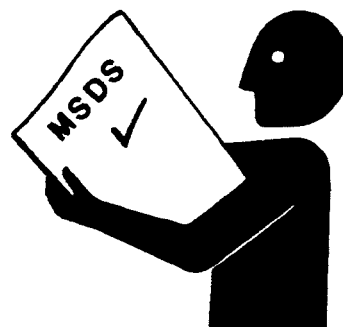

DX,MSDS,NA -19-03MAR93

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

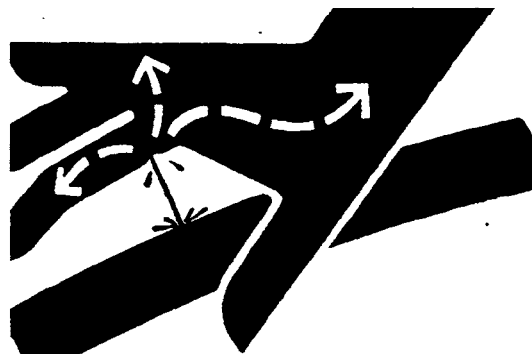


DX,FLUID -19-03MAR93

PARK MACHINE SAFELY

Before working on the machine:

 - Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

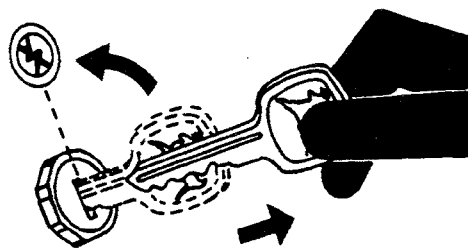

DX,PARK -19-04JUN90


-UN-24MAY89

TS230

AVOID POWER LINES

Serious injury or death can result from contact with electric lines.

 Be certain that basket will not touch any overhead power lines when it is in raised position. Electrical shock will occur if you touch machine when it is in contact with overhead power lines.

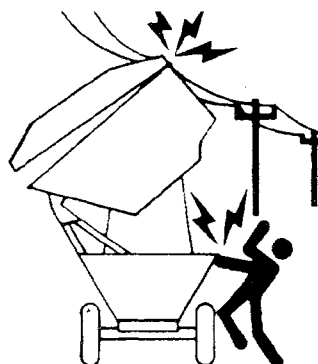

NXR,1005,A -19-14MAY92


-UN-21-SEP89

TS663

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

 Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

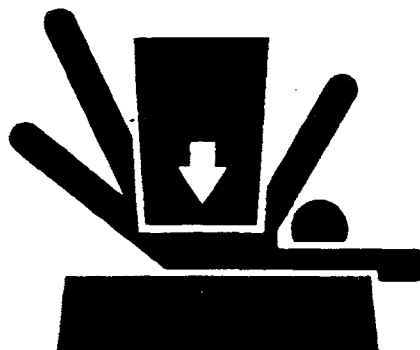

DX,LOWER -19-04JUN90

-UN-29AUG88

TS229

 
WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

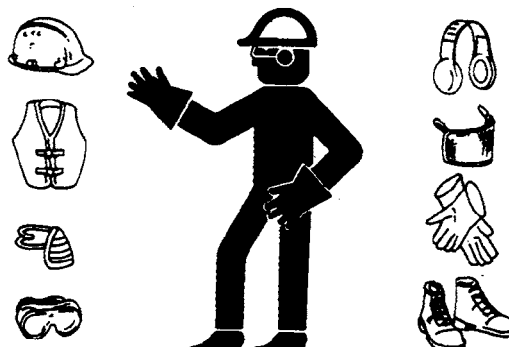


DX,WEAR -19-10SEP90

10
05
-UN-23AUG88
TS206

WORK IN CLEAN AREA

Before starting a job:

 - Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

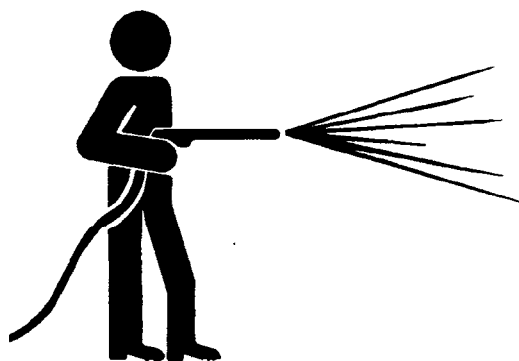


DX,CLEAN -19-04JUN90

-UN-18OCT88
T6642EJ

SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

 Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

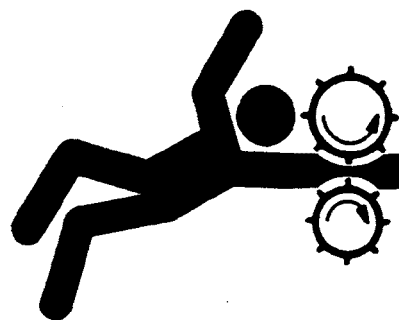

DX,LOOSE -19-04JUN90

 
-UN-23AUG88
TS228

Safety

WORK IN VENTILATED AREA

10
05
6
Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

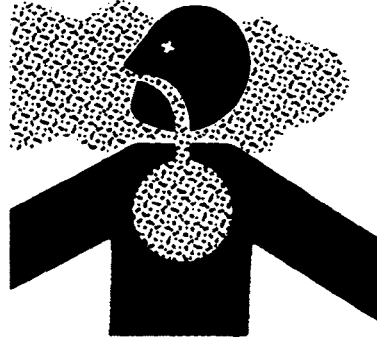


DX,AIR -19-04JUN90

TS220
-JUN-23AUG88

ILLUMINATE WORK AREA SAFELY

 Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

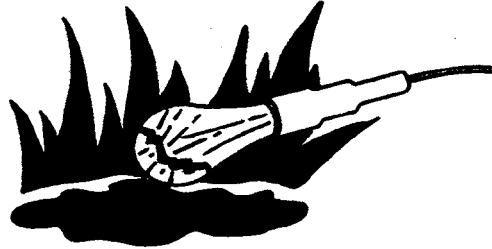

DX,LIGHT -19-04JUN90

TS223
-JUN-23AUG88

REPLACE SAFETY SIGNS

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.




DX,SIGNS1 -19-04JUN90

TS201
-JUN-23AUG88

USE PROPER LIFTING EQUIPMENT

Lifting heavy components incorrectly can cause severe injury or machine damage.

 Follow recommended procedure for removal and installation of components in the manual.

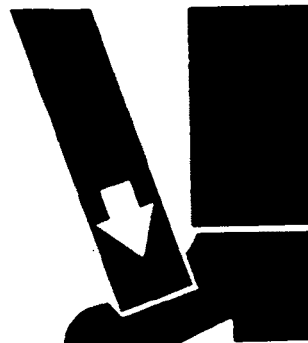

DX,LIFT -19-04JUN90

TS226
-JUN-23AUG88

REMOVE PAINT BEFORE WELDING OR HEATING

 
Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

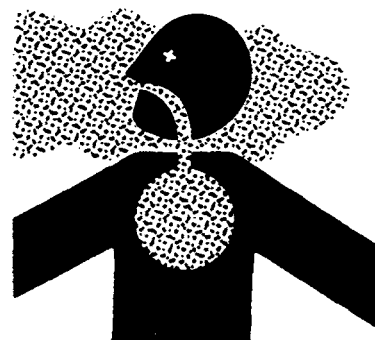

DX,PAINT -19-03MAR93

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

SERVICE TIRES SAFELY

 
Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

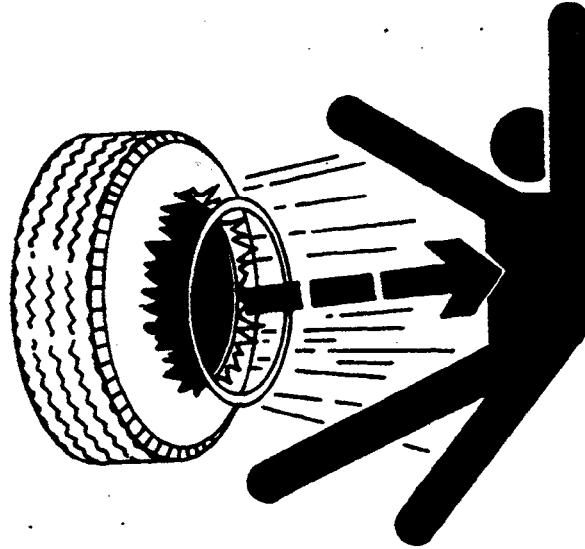

-UN-23AUG88

TS211

DX,RIM -19-24AUG90

 
AVOID HARMFUL ASBESTOS DUST

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding material containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, apply a mist of oil or water on the material containing asbestos.

Keep bystanders away from the area.

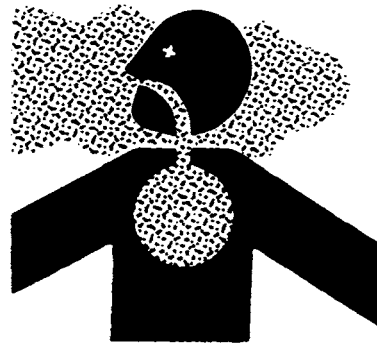

-UN-23AUG88

TS220

DX,DUST -19-15MAR91

PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

10
05
9

TS218 -UN-23AUG88

USE PROPER TOOLS

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



DX,REPAIR -19-04JUN90

TS779 -UN-08NOV89

Please click here and go
back to our website.

BUY NOW

**Then Instant Download the
Complete Manual.**

Thank you very much!