

160DLC Excavator Repair

TECHNICAL MANUAL 160DLC Excavator Repair

TM10091 11JAN08 (ENGLISH)

For complete service information also see:

160DLC Excavator Operation and Tests . . .	TM10088
160DLC Excavator Operator's Manual	OMT226911
POWERTECH™ 4.5L/6.8L POWERTECH E™	
6.8L Diesel Engines—Base Engine	CTM104
POWERTECH E™ 6.8L Diesel Engines—Level 16 Electronic Fuel System with Denso HPCR	CTM502
Alternators and Starter Motors	CTM77
Undercarriage Appraisal Manual	SP326
Super Caddy Oil Cleanup Procedure	CTM310

**Worldwide Construction
And Forestry Division**

LITHO IN U.S.A

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-29SEP98-1/1

Technical Information Feedback Form

We need your help to continually improve our technical publications. Please copy this page and FAX or mail your comments, ideas and improvements.

SEND TO: John Deere Dubuque Works
P.O. Box 538
Attn: Publications Supervisor, Dept. 303
Dubuque, IA 52004-0538

FAX NUMBER: 563-589-5800

Ideas, Comments (Please State Page Number): _____

OVERALL, how would you rate the quality of this publication? (Check one)

	Poor		Fair		Good		Very Good		Excellent	
1	2	3	4	5	6	7	8	9	10	

Company Name: _____

Technician Name: _____

Address: _____

Phone: _____

Fax No.: _____

Dealer Acct. No.: _____

THANK YOU!

Introduction

Contents

SECTION 00—General Information

- Group 01—Safety
- Group 0003—Torque Values

00

SECTION 01—Tracks

- Group 0130—Track System

01

SECTION 02—Axles, Differentials and Suspension Systems

- Group 0250—Axle Shaft, Bearings, and Reduction Gears
- Group 0260—Hydraulic System

02

SECTION 04—Engine

- Group 0400—Removal and Installation

SECTION 05—Engine Auxiliary System

- Group 0510—Cooling System
- Group 0520—Intake System
- Group 0560—External Fuel Supply System

04

SECTION 07—Dampener Drive (Flex Coupling)

- Group 0752—Elements

05

SECTION 17—Frame or Supporting Structure

- Group 1740—Frame Installation
- Group 1749—Chassis Weights

07

SECTION 18—Operator's Station

- Group 1800—Removal and Installation
- Group 1810—Operator Enclosure
- Group 1821—Seat and Seat Belt
- Group 1830—Heating and Air Conditioning

17

SECTION 33—Excavator

- Group 3302—Buckets
- Group 3340—Frames
- Group 3360—Hydraulic System

18

SECTION 43—Swing or Pivoting System

- Group 4350—Mechanical Drive Elements
- Group 4360—Hydraulic System

43

SECTION 99—Dealer Fabricated Tools

- Group 9900—Dealer Fabricated Tools

33

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2008
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright © 2007

43

Contents

00

01

02

04

05

07

17

18

33

43

Contents

99

INDX

Contents

99

INDX

Section 00 General Information

Contents

	Page
Group 01—Safety00-01-1
Group 0003—Torque Values	
Torque Value	
Metric Bolt and Cap Screw00-0003-1
Additional Metric Cap Screw Torque Values00-0003-2
Torque Value	
Unified Inch Bolt and Cap Screw00-0003-4
Service Recommendations for 37° Flare and 30° Cone Seat Connectors00-0003-5
Service Recommendations for O-Ring Boss Fittings00-0003-6
Service Recommendation	
O-Ring Boss Fittings In Aluminum Housing—Excavators00-0003-8
Service Recommendations For Flared Connections—Straight or Tapered Threads00-0003-10
Service Recommendations For Flat Face O-Ring Seal Fittings00-0003-11
Service Recommendation	
O-Ring Face Seal Fittings with SAE Inch Hex Nut and Stud End for High Pressure00-0003-12
O-Ring Face Seal Fittings with Metric Hex Nut and Stud End for Standard Pressure00-0003-14
O-Ring Face Seal Fittings with Metric Hex Nut and Stud End for High Pressure00-0003-16
Service Recommendations for Metric Series Four Bolt Flange Fitting00-0003-18
Service Recommendations For Inch Series Four Bolt Flange Fittings00-0003-19
Service Recommendation	
Inch Series Four Bolt Flange For High Pressure00-0003-20

Contents

00

Recognize Safety Information

This is the safety alert symbol. When this symbol is noticed on the machine or in this manual, be alert for the potential of personal injury.

Follow the precautions and safe operating practices highlighted by this symbol.

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

On the machine, DANGER signs are red in color, WARNING signs are orange, and CAUTION signs are yellow. DANGER and WARNING signs are located near specific hazards. General precautions are on CAUTION labels.



T1133555 -UN-28AUG00


T1133588 -19-28AUG00

TX03679.00016CC -19-03JAN07-1/1

Follow Safety Instructions

Read the safety messages in this manual and on the machine. Follow these warnings and instructions carefully. Review them frequently.

Be sure all operators of this machine understand every safety message. Replace operator's manual and safety labels immediately if missing or damaged.

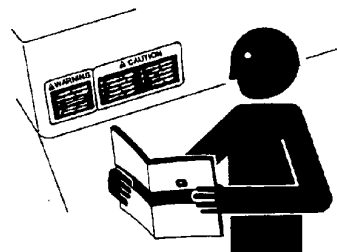

T1133556 -UN-24AUG00

TX03679.00016F9 -19-03JAN07-1/1

Operate Only If Qualified

Do not operate this machine unless the operator's manual has been read carefully, and you have been qualified by supervised training and instruction.

Operator should be familiar with the job site and surroundings before operating. Try all controls and

machine functions with the machine in an open area before starting to work.

Know and observe all safety rules that may apply to every work situation and work site.

TX03679.00016FA -19-08JAN08-1/1


00
01
2

Wear Protective Equipment

Guard against injury from flying pieces of metal or debris; wear goggles or safety glasses.

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protection such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

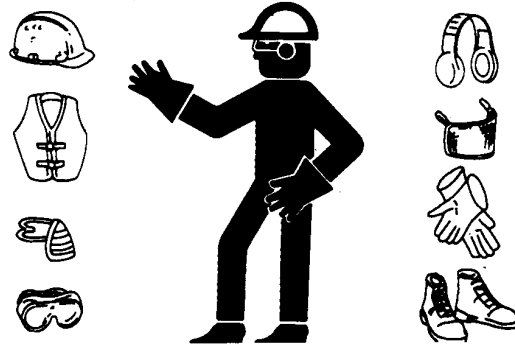

TS206 -UN-23AUG88

TX03679,00016D0 -19-03JAN07-1/1

Avoid Unauthorized Machine Modifications

John Deere recommends using only genuine John Deere replacement parts to ensure machine performance. Never substitute genuine John Deere parts with alternate parts not intended for the application as these can create hazardous situations or hazardous performance. Non-John Deere Parts, or any damage or failures resulting from their use are not covered by any John Deere warranty.

Modifications of this machine, or addition of unapproved products or attachments, may affect


machine stability or reliability, and may create a hazard for the operator or others near the machine. The installer of any modification which may affect the electronic controls of this machine is responsible for establishing that the modification does not adversely affect the machine or its performance.

Always contact an authorized dealer before making machine modifications that change the intended use, weight or balance of the machine, or that alter machine controls, performance or reliability.

AM40430,00000A9 -19-17JUL07-1/1

Add Cab Guarding for Special Uses

Special work situations or machine attachments may create an environment with falling or flying objects. Working near an overhead bank, doing demolition work, using a hydraulic hammer, or working in a wooded area, for example, may require added guarding to protect the operator.

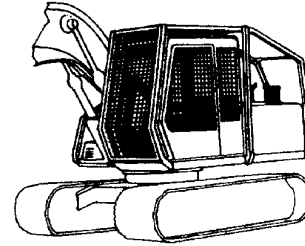

FOPS (falling object protective structures) and special screens or guarding should be installed when falling or flying objects may enter or damage the machine. Contact your authorized dealer for information on devices intended to provide protection in special work situations.

T1133733 -JUN-15SEP00

TX03679.00016CE -19-03JAN07-1/1

Inspect Machine

Inspect machine carefully each day by walking around it before starting.

Keep all guards and shields in good condition and properly installed. Fix damage and replace worn or broken parts immediately. Pay special attention to hydraulic hoses and electrical wiring.



T6607AQ -JUN-18OCT88


TX03679.0001734 -19-03JAN07-1/1

Stay Clear of Moving Parts

Entanglements in moving parts can cause serious injury.

Stop engine before examining, adjusting or maintaining any part of machine with moving parts.

Keep guards and shields in place. Replace any guard or shield that has been removed for access as soon as service or repair is complete.

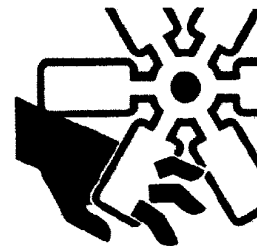

T1133592 -JUN-12SEP01

TX03679.00016D2 -19-03JAN07-1/1

00
01
4


Avoid High-Pressure Fluids

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

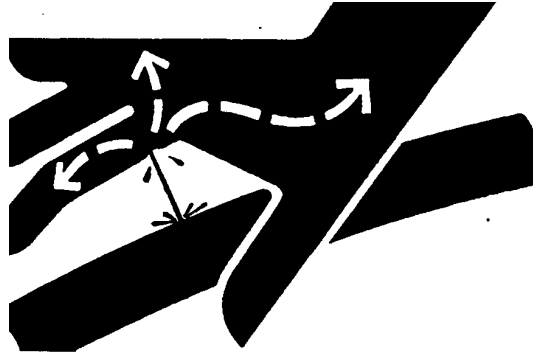

X9811 -UN-23AUG88

DX,FLUID -19-03MAR93-1/1

Avoid High-Pressure Oils


This machine uses a high-pressure hydraulic system. Escaping oil under pressure can penetrate the skin causing serious injury.

Never search for leaks with your hands. Protect hands. Use a piece of cardboard to find location of escaping oil. Stop engine and relieve pressure before disconnecting lines or working on hydraulic system.

If hydraulic oil penetrates your skin, see a doctor immediately. Injected oil must be removed surgically within hours or gangrene may result. Contact a knowledgeable medical source or the Deere & Company Medical Department in Moline, Illinois, U.S.A.



T133509 -UN-17MAR06

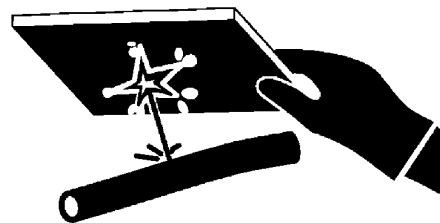


T133840 -UN-20SEP00

TX03679,00016D3 -19-01OCT07-1/1

Beware of Exhaust Fumes

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in a building, provide adequate ventilation. Use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring outside air into the area.

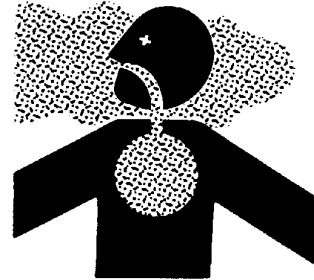

T133546 -UN-24AUG00

TX03679.00016D4 -19-03JAN07-1/1


Prevent Fires

Handle Fuel Safely: Store flammable fluids away from fire hazards. Never refuel machine while smoking or when near sparks or flame.

Clean Machine Regularly: Keep trash, debris, grease and oil from accumulating in engine compartment, around fuel lines, hydraulic lines and electrical wiring. Never store oily rags or flammable materials inside a machine compartment.

Maintain Hoses and Wiring: Replace hydraulic hoses immediately if they begin to leak, and clean up any oil spills. Examine electrical wiring and connectors frequently for damage.

Keep A Fire Extinguisher Available: Always keep a multipurpose fire extinguisher on or near the machine. Know how to use extinguisher properly.

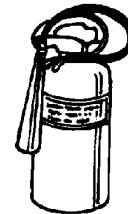

T133552 -UN-14SEP00

T133553 -UN-07SEP00

T133554 -UN-07SEP00

TX03679.00016F5 -19-08MAR07-1/1

Prevent Battery Explosions

Battery gas can explode. Keep sparks, lighted matches, and open flame away from the top of battery.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 -UN-23AUG88

TX03679.000174A -19-03JAN07-1/1

Click on the image link below for the full version of the service manual

