

# **135D Excavator Operation and Test**

## **OPERATION & TEST TECHNICAL MANUAL**

**135D Excavator**

**TM10742 16AUG19 (ENGLISH)**

<https://johndeere.com>


**Worldwide Construction  
And Forestry Division**  
PRINTED IN U.S.A.

# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC -19-15APR14-1/1

<https://johndeeremanual.com>

### Technical Information Feedback Form

We need your help to continually improve our technical publications. Please copy this page and FAX or mail your comments, ideas and improvements.

**SEND TO:** John Deere Dubuque Works  
18600 South John Deere Road  
Attn: Publications, Dept. 324  
Dubuque, IA 52004-0538  
USA

**FAX NUMBER:** 1-563-589-5800 (USA)

Publication Number: \_\_\_\_\_

Page Number: \_\_\_\_\_

Ideas, Comments: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

<https://johndeeremanual.com>

Name: \_\_\_\_\_

Phone: \_\_\_\_\_

Email Address: \_\_\_\_\_

**THANK YOU!**

TX,TM,FAX -19-03JUL01-1/1

<https://johndeeremanual.com>

# Contents

## Section 9000—General Information

Group 01—Safety

Group 99—Dealer Fabricated Tools

## Section 9001—Diagnostics

Group 10—Main Controller (MCF) Diagnostic Trouble Codes

Group 20—Engine Control Module (ECM) Diagnostic Trouble Codes

Group 30—Information Controller (ICF) Diagnostic Trouble Codes

Group 40—Air Conditioner Controller (ACF) Diagnostic Trouble Codes

Group 50—Monitor Controller (MON) Diagnostic Trouble Codes

## Section 9005—Operational Checkout Procedure

Group 10—Operational Checkout Procedure

## Section 9010—Engine

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 25—Tests

## Section 9015—Electrical System

Group 05—System Information

Group 10—System Diagrams

Group 15—Sub-System Diagnostics

Group 16—Monitor Operation

Group 20—References

## Section 9020—Power Train

Group 05—Theory of Operation

Group 15—Diagnostic Information

## Section 9025—Hydraulic System

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 25—Tests

## Section 9031—Heating and Air Conditioning

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 25—Tests

## Section 9050—Reference Material

Group 05—Terminology Cross Reference Chart

## Section 9900—Dealer Fabricated Tools

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication.*

*The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2019  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright © 2008, 2010, 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2018

<https://johndeeremanual.com>

**Section 9000  
General Information**

**Contents**

	Page
<b>Group 01—Safety</b>	
Recognize Safety Information .....	9000-01-1
Follow Safety Instructions.....	9000-01-1
Operate Only If Qualified .....	9000-01-1
Wear Protective Equipment.....	9000-01-1
Avoid Unauthorized Machine Modifications.....	9000-01-2
Add Cab Guarding for Special Uses .....	9000-01-2
Inspect Machine .....	9000-01-2
Stay Clear of Moving Parts.....	9000-01-2
Avoid High-Pressure Fluids .....	9000-01-3
Avoid High-Pressure Oils .....	9000-01-3
Beware of Exhaust Fumes .....	9000-01-4
Prevent Fires .....	9000-01-4
Prevent Battery Explosions .....	9000-01-4
Handle Chemical Products Safely.....	9000-01-5
Dispose of Waste Properly .....	9000-01-5
Prepare for Emergencies.....	9000-01-5
Use Steps and Handholds Correctly .....	9000-01-5
Start Only From Operator's Seat.....	9000-01-6
Use and Maintain Seat Belt.....	9000-01-6
Prevent Unintended Machine Movement.....	9000-01-6
Avoid Work Site Hazards.....	9000-01-7
Keep Riders Off Machine .....	9000-01-7
Avoid Backover Accidents .....	9000-01-8
Avoid Machine Tip Over .....	9000-01-8
Use Special Care When Lifting Objects .....	9000-01-9
Add and Operate Attachments Safely.....	9000-01-9
Prevent Unintended Detonation of Explosive Devices .....	9000-01-9
Park and Prepare for Service Safely.....	9000-01-10
Service Cooling System Safely .....	9000-01-10
Remove Paint Before Welding or Heating .....	9000-01-11
Make Welding Repairs Safely .....	9000-01-11
Drive Metal Pins Safely .....	9000-01-11

https://www.deeremmanual.com

<https://johndeeremanual.com>



### Recognize Safety Information

This is the safety alert symbol. When this symbol is noticed on the machine or in this manual, be alert for the potential of personal injury.

Follow the precautions and safe operating practices highlighted by this symbol.

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

On the machine, DANGER signs are red in color, WARNING signs are orange, and CAUTION signs are yellow. DANGER and WARNING signs are located near specific hazards. General precautions are on CAUTION labels.



T133555 —UN—15APR13  
T133588 —19—28AUG00

TX03679,00016CC -19-03JAN07-1/1

### Follow Safety Instructions

Read the safety messages in this manual and on the machine. Follow these warnings and instructions carefully. Review them frequently.

Keep safety signs in good condition.

Be sure new equipment components and repair parts include the current safety signs.

Be sure all operators of this machine understand every safety message. Replace operator's manual and safety signs immediately if missing or damaged. Replacement safety signs are available from your authorized dealer.

TX14740,0000019 -19-10JAN07-1/1

### Operate Only If Qualified

Do not operate this machine unless the operator's manual has been read carefully, and you have been qualified by supervised training and instruction.

Operator should be familiar with the job site and surroundings before operating. Try all controls and

machine functions with the machine in an open area before starting to work.

Know and observe all safety rules that may apply to every work situation and work site.


TX03679,00016FA -19-03JAN07-1/1

### Wear Protective Equipment

Guard against injury from flying pieces of metal or debris; wear goggles or safety glasses.

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protection such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

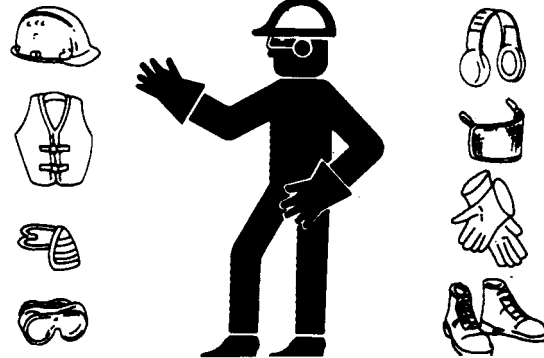

T5206 —UN—15APR13

TX03679,00016D0 -19-03JAN07-1/1

## Avoid Unauthorized Machine Modifications

John Deere recommends using only genuine John Deere replacement parts to ensure machine performance. Never substitute genuine John Deere parts with alternate parts not intended for the application as these can create hazardous situations or hazardous performance. Non-John Deere parts, or any damage or malfunctions resulting from their use, are not covered by any John Deere warranty.

Modifications of this machine, or addition of unapproved products or attachments, may affect machine stability or

reliability, and may create a hazard for the operator or others near the machine. The installer of any modification which may affect the electronic controls of this machine is responsible for establishing that the modification does not adversely affect the machine or its performance.


Always contact an authorized dealer before making machine modifications that change the intended use, weight or balance of the machine, or that alter machine controls, performance, or reliability.

AM40430,00000A9 -19-01JUL15-1/1

## Add Cab Guarding for Special Uses

Special work situations or machine attachments may create an environment with falling or flying objects. Working near an overhead bank, doing demolition work, using a hydraulic hammer, or working in a wooded area, for example, may require added guarding to protect the operator.

FOPS (falling object protective structures) and special screens or guarding should be installed when falling or flying objects may enter or damage the machine. Contact your authorized dealer for information on devices intended to provide protection in special work situations.

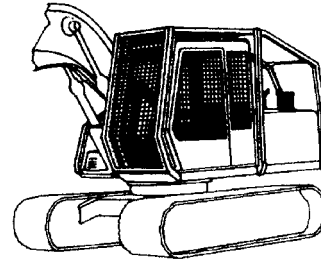

T133733—UN—15SEP00

TX03679,00016CE -19-03JAN07-1/1

## Inspect Machine

Inspect machine carefully each day by walking around it before starting.

Inspect and Clean the Polycarbonate Windows. See Inspect and Clean Polycarbonate Windows. (Section 4-1.)

Keep all guards and shields in good condition and properly installed. Fix damage and replace worn or broken parts immediately. Pay special attention to hydraulic hoses and electrical wiring.



T6607AQ—UN—15APR13


TX03679,0001734 -19-17DEC14-1/1

## Stay Clear of Moving Parts

Entanglements in moving parts can cause serious injury.

Stop engine before examining, adjusting or maintaining any part of machine with moving parts.

Keep guards and shields in place. Replace any guard or shield that has been removed for access as soon as service or repair is complete.

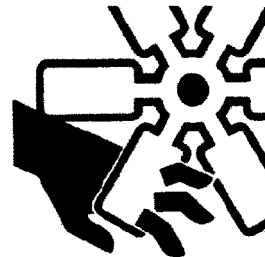

T133592—UN—15APR13

TX03679,00016D2 -19-03JAN07-1/1

### Avoid High-Pressure Fluids

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.


Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar

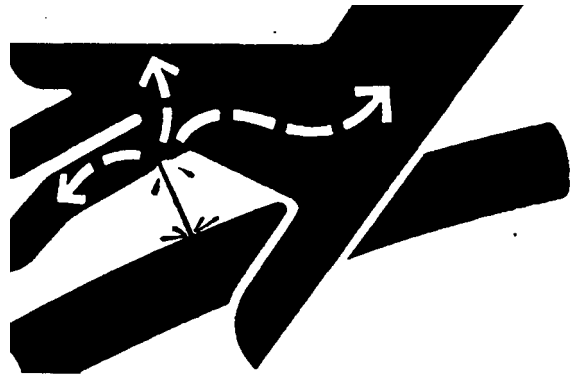

with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

DX,FLUID -19-12OCT11-1/1


X9811 —UN—23AUG88

### Avoid High-Pressure Oils

This machine uses a high-pressure hydraulic system. Escaping oil under pressure can penetrate the skin causing serious injury.

**Never search for leaks with your hands.** Protect hands. Use a piece of cardboard to find location of escaping oil. Stop engine and relieve pressure before disconnecting lines or working on hydraulic system.

**If hydraulic oil penetrates your skin, see a doctor immediately. Injected oil must be removed surgically within hours or gangrene may result.** Contact a knowledgeable medical source or the Deere & Company Medical Department in Moline, Illinois, U.S.A.

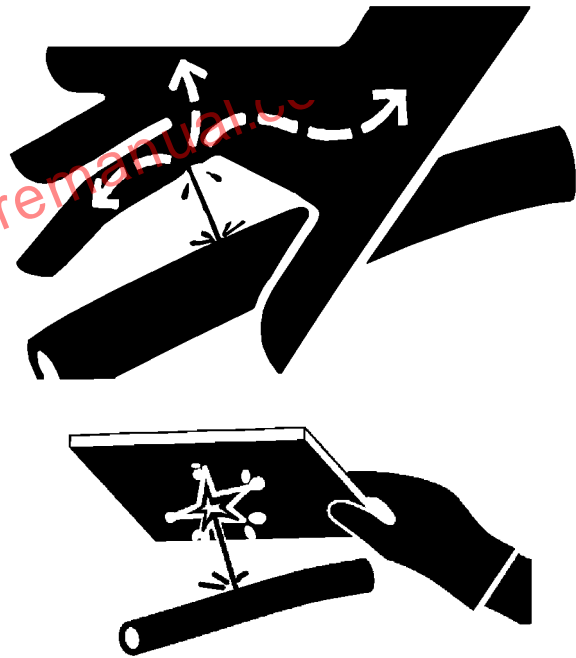

TX03679,00016D3 -19-03NOV08-1/1


T133509 —UN—15APR13

T133840 —UN—20SEP00

### Beware of Exhaust Fumes

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in an enclosed space, provide adequate ventilation. Use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring outside air into the area.

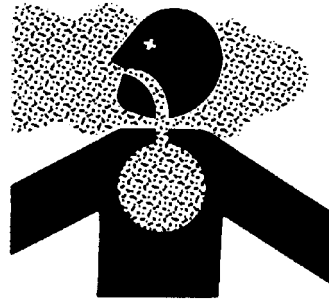

TX03679.00016D4 -19-03NOV08-1/1

T133546 —UN—24AUG00

### Prevent Fires

**Handle Fuel Safely:** Store flammable fluids away from fire hazards. Never refuel machine while smoking or when near sparks or flame.

**Clean Machine Regularly:** Keep trash, debris, grease and oil from accumulating in engine compartment, around fuel lines, hydraulic lines, exhaust components, and electrical wiring. Never store oily rags or flammable materials inside a machine compartment.

**Maintain Hoses and Wiring:** Replace hydraulic hoses immediately if they begin to leak, and clean up any oil spills. Examine electrical wiring and connectors frequently for damage.

**Keep A Fire Extinguisher Available:** Always keep a multipurpose fire extinguisher on or near the machine. Know how to use extinguisher properly.



T133553 —UN—07SEP00



T133554 —UN—07SEP00



TX03679.00016F5 -19-03NOV08-1/1

T133552 —UN—15APR13

### Prevent Battery Explosions

Battery gas can explode. Keep sparks, lighted matches, and open flame away from the top of battery.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).




TX03679.000174A -19-03NOV08-1/1

TS204 —UN—15APR13

### Handle Chemical Products Safely

Exposure to hazardous chemicals can cause serious injury. Under certain conditions, lubricants, coolants, paints and adhesives used with this machine may be hazardous.

If uncertain about safe handling or use of these chemical products, contact your authorized dealer for a Material Safety Data Sheet (MSDS) or go to internet website <http://www.jdmsds.com>. The MSDS describes physical and health hazards, safe use procedures, and emergency response techniques for chemical substances. Follow

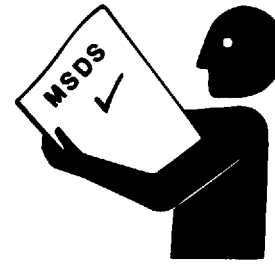

MSDS recommendations to handle chemical products safely.

TX03679,00016D7 -19-03JAN07-1/1

T133580 —UN—25AUG00


### Dispose of Waste Properly

Improper disposal of waste can threaten the environment. Fuel, oils, coolants, filters and batteries used with this machine may be harmful if not disposed of properly.

Never pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants can damage the atmosphere. Government regulations may require using a certified service center to recover and recycle used refrigerants.

If uncertain about the safe disposal of waste, contact your local environmental or recycling center or your authorized dealer for more information.

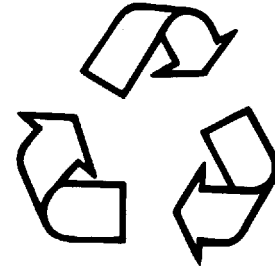

TX03679,0001733 -19-03JAN07-1/1


T133567 —UN—25AUG00

### Prepare for Emergencies

Be prepared if an emergency occurs or a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

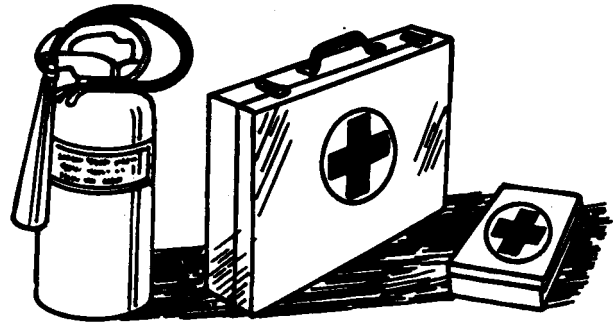


TX03679,000174B -19-03JAN07-1/1

TS291 —UN—15APR13

### Use Steps and Handholds Correctly

Prevent falls by facing the machine when getting on and off. Maintain 3-point contact with steps and handrails. Never use machine controls as handholds.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

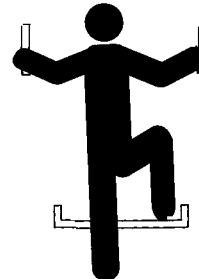

TX03679,00016F2 -19-24APR13-1/1

T133468 —UN—15APR13

### Start Only From Operator's Seat

Avoid unexpected machine movement. Start engine only while sitting in operator's seat. Ensure all controls and working tools are in proper position for a parked machine.

Never attempt to start engine from the ground. Do not attempt to start engine by shorting across the starter solenoid terminals.



T133715 —UN—15APR13

TX03679,0001799 -19-22APR10-1/1

### Use and Maintain Seat Belt

**Use seat belt when operating machine.** Remember to fasten seat belt when loading and unloading from trucks and during other uses.

Examine seat belt frequently. Be sure webbing is not cut or torn. Replace seat belt immediately if any part is damaged or does not function properly.

**The complete seat belt assembly should be replaced every 3 years, regardless of appearance.**



**USE  
SEAT  
BELT**


T133716 —19—17APR13

TX03679,00016DD -19-03NOV08-1/1

### Prevent Unintended Machine Movement

Be careful not to accidentally actuate control levers when coworkers are present. Pull pilot control shutoff lever to locked position during work interruptions. Pull pilot control shutoff lever to locked position and stop engine before allowing anyone to approach machine.

Always lower work equipment to the ground and pull pilot control shutoff lever to locked position before standing up or leaving the operator's seat. Stop engine before exiting.

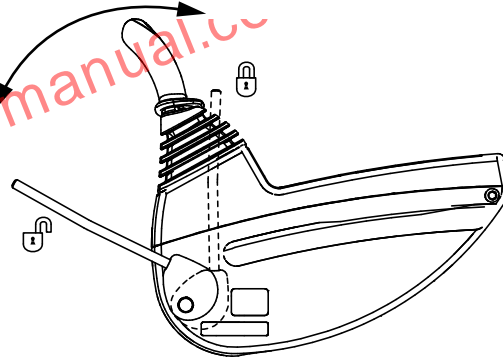

T216779 —UN—22NOV05

DW90712,00002C1 -19-07MAR08-1/1

## Avoid Work Site Hazards

**Avoid contact with gas lines, buried cables, and water lines. Call utility line location services to identify all underground utilities before digging.**


**Prepare work site properly.** Avoid operating near structures or objects that could fall onto the machine. Clear away debris that could move unexpectedly if run over.

**Avoid boom or arm contact with overhead obstacles or overhead electrical lines.** Never move any part of machine or load closer than 3 m (10 ft) plus twice the line insulator length to overhead wires.


**Keep bystanders clear at all times.** Keep bystanders away from raised booms, attachments, and unsupported loads. Avoid swinging or raising booms, attachments, or loads over or near bystanders. Use barricades or a signal person to keep vehicles and pedestrians away. Use a signal person if moving machine in congested areas or where visibility is restricted. Always keep signal person in view. Coordinate hand signals before starting machine.

**Operate only on solid footing** with strength sufficient to support machine. When working close to an excavation, position travel motors away from the hole.

**Reduce machine speed** when operating with tool on or near ground when obstacles may be hidden (e.g., during snow removal or clearing mud, dirt, etc). At high speeds, hitting obstacles (rocks, uneven concrete, or manholes) can cause a sudden stop. Always wear seat belt.

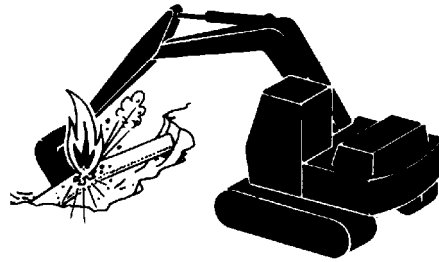

Work Site Hazards

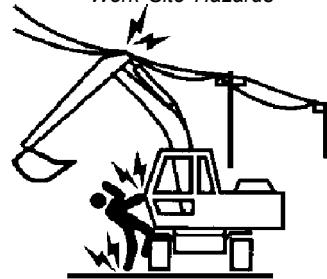

Work Site Hazards



Work Site Hazards

TX03679,0001748 -19-08JUL15-1/1

T134986—UN—31OCT00

T133650—UN—27SEP00


T133549—UN—24AUG00

## Keep Riders Off Machine

Only allow operator on machine.

Riders are subject to injury. They may fall from machine, be caught between machine parts, or be struck by foreign objects.

Riders may obstruct operator's view or impair the ability to operate machine safely.

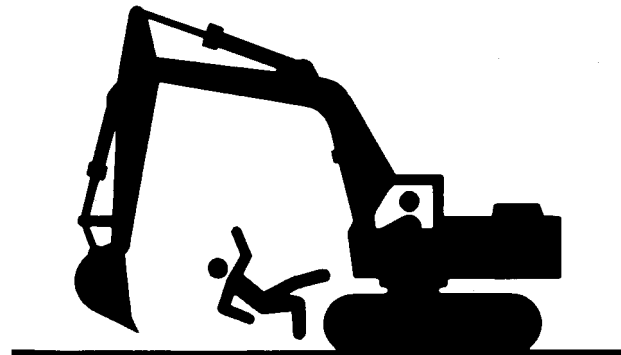

Keep Riders Off Machine

TX03679,0001726 -19-30JUN16-1/1


T7273AH—UN—08JUN90

### Avoid Backover Accidents

**Before moving machine, be sure all persons are clear of both travel and swing paths.** Turn around and look directly for best visibility. Use mirrors to assist in checking all around machine. Keep windows and mirrors clean, adjusted, and in good repair.

**Be certain travel alarm is working properly.**

**Use a signal person when backing if view is obstructed or when in close quarters.** Keep signal person in view at all times. Use prearranged hand signals to communicate.

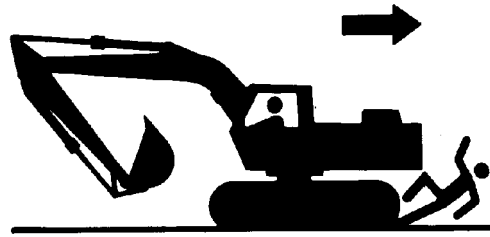

T133548 —UN—24AUG00

TX03679,00016F3 -19-03JAN07-1/1

### Avoid Machine Tip Over

**Use seat belt at all times.**

**Do not jump if the machine tips.** Operator will be unlikely to jump clear and the machine may crush the operator.

**Load and unload from trucks or trailers carefully.** Be sure truck is wide enough and on a firm level surface. Use loading ramps and attach them properly to truck bed. Avoid trucks with steel beds because tracks slip more easily on steel.


**Be careful on slopes.** Use extra care on soft, rocky or frozen ground. Machine may slip sideways in these conditions. When traveling up or down slopes, keep the bucket on uphill side and just above ground level.

**Be careful with heavy loads.** Using oversize buckets or lifting heavy objects reduces machine stability. Extending a heavy load or swinging it over side of undercarriage may cause machine to tip.


**Ensure solid footing.** Use extra care when operating near banks or excavations that may cave-in and cause machine to tip or fall.



Use Seat Belt

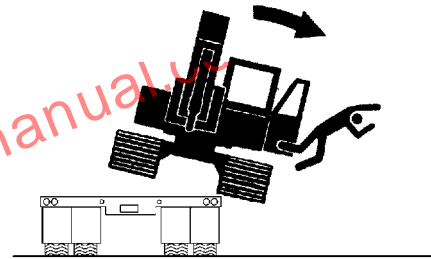

Unloading Machine

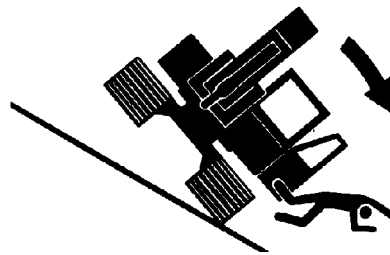

Do Not Jump

T133716 —19—17APR13

T133545 —UN—15SEP00

T133803 —UN—27SEP00

TX03679,00016DF -19-30JUN16-1/1




### Use Special Care When Lifting Objects

Never use this machine to lift people.

Never lift a load above another person. Keep bystanders clear of all areas where a load might fall if it breaks free. Do not leave the seat when there is a raised load.

Do not exceed lift capacity limits posted on machine and in this manual. Extending heavy loads too far or swinging over undercarriage side may cause machine to tip over.

Use proper rigging to attach and stabilize loads. Be sure slings or chains have adequate capacity and are in good condition. Use tether lines to guide loads and prearranged hand signals to communicate with co-workers.

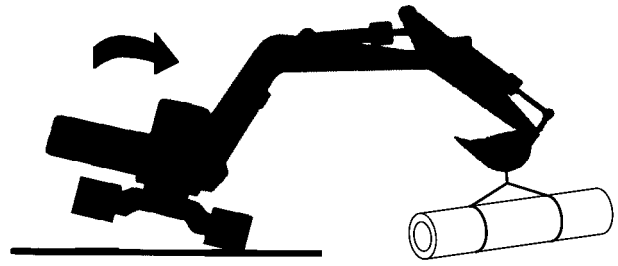

Use Special Care When Lifting Objects

T133839 —UN—27SEP00

TX03679,00016E1 -19-08JUL15-1/1

### Add and Operate Attachments Safely

Always verify compatibility of attachments by contacting your authorized dealer. Adding unapproved attachments may affect machine stability or reliability and may create a hazard for others near the machine.

Ensure that a qualified person is involved in attachment installation. Add guards to machine if operator protection



is required or recommended. Verify that all connections are secure and attachment responds properly to controls.

Carefully read attachment manual and follow all instructions and warnings. In an area free of bystanders and obstructions, carefully operate attachment to learn its characteristics and range of motion.

TX03679,00016F0 -19-12FEB07-1/1

### Prevent Unintended Detonation of Explosive Devices

Avoid serious injury or death from an explosion hazard. Deactivate all cellular or radio frequency devices on equipment stored or operating in an area, such as a blasting zone, where the use of radio transmitting devices are prohibited.

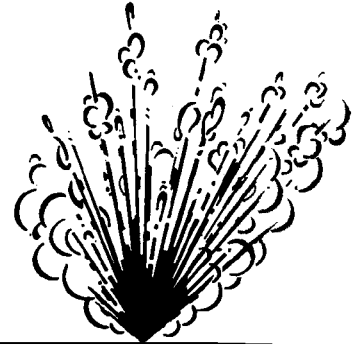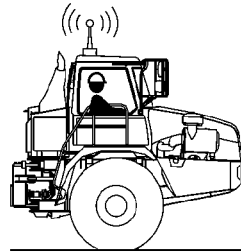

TX1023216 —UN—07MAY07

VD76477,0001543 -19-08JAN08-1/1

### Park and Prepare for Service Safely



**Warn others of service work.** Always park and prepare your machine for service or repair properly.

- Park machine on a level surface and lower equipment and attachments to the ground.
- Place pilot shutoff lever in “lock” position. Stop engine and remove key.
- Attach a “Do Not Operate” tag in an obvious place in the operator’s station.

Securely support machine or attachment before working under it.

- Do not support machine with boom, arm, or other hydraulically actuated attachments.
- Do not support machine with cinder blocks or wooden pieces that may crumble or crush.
- Do not support machine with a single jack or other devices that may slip out of place.

Understand service procedures before beginning repairs. Keep service area clean and dry. Use two people whenever the engine must be running for service work.

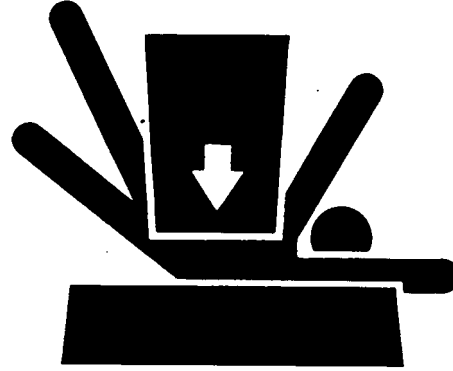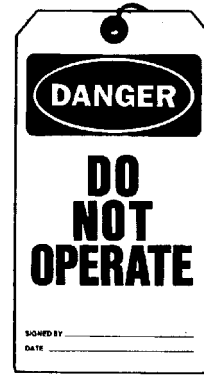

T133332 —19—17APR13

TS229 —UN—23AUG88

TX03679,00016E9 -19-03JAN07-1/1

### Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



TS281 —UN—15APR13

DX,RCAP -19-04JUN90-1/1

## Remove Paint Before Welding or Heating


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

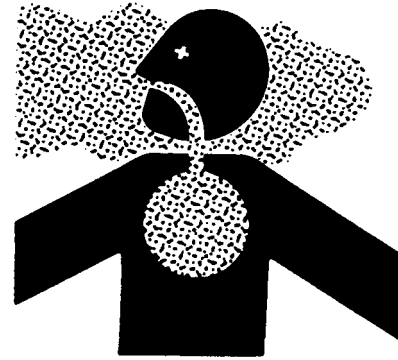

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX,PAINT -19-24JUL02-1/1

TS220—UN—15APR13

## Make Welding Repairs Safely

**IMPORTANT: Disable electrical power before welding. Turn off main battery switch or disconnect positive battery cable. Separate harness connectors to engine and vehicle microprocessors.**

Avoid welding or heating near pressurized fluid lines. Flammable spray may result and cause severe burns if pressurized lines fail as a result of heating. Do not let heat go beyond work area to nearby pressurized lines.

Remove paint properly. Do not inhale paint dust or fumes. Use a qualified welding technician for structural repairs.



Make sure there is good ventilation. Wear eye protection and protective equipment when welding.


TX03679,00016D5 -19-25APR08-1/1

T133547—UN—15APR13

## Drive Metal Pins Safely

Always wear protective goggles or safety glasses and other protective equipment before striking hardened parts. Hammering hardened metal parts such as pins and bucket teeth may dislodge chips at high velocity.

Use a soft hammer or a brass bar between hammer and object to prevent chipping.

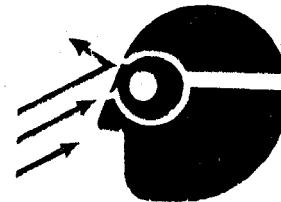

TX03679,0001745 -19-03JAN07-1/1

T133738—UN—15APR13

<https://johndeeremanual.com>

## Section 9001 Diagnostics

### Contents

	Page		Page
<b>Group 10—Main Controller (MCF)</b>			
<b>Diagnostic Trouble Codes</b>			
Main Controller (MCF) Diagnostic Trouble Codes .....	9001-10-1	11206.04 — Pump 1 Control Pressure Sensor Voltage Low .....	9001-10-27
11000.02 — Abnormal EEPROM .....	9001-10-1	Pump 1 Control Pressure Sensor Diagnostics .....	9001-10-27
Controller Hardware Diagnostics .....	9001-10-1	11208.03 — Pump 2 Control Pressure Sensor Voltage High .....	9001-10-29
11001.02 — Abnormal RAM .....	9001-10-1	Pump 2 Control Pressure Sensor Diagnostics .....	9001-10-29
Controller Hardware Diagnostics .....	9001-10-1	11208.04 — Pump 2 Control Pressure Sensor Voltage Low .....	9001-10-30
11002.02 — Abnormal A/D Conversion .....	9001-10-2	Pump 2 Control Pressure Sensor Diagnostics .....	9001-10-30
Controller Hardware Diagnostics .....	9001-10-2	11301.03 — Swing Pilot Pressure Sensor Voltage High .....	9001-10-32
11003.03 — Abnormal Sensor Voltage .....	9001-10-3	Swing Pilot Pressure Sensor Diagnostics .....	9001-10-32
Abnormal Sensor Voltage Diagnostic Procedure .....	9001-10-3	11301.04 — Swing Pilot Pressure Sensor Voltage Low .....	9001-10-33
11004.02 — Abnormal CAN Communication .....	9001-10-4	Swing Pilot Pressure Sensor Diagnostics .....	9001-10-34
Controller Area Network (CAN) Diagnostics .....	9001-10-4	11302.03 — Boom Up Pilot Pressure Sensor Voltage High .....	9001-10-35
11100.02 — Abnormal Engine Speed .....	9001-10-14	Boom Up Pilot Pressure Sensor Diagnostics .....	9001-10-35
Engine Speed Diagnostics .....	9001-10-14	11302.04 — Boom Up Pilot Pressure Sensor Voltage Low .....	9001-10-36
11101.03 — Engine Control Dial Voltage High .....	9001-10-15	Boom Up Pilot Pressure Sensor Diagnostics .....	9001-10-37
Engine Speed Dial Diagnostics .....	9001-10-15	11303.03 — Arm In Pilot Pressure Sensor Voltage High .....	9001-10-38
11101.04 — Engine Control Dial Voltage Low .....	9001-10-17	Arm In Pilot Pressure Sensor Diagnostics .....	9001-10-38
Engine Speed Dial Diagnostics .....	9001-10-17	11303.04 — Arm In Pilot Pressure Sensor Voltage Low .....	9001-10-39
11200.03 — Pump 1 Delivery Pressure Sensor Voltage High .....	9001-10-19	Arm In Pilot Pressure Sensor Diagnostics .....	9001-10-40
Pump 1 Delivery Pressure Sensor Diagnostics .....	9001-10-19	11304.03 — Travel Pilot Pressure Sensor Voltage High .....	9001-10-41
11200.04 — Pump 1 Delivery Pressure Sensor Voltage Low .....	9001-10-20	Travel Pilot Pressure Sensor Diagnostics .....	9001-10-41
Pump 1 Delivery Pressure Sensor Diagnostics .....	9001-10-20	11304.04 — Travel Pilot Pressure Sensor Voltage Low .....	9001-10-42
11202.03 — Pump 2 Delivery Pressure Sensor Voltage High .....	9001-10-22	Travel Pilot Pressure Sensor Diagnostics .....	9001-10-43
Pump 2 Delivery Pressure Sensor Diagnostics .....	9001-10-22	11307.03 — Front Attachment Pilot Pressure Sensor Voltage High .....	9001-10-44
11202.04 — Pump 2 Delivery Pressure Sensor Voltage Low .....	9001-10-24	Front Attachment Pilot Pressure Sensor Diagnostics .....	9001-10-44
Pump 2 Delivery Pressure Sensor Diagnostics .....	9001-10-24		
11206.03 — Pump 1 Control Pressure Sensor Voltage High .....	9001-10-25		
Pump 1 Control Pressure Sensor Diagnostics .....	9001-10-25		

Continued on next page

Page	Page		
11307.04 — Front Attachment Pilot Pressure Sensor Voltage Low.....	9001-10-45	Travel Speed Solenoid Diagnostics.....	9001-10-56
Front Attachment Pilot Pressure Sensor Diagnostics.....	9001-10-46	11901.03 — Hydraulic Oil Temperature Sensor Voltage High.....	9001-10-57
11400.02 — Pump 2 Flow Rate Limit Solenoid Current Feedback Abnormal.....	9001-10-47	Hydraulic Oil Temperature Sensor Diagnostics.....	9001-10-57
Pump 2 Flow Rate Limit Solenoid Diagnostics.....	9001-10-47	11901.04 — Hydraulic Oil Temperature Sensor Voltage Low.....	9001-10-58
11400.03 — Pump 2 Flow Rate Limit Solenoid Feedback Current High.....	9001-10-48	Hydraulic Oil Temperature Sensor Diagnostics.....	9001-10-58
Pump 2 Flow Rate Limit Solenoid Diagnostics.....	9001-10-48	11910.02 — Actual Engine Speed Message Error.....	9001-10-59
11400.04 — Pump 2 Flow Rate Limit Solenoid Feedback Current Low.....	9001-10-49	Controller Area Network (CAN) Diagnostics.....	9001-10-59
Pump 2 Flow Rate Limit Solenoid Diagnostics.....	9001-10-49	11911.02 — Security Signal Received from ECM.....	9001-10-61
11401.02 — Torque Control Solenoid Feedback Current Abnormal.....	9001-10-49	Controller Area Network (CAN) Diagnostics.....	9001-10-61
Torque Control Solenoid Diagnostics.....	9001-10-49	11914.02 — Radiator Coolant Temperature Message Error.....	9001-10-72
11401.03 — Torque Control Solenoid Feedback Current High.....	9001-10-50	Controller Area Network (CAN) Diagnostics.....	9001-10-72
Torque Control Solenoid Diagnostics.....	9001-10-50	11918.02 — Work Mode Received Message Error.....	9001-10-73
11401.04 — Torque Control Solenoid Feedback Current Low.....	9001-10-51	Controller Area Network (CAN) Diagnostics.....	9001-10-73
Torque Control Solenoid Diagnostics.....	9001-10-51	11920.02 — Fuel Flow Rate Message Error.....	9001-10-84
11403.02 — Arm Regenerative Solenoid Feedback Current Abnormal.....	9001-10-52	Controller Area Network (CAN) Diagnostics.....	9001-10-84
Arm Regenerative Solenoid Diagnostics.....	9001-10-52		
11403.03 — Arm Regenerative Solenoid Feedback Current High.....	9001-10-53	<b>Group 20—Engine Control Module (ECM) Diagnostic Trouble Codes</b>	
Arm Regenerative Solenoid Diagnostics.....	9001-10-53	Engine Control Module (ECM) Diagnostic Trouble Codes.....	9001-20-1
11403.04 — Arm Regenerative Solenoid Feedback Current Low.....	9001-10-54	100.03 — Engine Oil Pressure Sensor Voltage Low (P0522).....	9001-20-1
Arm Regenerative Solenoid Diagnostics.....	9001-10-54	100.04 — Engine Oil Pressure Sensor Voltage High (P0523).....	9001-20-1
11405.02 — Travel Speed Solenoid Feedback Current Abnormal.....	9001-10-54	102.03 — Boost Pressure Sensor Voltage Low (P0237).....	9001-20-1
Power Dig Solenoid Diagnostics.....	9001-10-55	102.04 — Boost Pressure Sensor Voltage High (P0238).....	9001-20-1
11405.03 — Travel Speed Solenoid Feedback Current High.....	9001-10-55	105.03 — Boost Temperature Sensor Voltage High (P1113).....	9001-20-1
Travel Speed Solenoid Diagnostics.....	9001-10-55	105.04 — Boost Temperature Sensor Voltage Low (P1112).....	9001-20-2
11405.04 — Travel Speed Solenoid Feedback Current Low.....	9001-10-56	108.03 — Barometric Pressure Sensor Voltage Low (P0107).....	9001-20-2
		108.04 — Barometric Pressure Sensor Voltage High (P0108).....	9001-20-2
		110.00 — Engine Coolant Temperature Above Normal—Most Severe (P1173).....	9001-20-2
		110.03 — Engine Coolant Temperature Sensor Voltage High (P0118).....	9001-20-2
		110.04 — Engine Coolant Temperature Sensor Voltage Low (P0117).....	9001-20-3

Continued on next page

Page	Page
157.00 — Common Rail Pressure—First Stage (P088) .....9001-20-3	1080.02 — 5 Volt Power Supply #2 Malfunction (P1632).....9001-20-8
157.00 — Common Rail Pressure—Second Stage (P088) .....9001-20-3	1239.01 — No Pump Pressure—First Stage (P0087).....9001-20-8
157.02 — Common Rail Pressure High (P0089) .....9001-20-3	1240.01 — No Pump Pressure Feed—Second Stage (P1093) .....9001-20-9
157.03 — Common Rail Pressure Sensor Voltage High (P0193) .....9001-20-4	1347.00 — SCV #1 Open Circuit or Short to Ground (P0090).....9001-20-9
157.04 — Common Rail Pressure Sensor Voltage Low (P0192) .....9001-20-4	1381.03 — High Voltage Fault of Fuel Filter Restriction Sensor .....9001-20-9
172.03 — Intake Air Temperature Sensor Voltage High (P0113).....9001-20-4	1381.04 — Low Voltage Fault of Fuel Filter Restriction Sensor .....9001-20-9
172.04 — Intake Air Temperature Sensor Voltage Low (P0112).....9001-20-4	1485.02 — Engine Control Module Relay Malfunction (P1625).....9001-20-9
174.03 — Fuel Temperature Sensor Voltage High (P0183).....9001-20-4	10001.03 — EGR Position Sensor Malfunction (P0487).....9001-20-10
174.04 — Fuel Temperature Sensor Voltage Low (P0182).....9001-20-5	10002.02 — EGR Valve Control Malfunction (P0488).....9001-20-10
190.00 — Engine Overspeed (P0219) .....9001-20-5	10003.02 — Injection Nozzle Common #1 Malfunction (P1261) .....9001-20-10
628.02 — ROM Malfunction (P0601) .....9001-20-5	10004.02 — Injection Nozzle Common #2 Malfunction (P1262) .....9001-20-10
633.07 — Pressure Limiter Open (P1095) .....9001-20-5	10005.01 — Charge Circuit Malfunction—Bank 1 (P0611).....9001-20-10
636.02 — Camshaft Position Sensor (G-Sensor) Signal Missing (P0340) .....9001-20-5	10006.01 — Charge Circuit Malfunction—Bank 2 (P0612) .....9001-20-11
636.02 — Camshaft Position Sensor (G-Sensor) Signal Mismatch (P0341) .....9001-20-6	10007.02 — Abnormal CPU (P0606) .....9001-20-11
636.07 — Camshaft Position Sensor (G-Sensor) out of Phase (P1345) .....9001-20-6	10008.02 — A/D Conversion Malfunction (P1630).....9001-20-11
639.02 — CAN Communication Error (U2104) .....9001-20-6	10009.02 — 5 Volt Power Supply #3 Malfunction (P1633).....9001-20-11
639.03 — CAN Timeout (U2106) .....9001-20-6	10010.02 — 5 Volt Power Supply #4 Malfunction (P1634).....9001-20-11
651.03 — Open Circuit in Injection Nozzle #1 (P0201) .....9001-20-6	10011.02 — 5 Volt Power Supply #5 Malfunction (P1635).....9001-20-12
652.03 — Open Circuit in Injection Nozzle #2 (P0202) .....9001-20-7	10013.02 — EEPROM Malfunction (P0603) .....9001-20-12
653.03 — Open Circuit in Injection Nozzle #3 (P0203) .....9001-20-7	
654.03 — Open Circuit in Injection Nozzle #4 (P0204) .....9001-20-7	
723.02 — Crankshaft Position Sensor Signal Missing (P0335) .....9001-20-7	
723.02 — Crankshaft Sensor Mismatch (P0336) .....9001-20-7	
987.03 — Check Engine Lamp Malfunction (P0650).....9001-20-8	
1077.02 — CPU Monitoring IC Malfunction (P0606).....9001-20-8	
1079.02 — 5 Volt Power Supply #1 Malfunction (P1631).....9001-20-8	
	<b>Group 30—Information Controller (ICF) Diagnostic Trouble Codes</b>
	Information Controller (ICF) Diagnostic Trouble Codes ..... 9001-30-1
	14000.02 — Abnormal CAN Communication .....9001-30-1
	Controller Area Network (CAN) Diagnostics .....9001-30-1
	14001.02 — ICF: Flash Memory: Read / Write Error.....9001-30-11
	Controller Hardware Diagnostics .....9001-30-11
	14002.02 — ICF: External RAM: Read / Write Error.....9001-30-12
	Controller Hardware Diagnostics .....9001-30-12

Continued on next page

	Page
14003.02 — ICF: EEPROM: Sum Check Error.....	9001-30-13
Controller Hardware Diagnostics.....	9001-30-13
14006.02 — ICF: Satellite Communication Terminal: Communication Error .....	9001-30-14
14008.02 — ICF: Abnormal Internal RAM .....	9001-30-14
Controller Hardware Diagnostics.....	9001-30-14
14100.02 — Satellite Communication Terminal: Abnormal EEPROM.....	9001-30-14
14101.02 — Satellite Communication Terminal: Abnormal IB / OB Queue .....	9001-30-14
14102.02 — Satellite Communication Terminal: Abnormal Local Loop Back .....	9001-30-15
14103.02 — Satellite Communication Terminal: The Satellite is not found .....	9001-30-15
14104.02 — Satellite Communication Terminal: Fail 1 of Remote Loop Back .....	9001-30-15
14105.02 — Satellite Communication Terminal: Tail 2 of Remote Loop Back .....	9001-30-15
14106.02 — Satellite Communication Terminal: Sending and Receiving Data are Mismatched .....	9001-30-15
 <b>Group 40—Air Conditioner Controller (ACF) Diagnostic Trouble Codes</b>	
Air Conditioner Controller (ACF) Diagnostic Trouble Codes .....	9001-40-1
21 — Mix Door Open Circuit.....	9001-40-1
Harness Diagnostics.....	9001-40-1
-21 — Mix Door Short Circuit.....	9001-40-1
Harness Diagnostics.....	9001-40-1
22 — Mode Encoder Open Circuit.....	9001-40-2
Harness Diagnostics.....	9001-40-2
23 — In-Cab Ambient Temperature Sensor Open Circuit.....	9001-40-3
Harness Diagnostics.....	9001-40-3
-23 — In-Cab Ambient Temperature Sensor Short Circuit.....	9001-40-3
Harness Diagnostics.....	9001-40-3
24 — Outdoor Ambient Temperature Sensor Open Circuit.....	9001-40-3
Harness Diagnostics.....	9001-40-4
-24 — Outdoor Ambient Temperature Sensor Short Circuit.....	9001-40-4
Harness Diagnostics.....	9001-40-4
25 — Coolant Temperature Sensor Open Circuit .....	9001-40-4
Harness Diagnostics.....	9001-40-4

-25 — Coolant Temperature Sensor Short Circuit .....	9001-40-5
Harness Diagnostics.....	9001-40-5
26 — Solar Radiation Sensor Open Circuit .....	9001-40-5
Harness Diagnostics.....	9001-40-5
-26 — Solar Radiation Sensor Short Circuit .....	9001-40-6
Harness Diagnostics.....	9001-40-6

**Group 50—Monitor Controller (MON)  
Diagnostic Trouble Codes**

Monitor Controller (MON) Diagnostic Trouble Codes .....	9001-50-1
13303.02 — Abnormal Thermister Temperature .....	9001-50-1
Monitor Temperature Diagnostics.....	9001-50-1
13304.02 — Abnormal REG Input H Level.....	9001-50-1
Alternator Output Diagnostics.....	9001-50-1
13306.02 — Abnormal EEPROM.....	9001-50-2
Information Controller Diagnostics.....	9001-50-2
13308.02 — Abnormal CAN Communication.....	9001-50-2
Controller Area Network Diagnostics.....	9001-50-3
13310.02 — Shorted Circuit in Coolant Temperature Sensor.....	9001-50-3
Coolant Temperature Sensor Diagnostics.....	9001-50-3
13311.03 — Fuel Level Sensor Short Circuit.....	9001-50-4
Fuel Level Sensor Diagnostics.....	9001-50-4
13311.04 — Fuel Level Sensor Open Circuit.....	9001-50-5
Fuel Level Sensor Diagnostics.....	9001-50-5
20101.2 — Engine Warning Alarm.....	9001-50-6
20105.2 — Hydraulic Oil Filter Restriction Alarm.....	9001-50-6
Hydraulic Oil Filter Restriction Alarm Diagnostic Procedure.....	9001-50-6
20106.2 — Air Cleaner Restriction Alarm.....	9001-50-7
Air Cleaner Restriction Alarm Diagnostics.....	9001-50-7



# Main Controller (MCF) Diagnostic Trouble Codes

## Main Controller (MCF) Diagnostic Trouble Codes

For additional information on the main controller circuit. See Main Controller (MCF) Circuit Theory of Operation. (Group 9015-15.)

Main controller diagnostic trouble codes (DTCs) can be displayed on the monitor, connection with Service Advisor, or by connection with WinDr.

- See Reading Diagnostic Trouble Codes With Monitor Display (Group 9015-20.)
- See Reading Diagnostic Trouble Codes With SERVICE ADVISOR Diagnostic Application (Group 9015-20.)

TP97644,00005DE -19-09JUL10-1/1

## 11000.02 — Abnormal EEPROM

TP97644,00005DF -19-24APR13-1/4

### Controller Hardware Diagnostics

TP97644,00005DF -19-24APR13-2/4

#### 1 Code Check

Clear and re-check diagnostic trouble codes.

Is DTC 11000.02-Abnormal EEPROM still present?

**YES:** Code is still present and machine does not operate. Replace main controller (MCF). See Main Controller (MCF) Remove and Install. (Group 9015-20.)

**YES:** Code is still present but machine is still operable. Go to Machine Function Check.

**NO:** Main controller (MCF) is OK.

TP97644,00005DF -19-24APR13-3/4

#### 2 Machine Function Check

Is operation of machine normal? See Operational Checkout. (Group 9005-05.)

**YES:** Machine may be operated but it is recommended that the main controller (MCF) be replaced.

**NO:** Main controller (MCF) malfunction. Replace main controller (MCF). See Main Controller (MCF) Remove and Install. (Group 9015-20.)

TP97644,00005DF -19-24APR13-4/4

## 11001.02 — Abnormal RAM

TP97644,00005E0 -19-24APR13-1/4

### Controller Hardware Diagnostics

Continued on next page

TP97644,00005E0 -19-24APR13-2/4

## Main Controller (MCF) Diagnostic Trouble Codes

### 1 Code Check

Clear and re-check diagnostic trouble codes.

Is DTC 11001.02-Abnormal RAM still present?

**YES:** Code is still present and machine does not operate. Replace main controller (MCF). See [Main Controller \(MCF\) Remove and Install](#). (Group 9015-20.)

**YES:** Code is still present but machine is still operable. [Go to Machine Function Check](#).

**NO:** Main controller (MCF) is OK.

TP97644,00005E0 -19-24APR13-3/4

### 2 Machine Function Check

Is operation of machine normal? See [Operational Checkout](#). (Group 9005-05.)

**YES:** Machine may be operated but it is recommended that the main controller (MCF) be replaced.

**NO:** Main controller (MCF) malfunction. Replace main controller (MCF). See [Main Controller \(MCF\) Remove and Install](#). (Group 9015-20.)

TP97644,00005E0 -19-24APR13-4/4

## 11002.02 — Abnormal A/D Conversion

TP97644,00005E1 -19-24APR13-1/4

### Controller Hardware Diagnostics

TP97644,00005E1 -19-24APR13-2/4

### 1 Code Check

Clear and re-check diagnostic trouble codes.

Is DTC 11002.02-Abnormal A/D Conversion still present?

**YES:** Code is still present and machine does not operate. Replace main controller (MCF). See [Main Controller \(MCF\) Remove and Install](#). (Group 9015-20.)

**YES:** Code is still present but machine is still operable. [Go to Machine Function Check](#).

**NO:** Main controller (MCF) is OK.

Continued on next page

TP97644,00005E1 -19-24APR13-3/4

## Main Controller (MCF) Diagnostic Trouble Codes

### 2 Machine Function Check

Is operation of machine normal? [See Operational Checkout](#). (Group 9005-05.)

**YES:** Machine may be operated but it is recommended that the main controller (MCF) be replaced.

**NO:** Main controller (MCF) malfunction. Replace main controller (MCF). [See Main Controller \(MCF\) Remove and Install](#). (Group 9015-20.)

TP97644,00005E1 -19-24APR13-4/4

### 11003.03 — Abnormal Sensor Voltage

*Engine speed dial (R15) may not function correctly when this code is present.*

*Individual sensor or component diagnostic trouble code (DTC) may also be present within this code.*

TP97644,00005E2 -19-24JUL14-1/5

### Abnormal Sensor Voltage Diagnostic Procedure

TP97644,00005E2 -19-24JUL14-2/5

### 1 Voltage Check

Turn key switch to OFF position.

Disconnect all 5-volt sensors. [See Main Controller \(MCF\) Circuit Theory of Operation](#). (Group 9015-15.)

Turn key switch to ON position.

Monitor engine speed dial (R15) voltage while moving the engine speed dial from low idle to high idle. [See Monitor Data Items](#). (Group 9015-20.)

Does voltage increase steadily as engine speed dial is moved to high idle?

**YES:** Go to Sensor Check.

**NO:** [Go to Machine Harness Check](#).

TP97644,00005E2 -19-24JUL14-3/5

### 2 Sensor Check

Perform the following:

- Turn key switch to OFF position.
- Connect one 5-volt sensor at a time.
- Turn key switch to ON position.
- Monitor engine speed dial (R15) voltage while moving engine speed dial from low idle to high idle. [See Monitor Data Items](#). (Group 9015-20.)

Does voltage increase steadily as engine speed dial is moved to high idle?

**YES:** Repeat these steps for each remaining sensor.

**NO:** Replace last sensor that was connected.

Continued on next page

TP97644,00005E2 -19-24JUL14-4/5

## Main Controller (MCF) Diagnostic Trouble Codes

### 3 Machine Harness Check

Turn key switch to OFF position.

Disconnect machine harness-to-main controller 16-pin connector (X31).

Disconnect all 5-volt sensors.

Check for continuity between pin 1 and ground and between pin 3 and ground for each sensor connector.

Is continuity indicated?

**YES:** Short to ground in machine harness between main controller and one of the 5-volt sensors. Repair or replace harness. See [Machine Harness \(W2\) Component Location](#). (Group 9015-10.)

**NO:** Main controller (MCF) malfunction. Replace main controller. See [Main Controller \(MCF\) Remove and Install](#). (Group 9015-20.)

TP97644,00005E2 -19-24JUL14-5/5

## 11004.02 — Abnormal CAN Communication

TP97644,00005E3 -19-10JAN08-1/30

### Controller Area Network (CAN) Diagnostics

TP97644,00005E3 -19-10JAN08-2/30

### 1 CAN Harness Check

Check harness connections to controllers and between harness.

Clear codes and re-check DTCs.

Is DTC 11004.02 still present?

**YES:** [Go to Continuity Check MCF and ICF](#).

**NO:** Main controller (MCF) and harness are OK.

TP97644,00005E3 -19-10JAN08-3/30

### 2 Continuity Check MCF and ICF

Check for continuity between main controller (MCF) pin C4 and information controller (ICF) pin C5.

Check for continuity between main controller (MCF) pin C15 and information controller (ICF) pin C11.

Is there continuity between the connectors?

*NOTE: Key Switch: Off*

**YES:** [Go to Continuity Check MCF and ECM](#).

**NO:** Open circuit in CAN between main controller (MCF) and information controller (ICF).

Repair or replace harness. See [Cab Harness \(W1\) Wiring Diagram](#) and See [Machine Harness \(W2\) Wiring Diagram](#). (Group 9015-10.)

Continued on next page

TP97644,00005E3 -19-10JAN08-4/30

Main Controller (MCF) Diagnostic Trouble Codes

**3** Continuity Check MCF and ECM

Check for continuity between main controller (MCF) pin C4 and engine control module (ECM) pin 18.

Check for continuity between main controller (MCF) pin C15 and engine control module (ECM) pin 37.

Is there continuity between the connectors?

*NOTE: Key Switch: Off*

**YES:** Go to Continuity Check MCF and Monitor Unit.

**NO:** Open circuit in CAN between main controller (MCF) and engine control module (ECM).

Repair or replace harness. See Machine Harness (W2) Wiring Diagram. (Group 9015-10.)

TP97644,00005E3 -19-10JAN08-5/30

**4** Continuity Check MCF and Monitor Unit

Check for continuity between main controller (MCF) pin C4 and monitor controller pin B7.

Check for continuity between main controller (MCF) pin C15 and monitor controller pin B6.

Is there continuity between the connectors?

*NOTE: Key Switch: Off*

**YES:** Go to MCF Short to Ground Check.

**NO:** Open circuit in CAN between main controller (MCF) and monitor controller.

Repair or replace harnesses. See Cab Harness (W1) Wiring Diagram, See Machine Harness (W2) Wiring Diagram and See Monitor Harness (W3) Wiring Diagram. (Group 9015-10.)

Continued on next page

TP97644,00005E3 -19-10JAN08-6/30

<https://johndeere.com>

## Main Controller (MCF) Diagnostic Trouble Codes

### 5 MCF Short to Ground Check

Disconnect all connectors to main controller (MCF), information controller (ICF), engine control module (ECM) and monitor controller.

Check for continuity between main controller (MCF) pin C4 and main controller (MCF) pins A2, A13, B8, and B18.

Check for continuity between main controller (MCF) pin C15 and main controller (MCF) pins A2, A13, B8, and B18.

Is there continuity between the CAN circuit and ground circuit?

*NOTE: Key Switch: Off*

**YES:** CAN circuit short to ground.

Repair or replace harness.

See Cab Harness (W1)

Wiring Diagram, See

Machine Harness (W2)

Wiring Diagram and See

Monitor Harness (W3)

Wiring Diagram. (Group

9015-10.)

**NO:** Go to ECM Short to Ground Check.

TP97644,00005E3 -19-10JAN08-7/30

### 6 ECM Short to Ground Check

Disconnect all connectors to main controller (MCF), information controller (ICF), engine control module (ECM), and monitor controller.

Check for continuity between engine control module (ECM) pin 18 and pins 1, 3, 4, 43, and 62.

Check for continuity between engine control module (ECM) pin 37 and pins 1, 3, 4, 43, and 62.

Is there continuity between CAN circuit and ground circuit?

**YES:** CAN circuit short to ground.

Repair or replace harness.

See Cab Harness (W1)

Wiring Diagram, See

Machine Harness (W2)

Wiring Diagram and See

Monitor Harness (W3)

Wiring Diagram. (Group

9015-10.)

**NO:** Go to ICF Short to Ground Check.

Continued on next page

TP97644,00005E3 -19-10JAN08-8/30