

**110 and 112
Lawn and
Garden Tractors
Serial No.
(100,001 - 250,000)**



JOHN DEERE


SERVICE MANUAL

110 and 112 Lawn and Garden Tractors
Serial No. (100,001 - 250,000)

SM2088 (01NOV69) English

**John Deere
Lawn & Grounds Care Division
SM2088 (01NOV69)**

LITHO IN U.S.A.
ENGLISH



Click on the image link below for the full version of the service manual



Service Manual

110 AND 112 LAWN AND GARDEN TRACTORS

(Serial No. 100,001-)

CONTENTS

SECTION 10 - GENERAL

- Group 5 - Tractor Identification
- Group 10 - Specifications
- Group 15 - Tune-Up and Adjustment
- Group 20 - Fuel and Lubricants

SECTION 20 - ENGINE

Kohler Engines

- Group 5 - General Information
- Group 10 - Cylinder Head, Valves and Breather
- Group 15 - Piston, Crankshaft, Main-Bearings and Flywheel
- Group 20 - Camshaft, Tappets and Governor

Tecumseh Engine

- Group 25 - General Information
- Group 30 - Cylinder Head, Valves and Breather
- Group 35 - Piston, Crankshaft, Main Bearings and Flywheel
- Group 40 - Camshaft, Tappets and Governor

SECTION 30 - FUEL SYSTEM

- Group 5 - General Information
- Group 10 - Carburetor
- Group 15 - Air Cleaner
- Group 20 - Sediment Bowl, Fuel Strainer and Gas Tank
- Group 25 - Fuel Pump (112 Kohler Only)

SECTION 40 - ELECTRICAL SYSTEM

- Group 5 - General Information
- Group 10 - Cranking System
- Group 15 - Ignition System (Magneto)
- Group 20 - Ignition System (Battery)
- Group 25 - Ignition System (Solid State)
- Group 30 - Charging System

SECTION 50 - POWER TRAIN

- Group 5 - General Information
- Group 10 - Clutch, Brake and Variable Speed Drive
- Group 15 - 4-Speed Transaxle


SECTION 60 - HYDRAULIC SYSTEM

- Group 5 - General Information
- Group 10 - Control Valve
- Group 15 - Pump
- Group 20 - Cylinder

SECTION 70 - MISCELLANEOUS

- Group 5 - Steering Linkage
- Group 10 - Front Wheels and Axles
- Group 15 - Lift Linkage

INTRODUCTION

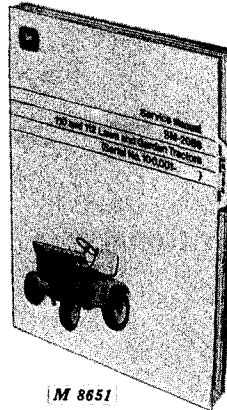

Service Manual

This service manual contains service and maintenance information for John Deere 110 and 112 Lawn and Garden Tractors (Serial No. 100,001-).

The manual is divided into sections. Each section pertains to a certain component or operational system of the tractor. The information is divided into groups within each section.

Emphasis is placed on diagnosing malfunctions, analysis and testing. Diagnosing malfunctions includes possible troubles, their causes and how to correct them. Under specific components these troubles are analyzed to help you understand what is causing the problem. In this way, you can eliminate the cause

rather than just replace parts and have the same problem keep recurring.

Specifications and special tools are found at the end of the Groups for easy reference.

This manual can be kept in its own cover, or it can be removed and filed in your service manual rack or placed behind the service manual tab in your Lawn and Garden Parts and Service Binder.

Whenever new or revised pages are provided, insert them into your manual as soon as you receive them. Your service manual will always be up-to-date and be a valuable asset in your service department.

Section 10 GENERAL

Group 5 TRACTOR IDENTIFICATION

TABLE OF CONTENTS

	Page		Page
GROUP 5 - TRACTOR IDENTIFICATION		GROUP 15 - TUNE-UP AND ADJUSTMENT	
Serial Numbers	5-2	Preliminary Engine Testing	15-1
Vintage Information	5-2	Minor Tune-Up Guide	15-1
Serial Number Plates	5-3	Major Tune-Up Guide	15-2
Identification Codes	5-3		
GROUP 10 - SPECIFICATIONS		GROUP 20 - FUEL AND LUBRICANTS	
Engine Specifications	10-1	Fuel	20-1
Electrical System	10-1	Lubricants	20-1
Capacities	10-1	Capacities	20-1
Fuel and Lubricant	10-2	Type of Lubricant	20-2
Transmission and Axle	10-2	Service Intervals	20-2
Brakes, Clutch and Steering	10-2	Changing Crankcase Oil	20-3
Curb Weights	10-2	Changing Transaxle Oil	20-3
Tire Specifications and Tractor Dimensions	10-3	Grease Fitting Locations	20-4
Bolt Torque Chart	10-4	Repack PTO Clutch Bearing	20-4
Set Screw Seating Torque Chart	10-4		

SERIAL NUMBERS


Each lawn and garden tractor is assigned an individual serial number. Serial numbers are written in parentheses throughout this manual for the reasons shown below. All serial number references are tractor serial numbers and not engine specification numbers.

- (0000-) When a serial number appears before the dash, the design change was introduced beginning with that serial number and is still current.
- (-0000) When a serial number appears after the dash, the design change was effective up to and including that serial number and is no longer effective.
- (0000-0000) When a serial number appears both before and after the dash, the design change was effective with the first serial number, but is no longer effective after the second serial number.

VINTAGE INFORMATION

Year Manufactured	110 Tractor	112 Tractor Tecumseh	112 Tractor Kohler
	Tractor Serial No.	Tractor Serial No.	Tractor Serial No.
1968	(100,001-130,000)	(100,001-130,000)	
1969	(130,001-150,000)	(130,001-150,000)	(150,001-160,000)
1970	(160,001-185,000)	(160,001-180,000)	(160,001-225,000)
1971	(185,001-)	(185,001-)	(225,001-)

SERIAL NUMBER PLATE

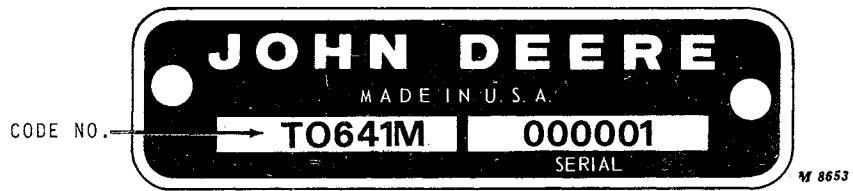

IDENTIFICATION CODES

The tractor identification code is indicated on tractor serial number plates.
 See the chart below for tractor identification codes.

Tractor	Manual Lift	Hydraulic Lift	Code No.
110	X		0641M
110		X	0647M
112 (Tecumseh)	X		0651M
112 (Tecumseh)		X	0657M
112 (Kohler)	X		0652M
112 (Kohler)		X	0653M

Group 10 SPECIFICATIONS

ENGINE SPECIFICATIONS

	110 Tractors	112 Tractors (Tecumseh)	112 Tractors (Kohler)
MODELS			
Manual Lift	110	112	112
Hydraulic Lift	110H	112H	112H
ENGINE			
Manufacturer	Kohler	Tecumseh	Kohler
Model	K 181 S	HH 100	K 241 AS
Cylinders	One	One	One
Cycle	4	4	4
Bore and Stroke	2.94 x 2.75 in.	3.31 x 2.75 in.	3.25 x 2.875 in.
Displacement	18.63 cu. in.	23.75 cu. in.	23.9 cu. in.
Speeds (Fast)	1800-3800 rpm	1800-3800 rpm	1800-3800 rpm
Speeds (Idle)	1200-1700 rpm	1200-1700 rpm	1200-1700 rpm
Horsepower (Engine Manufacturers' Rating)*	8 @ 3600 rpm (*)	10 @ 3600 rpm (*)	10 @ 3600 rpm (*)
Normal Compression	110-120 psi	110-120 psi	110-120 psi
Valve Clearance (intake) cold	0.007 in.	0.010 in.	0.010 in.
Valve Clearance (exhaust) cold	0.016 in.	0.020 in.	0.020 in.
FILTERS			
Air	Dry Filter	Dry Filter	Dry Filter
Gasoline	In-Line Strainer	In-Line Strainer	In-Line Strainer

ELECTRICAL SYSTEM

Battery	12 Volt	12 Volt	12 Volt
Ignition	Magneto	Solid State (* *)	Battery-Coil
Spark Plug Gap	0.025 in.	0.030 in.	0.020 in.
Breaker Point Gap	0.020 in.	Not required (* *)	0.020 in.
Trigger Air Gap	Not required	0.006-0.010 in.	Not required
Charging System	Alternator w/Rectifier	Alternator w/Rectifier	Alternator w/Rectifier
Starter	12 Volt Motor w/Gear Drive	12 Volt Motor w/Gear Drive	12 Volt Motor w/Gear Drive

* The horsepower ratings shown are established by the engine manufacturer in accordance with standard internal combustion engine institute procedure. They are corrected to 60°F. and 29.9 in. on a mercury barometer and are developed from laboratory test engines equipped with standard air cleaner and muffler.

* * Battery-coil ignition beginning with Serial No. 161,772. Breaker point gap 0.020 inch.

CAPACITIES

Cavities	110 Tractors	112 Tractors (Tecumseh)	112 Tractors (Kohler)
	Fuel Tank - U.S. Gallons	1.75	1.75
Crankcase - U.S. Pints	2.5	2.5 (* * *)	3.0
Transaxle - U.S. Pints	3.5	3.5	3.5
Hydraulic Lift System - U.S. Pints	2.5	2.5	2.0

* * * 3 U.S. pints beginning with Serial No. 161,772.

Litho in U.S.A.

FUEL AND LUBRICANTS

Fuel	Regular Gasoline
Crankcase Lubricant	AM30730 Summer (SAE 30) AM30710 Winter (SAE 5W-20)
Transmission Lubricant	AM30200M Lubricant
Hydraulic System	Automatic Transmission Fluid—Type A

TRANSMISSION AND AXLE

TRANSMISSION	
Type	Transaxle
Gear Selections	4 Forward—1 Reverse
TRAVEL SPEEDS (@ 3600 RPM Engine Speed)	
1st Gear	Variable, .4 to 1.0 mph
2nd Gear	Variable, 1.3 to 2.9 mph
3rd Gear	Variable, 2.4 to 5.0 mph
4th Gear	Variable, 3.4 to 7.4 mph
Reverse	Variable, 1.8 to 3.3 mph

BRAKES, CLUTCH AND STEERING

BRAKES	
Type	Drum and shoe, Pedal Operated
Parking	Hand Lock to Foot Brake
CLUTCH	V-Belt System
STEERING	Enclosed Gear
WHEEL BEARINGS	
Front	Tapered Roller
Rear	Sealed Ball

CURB WEIGHTS

	110 Tractor	112 Tractor (Tecumseh)	112 Tractor (Kohler)
Manual Lift—High Flotation Tires (GT-3)	613 lbs.	624 lbs.	640 lbs.
Hydraulic Lift—High Flotation Tires (GT-3)	625 lbs.	636 lbs.	660 lbs.

NOTE: See specific sections for detailed specifications

TIRE SPECIFICATIONS AND TRACTOR DIMENSIONS




	110 Tractor Only	110 and 112 Tractors		
	All Purpose Tires (GT-1)	High-Flotation Tires (GT-3)	Traction Tires (GT-4)	High-Flotation Tires (GT-5)
WHEEL TREAD				
Front	29 in.	30 in.	29 in.	30 in.
Rear	27 or 33 in.	27 or 33 in.	27 or 33 in.	28-1/2 or 31 in.
TIRE SIZES				
Front	4.80/4.00-8, 2-ply	16x6.50-8, 2-ply	4.80/4.00-8, 4-ply	16x6.50-8, 2-ply
Rear	6-12, 2-ply	23x8.50-12, 2-ply	23x8.50-12, 2-ply	23x10.50-12, 2-ply
TIRE INFLATION*				
Front	12 to 30 psi	6 to 16 psi	12 to 40 psi	6 to 16 psi
Rear	6 to 12 psi	5 to 10 psi	5 to 10 psi	5 to 10 psi
DIMENSIONS				
Wheel Base	46 in.	46 in.	46 in.	46 in.
Over-all Length	66-3/4 in.	66-3/4 in.	66-3/4 in.	66-3/4 in.
Over-all Height	41 in.	41 in.	41 in.	41 in.
Over-all Width				
(min)	34-1/2 in.	37 in.	35 in.	39 in.
(max)	39 in.	41-1/2 in.	41-1/2 in.	41-1/2 in.
Turns Outside	36 in. radius	34 in. radius	34 in. radius	33 in. radius

* Inflation will vary with attachment used.

NOTE: GT-6 Tire Specifications are the same as GT-3 Front and GT-4 Rear Specifications.

GT-7 Tire Specifications are the same as GT-4 Front and GT-5 Rear Specifications

BOLT TORQUE CHART

Grade of Bolt		SAE-2	SAE-5	SAE-8	Socket or Wrench Size	
Min. Tensile Strength		64,000 PSI	105,000 PSI	150,000 PSI		
Grade Marking on Bolt						
U.S. Standard		TORQUE IN FOOT POUNDS			U.S. Regular	
Bolt Dia.	U.S. Dec. Equiv.				Bolt Head	Nut
1/4	.250	6	10	14	7/16	7/16
5/16	.3125	13	20	30	1/2	1/2
3/8	.375	23	35	50	9/16	9/16
7/16	.4375	35	55	80	5/8	11/16
1/2	.500	55	85	120	3/4	3/4
9/16	.5625	75	130	175	13/16	7/8
5/8	.625	105	170	240	15/16	15/16
3/4	.750	185	300	425	1-1/8	1-1/8
7/8	.875	* 160	445	685	1-5/16	1-5/16
1	1.000	250	670	1030	1-1/2	1-1/2

Multiply Readings by 12 for inch pound values.

* "B" Grade bolts larger than 3/4-inch are sometimes formed hot rather than cold which accounts for the lower recommended torque.

NOTE: Allow a tolerance of plus or minus 10% on all torques given in this chart.

SET SCREW SEATING TORQUE CHART

Screw Size	Cup Point	Square Head
Torque in Inch Pounds		
#5	9	--
#6	9	--
#8	20	--
#10	33	--
1/4	87	212
5/16	165	420
3/8	290	830
7/16	430	--
1/2	620	2100
9/16	620	--
5/8	1225	4250
3/4	2125	7700

Divide Readings by 12 for foot pound values
 NOTE: Allow a tolerance of plus or minus 10% on all torques given in this chart.

Group 15

TUNE-UP AND ADJUSTMENT

PRELIMINARY ENGINE TESTING

Operation	Specification	Reference
Cylinder compression	110-120 psi (1000 rpm)	Section 20, Group 5 or 25
Crankcase vacuum	5-10 inches of water column	Section 20, Group 5 or 25

MINOR TUNE-UP GUIDE

Operation	Specification	Reference
Change oil	Summer above 32° F.— SAE 30 (AM 30730) Winter below 32° F.— SAE 5W-20 (AM 30710)	Section 10, Group 20
Clean and regap spark plug	Clean electrodes and insulator. Replace gasket Set spark gap at 0.025 in. 110 tractor; 0.030 in. 112 tractor w/Tecumseh engine; 0.020 in. 112 tractor w/Kohler engine	Section 40, Group 15 or 20
Remove air cleaner, inspect and replace if dirty or clogged.	Air cleaner must be clean. (No air flow specifications avail- able.)	Section 30, Group 15
Adjust carburetor	High speed mixture needle Idle mixture needle	Section 30, Group 10
Adjust governor speed	Speed (fast)— 3800 rpm no load; Speed (idle)— 1200-1700 rpm	Section 20, Group 20 or 40
Check and clean fuel tank and fuel shut off strainer.	Regular gasoline only	Section 30, Group 20
Battery hydrometer test	1.260-1.280 sp. gr. 100% charged at 80° F.	Section 40, Group 10

MAJOR TUNE-UP GUIDE

IMPORTANT: Major tune-up should include all items listed for "Minor Tune-Up" on page 15-1 in addition to the following:

Operation	Specification	Reference
Recondition carburetor	Install carburetor kit	Section 30, Group 10
Inspect and clean breather assembly	Replace parts as necessary Install new gaskets. Check crankcase vacuum after assembly	Section 20, Group 10 Or 30
Remove shrouding, clean engine and cylinder head fins	Section 20, Group 10 or 30
Test condenser	Capacity .18-.23 Microfarads Delco No. 1965489 Capacity .13-.16 Microfarads Phelon No. FG-7533	Section 40, Group 15 or 20
Test coil	K181 Kohler Engine Operating 3 amp Max. Ohms 3800 to 6000 K241AS Kohler Engine Operating .55 amp Max. Ohms 5500 to 9500	Section 40, Group 15 or 20
Replace breaker points	Point gap 0.020 in.	Section 40, Group 15 or 20
Retime ignition	"SP" or "S" mark on fly-wheel at 1200-1800 rpm	Section 40, Group 15 or 20
	112 Tractor with Solid State Ignition	
Test charger coil	400 to 450 Ohms	Section 40, Group 25
Adjusting Ignition Air Gap	.006 to .010 in.	Section 40, Group 25

Group 20 FUEL AND LUBRICANTS

FUEL

Use regular grade gasoline of a recognized brand. Avoid using stale or long-storage gasoline. Stale gasoline does not vaporize properly, thus causing hard starts.

Use of premium grade gasoline (ethyl) is not recommended in small tractor engines. The engine compression ratio is not high enough to require premium grade, which can cause a buildup of lead deposits. These deposits cause a loss of power and shorten engine life.

Do not mix oil with gasoline. Do not use white gas.

LUBRICANTS

Illustrated lubrication instructions have been included in the operator's manual furnished with your customer's machine. Remind your customer to follow these recommendations.

Oil used in the engine crankcase should have an American Petroleum Institute (API)/SAE classification of Service MS. Never fill engine crankcase above full (F) mark on dipstick.

The charts below and on next page indicate the type of lubricant, capacities and service intervals recommended for 110 and 112 tractors.

CAPACITIES

Cavities	110 Tractors	112 Tractors (Tecumseh)	112 Tractors (Kohler)
Fuel Tank - U.S. Gallons	1.75	1.75	1.75
Crankcase - U.S. Pints	* 2.5	* 2.5 (†)	* 3.0
Transaxle - U.S. Pints	3.5	3.5	3.5
Hydraulic Lift System - U.S. Pints	2.5	2.5	2.0

* Initial fill for new engine or after engine has been disassembled for service. Thereafter 2 pints only (such as periodic oil changes).

†3 U.S. pints beginning with Serial No. 161,772.

**TYPE OF LUBRICANT
(110 and 112 Tractors)**

Crankcase - (API)/SAE Service MS Detergent type	
Summer - Above 32° F	SAE 30 - John Deere AM30730
Winter - Below 32° F	SAE 5W-20 John Deere AM30710
Transaxle	John Deere AM30200M (SAE 90)
Hydraulic Lift	Automatic Transmission Fluid Type A
Tractor Grease Fittings and Front Wheel	
Bearings	SAE (Seasonal grade) Multipurpose-Type Grease

**SERVICE INTERVALS
(110 and 112 Tractors)**

Crankcase (Oil change)	
Break-in	First 2 hours
Regular	Every 25 hours
Dusty conditions	Every 8 hours
Transaxle (Oil change)	200 hours or 2 years
Hydraulic Lift System	200 hours or 2 years
Tractor Grease Fittings (See page 20-4 for locations)	
	Spring and fall season
Front Wheel Bearings (repack)	Each time wheel is removed

CHANGING CRANKCASE OIL

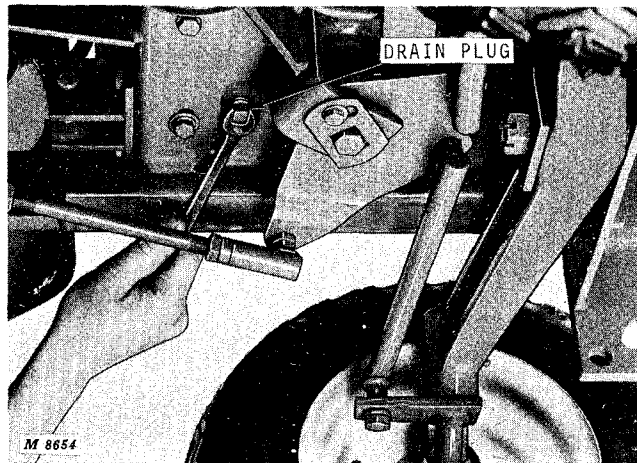


Fig. 1-Draining Oil (K181-HH100)

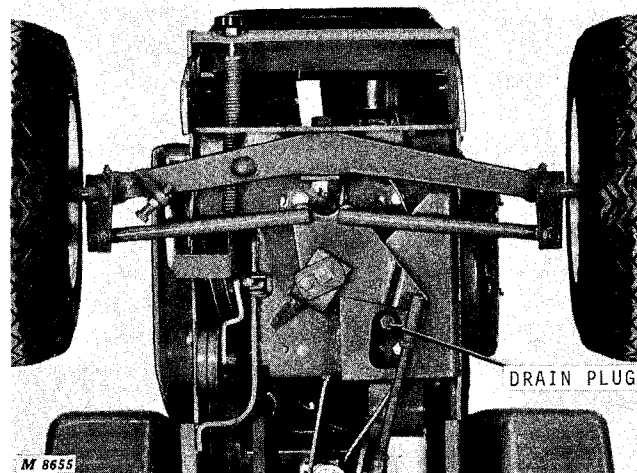


Fig. 2-Draining Oil (K241)

Drain crankcase when oil is hot and all dirt and foreign material is in suspension.

Remove drain plug and allow oil to drain into a container.

Install plug and fill crankcase with oil of the proper viscosity (page 20-2) to "F" mark on dipstick. Crankcase capacity is approximately 2-1/2 pints for 110 Tractors and 112 Tractors with Tecumseh engines. 112 Tractors with Kohler engines and 112 Tractors with Tecumseh engines, beginning with Serial No. 161,772, have a capacity of approximately 3 pints.

IMPORTANT: Check dipstick reading before pouring in the last 1/2 pint. Fill only to "F" mark. Overfilling can cause engine overheating resulting in permanent damage to the engine.

NOTE: Change oil every eight hours when working in extremely dusty conditions.

Litho in U.S.A.

CHANGING TRANSAXLE OIL

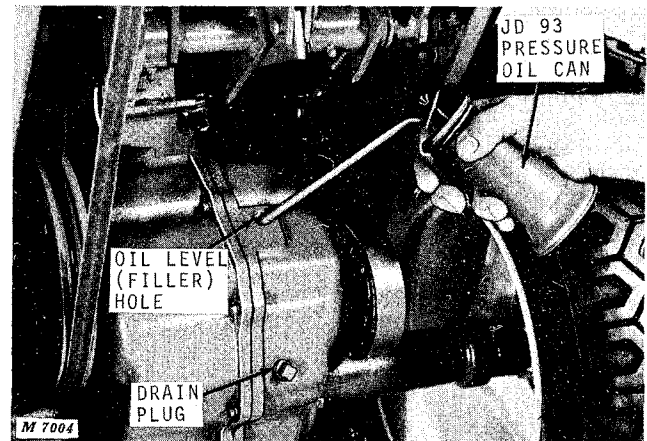


Fig. 3-Adding Oil to Transaxle

Remove oil level (filler) plug from front of transaxle.

When required, use a pressure oil can to add AM30200M Transmission Lubricant through filler hole until oil spills out. Be sure tractor is on a level surface when checking.

Use JD93 pressure oil can or equivalent to fill transaxle as shown above.

Change transmission oil every 200 hours.

NOTE: Refill or add transmission lubricant through fill tube at rear of deck if tractor is so equipped. Oil level (filler) hole must be open to assure correct lubricant level when filling.

GREASE FITTING LOCATION

Lubricate the grease fittings indicated below using a John Deere Pisto-Luber or hand grease gun containing SAE multipurpose-type grease. Wipe fittings clean before and after lubrication.

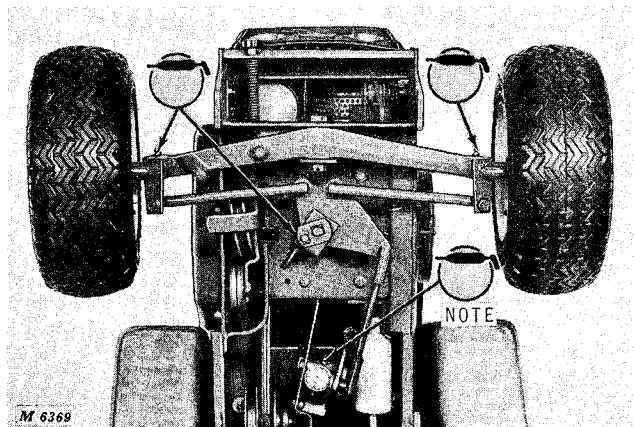


Fig. 4-Fittings on Front Axle, Steering Column and Bearing Cone

NOTE: Do not overlubricate steering column fitting. Only 3 or 4 strokes with hand grease gun or AM31300 Pisto-Luber are necessary. Do not use a high-pressure grease gun on this fitting. The Pisto-Luber is available from your John Deere dealer.

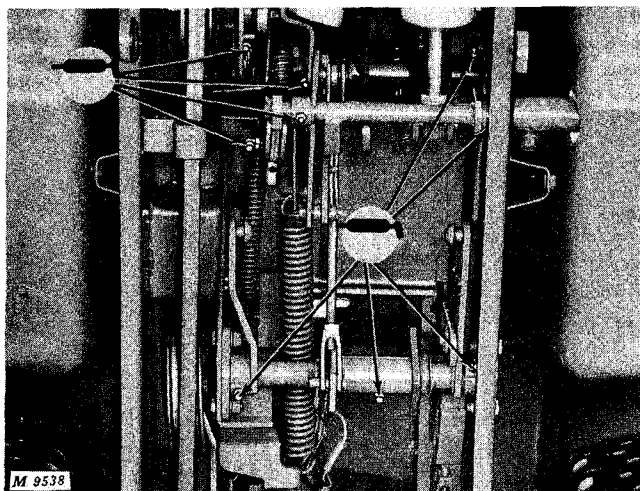


Fig. 5-Fittings on Variator Linkage, Lift Linkage and Rear Lift Shaft

REPACK POWER TAKE-OFF CLUTCH BEARING

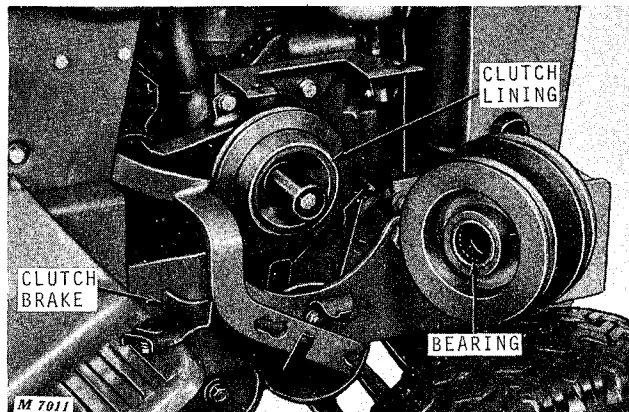


Fig. 6-Checking PTO Clutch

Disconnect the clutch arm and remove the clutch brake. Check PTO clutch to be certain that no dust or dirt has entered the bearing. Also check condition of clutch lining and clutch brake.

Remove old grease from bearing with solvent at the beginning of each spring and fall season or sooner if dirt is found in the bearing. Dry thoroughly and repack bearing with John Deere High Temperature Grease, AT17659T, available in one-pound cans. Connect the clutch arm and reinstall the clutch brake. Adjust the clutch brake so there is 1/16-inch clearance between the brake and clutch cup sheave when the clutch is engaged.

See Section 50, Group 20, for PTO clutch service information.

Section 20 ENGINE

Group 5 GENERAL INFORMATION

KOHLER ENGINES FOR 110 AND 112 TRACTORS

TABLE OF CONTENTS—KOHLER ENGINES

GROUP 5 - GENERAL INFORMATION - KOHLER ENGINES	Page
	Page
Description	5-4
Engine Analysis	5-7
Preliminary Engine Checks	5-7
Preliminary Engine Tests	5-7
Diagnosing Malfunctions	5-9
 GROUP 10 - CYLINDER HEAD, VALVES AND BREATHER - KOHLER ENGINES	
General Information	10-1
Valve Analysis	10-2
Repair	10-3
Removing Valves	10-4
Inspecting Cylinder Head	10-4
Inspecting Breather	10-5
Testing Valve Springs	10-5
Inspecting Valves	10-5
Reconditioning or Replacing Valves	10-6
Replacing Valve Guides	10-7
Replacing Exhaust Valve Insert	10-8
Installing Intake Valve Insert	10-8
Checking Valve Clearance	10-8
Installation	10-9
Installing Valve Springs, Retainers and Keepers	10-9
Assembling Breather	10-9
Installing Cylinder Head	10-10
Installing Carburetor	10-10
Specifications	10-11
Table of Clearances	10-11
Torque for Hardware	10-11
Tune-Up Data	10-11
Special Tools	10-12
 GROUP 15 - PISTON, CRANKSHAFT, MAIN BEARINGS AND FLYWHEEL - KOHLER ENGINES	
General Information	15-1
Repair	15-2
Removing Engine from Tractor	15-3
Disassembling Kohler K181S Engine	15-3
Disassembling Kohler K241AS Engine	15-3
Inspecting Balance Gear Stub Shaft	15-4
Inspecting Balance Gear and Bearing	15-4
Removing Piston Rings	15-4
Analyzing Piston Ring Wear	15-5
Inspecting Piston	15-6
Analyzing Piston Wear	15-8
Inspecting and Repairing Block	15-10
Deglazing Cylinder Bore	15-10
Boring Cylinder Block	15-10
Inspecting Crankshaft	15-11
Analyzing Connecting Rod and Cap Wear	15-11
Inspecting Main Bearings	15-12
Analyzing Bearing Wear	15-12
Inspecting Camshaft	15-13
Installation	15-13
Installing Balance Gears	15-13
Installing Crankshaft with Timing Tool (Kohler K241AS Engine)	15-14
Installing Crankshaft without Timing Tool (Kohler K241AS Engine)	15-15
Installing Crankshaft (Kohler K181S Engine)	15-16
Assembling Bearing, Bearing Plate and Oil Seals (Kohler K181S Engine)	15-16
Assembling Bearing, Bearing Plate and Oil Seals (Kohler K241AS Engine)	15-16
Installing Bearing, Bearing Plate and Oil Seals	15-17
Assembling Connecting Rod and Piston ..	15-17
Checking Piston Ring End Gap	15-18
Installing Rings and Piston	15-18
Attaching Rod to Crankshaft	15-19
Installing Oil Pan on Block	15-19
Installing Flywheel	15-19
Installing Shrouding	15-20
Installing Exterior Components	15-20
Specifications	15-21
Torques for Hardware	15-22
Tune-Up Data	15-22
Special Tools	15-22

TABLE OF CONTENTS—CONTINUED

	Page		Page
GROUP 20 - CAMSHAFT, TAPPETS AND GOVERNOR - KOHLER ENGINES		Installation	20-4
General Information	20-1	Installing Governor	20-4
Automatic Compression Release		Installing Camshaft	20-5
Camshaft	20-2	Connecting Governor Arm to Carburetor	20-6
Repair	20-3	Installing Governor Arm	20-6
Removing Camshaft and Tappets	20-3	Adjustment	20-7
Removing Governor	20-4	Governor Speed Adjustment	20-7
Inspecting Camshaft	20-4	Specifications	20-7
Inspecting Governor Gear	20-4	Table of Engine Clearances	20-7
		Special Tools	20-7

TABLE OF CONTENTS—TECUMSEH ENGINE (Serial No. 100,001-161,771)

	Page		Page
GROUP 25 - GENERAL INFORMATION - TECUMSEH ENGINE		Installing Cylinder Head	30-9
Description	25-1	Installing Carburetor	30-10
Engine Analysis	25-2	Installing Muffler	30-10
Preliminary Engine Checks	25-2	Checking Air Filter	30-10
Preliminary Engine Tests	25-2	Checking Spark Plug Gap	30-10
Diagnosing Malfunctions	25-3	Setting Ignition Module Air Gap	30-10
		Installing Hydraulic System	30-10
GROUP 30 - CYLINDER HEAD, VALVES AND BREATHER - TECUMSEH ENGINE		Specifications	30-11
General Information	30-1	Table of Engine Clearances	30-11
Valve Analysis	30-2	Torque for Hardware	30-11
Repair	30-3	Tune-Up Data	30-11
Removing Valves	30-4	Special Tools	30-12
Inspecting Cylinder Head	30-4		
Inspecting Breather	30-5	GROUP 35 - PISTON, CRANKSHAFT, MAIN BEARINGS AND FLYWHEEL - TECUMSEH ENGINE	
Testing Valve Springs	30-5	General Information	35-1
Inspecting Valves	30-5	Repair	35-2
Reconditioning or Replacing Valves	30-6	Removing Engine from Tractor	35-3
Reaming Valve Guides	30-7	Disassembling Engine	35-3
Removing and Installing Exhaust Valve Seat Insert	30-8	Removing Cylinder Ridge	35-3
Checking Valve Clearance	30-8	Pulling Flywheel	35-3
Installation	30-9	Removing Cylinder Cover	35-3
Installing Valve Springs, Retainers and Keeper Pins	30-9	Removing Crankshaft	35-4
Installing Breather	30-9	Removing Piston Rings	35-4
		Analyzing Piston Ring Wear	35-4
		Inspecting Piston	35-6
		Analyzing Piston Wear	35-8